


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR NISSAN XTERRA CARGO LINER

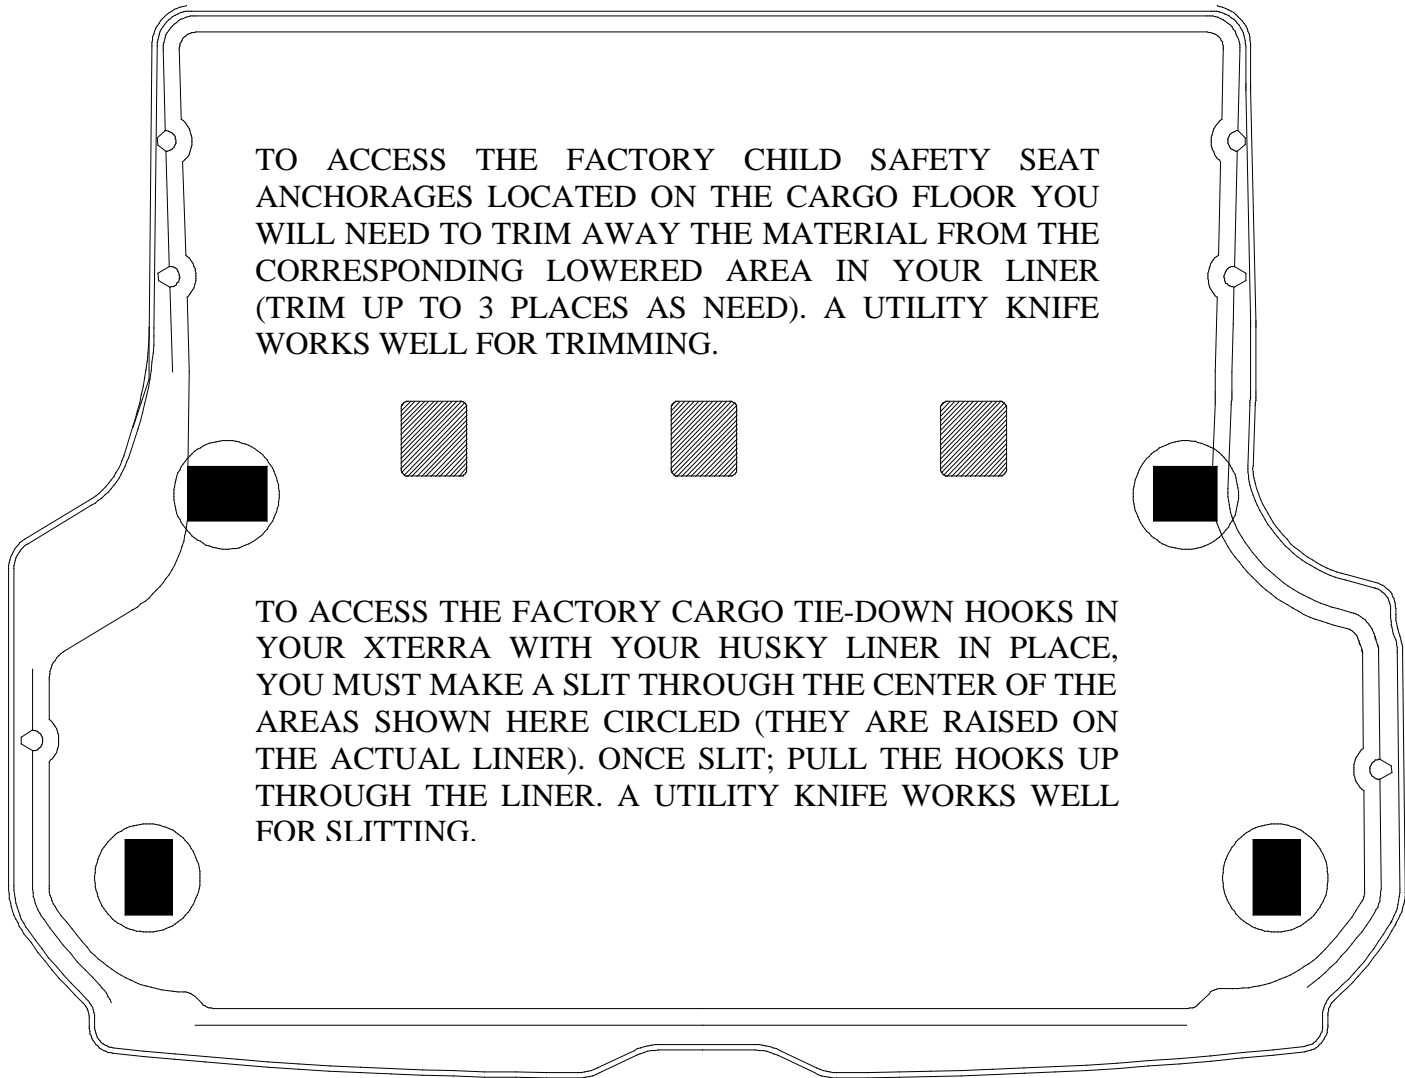

TO ACCESS THE FACTORY CHILD SAFETY SEAT ANCHORAGES LOCATED ON THE CARGO FLOOR YOU WILL NEED TO TRIM AWAY THE MATERIAL FROM THE CORRESPONDING LOWERED AREA IN YOUR LINER (TRIM UP TO 3 PLACES AS NEED). A UTILITY KNIFE WORKS WELL FOR TRIMMING.

The diagram shows a cargo liner with three shaded rectangular areas in the center, representing lowered sections for child safety seat anchorage. There are also four circular areas, two on the left and two on the right, representing raised sections for cargo tie-down hooks.

TO ACCESS THE FACTORY CARGO TIE-DOWN HOOKS IN YOUR XTERRA WITH YOUR HUSKY LINER IN PLACE, YOU MUST MAKE A SLIT THROUGH THE CENTER OF THE AREAS SHOWN HERE CIRCLED (THEY ARE RAISED ON THE ACTUAL LINER). ONCE SLIT; PULL THE HOOKS UP THROUGH THE LINER. A UTILITY KNIFE WORKS WELL FOR SLITTING.