

THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR BUICK TERRAZA/ CHEVROLET UPLANDER/PONTIAC MONTANA SV6/ SATURN RELAY SECOND SEAT FLOOR LINER

FRONT OF VEHICLE

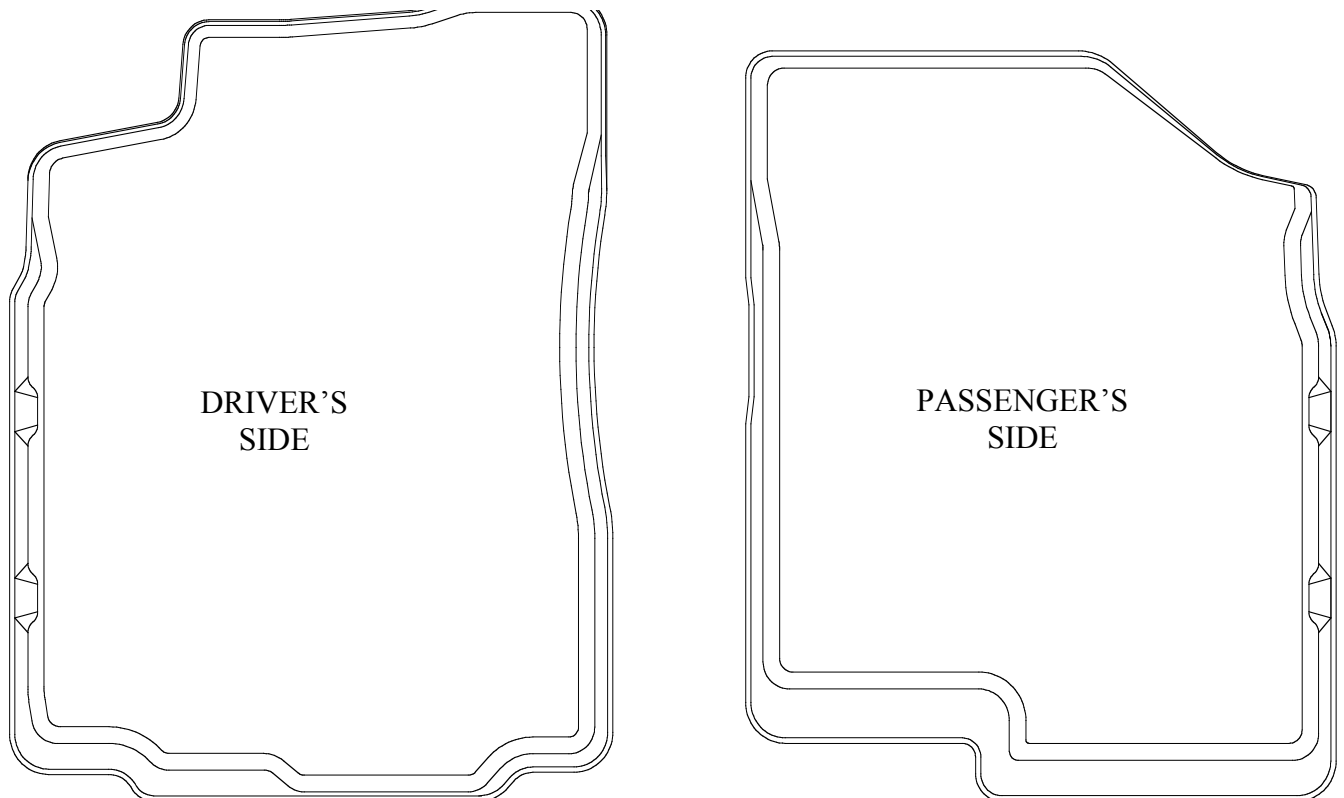

TO EASE INSTALLATION OF LINERS, POSITION FRONT SEATS IN THEIR MOST REARWARD POSITION BEFORE INSTALLING LINER. ONCE LINERS ARE IN PLACE, REPOSITION SEATS AS DESIRED.