

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FORD FREESTYLE/FORD 500/TAURUS/TAURUS X & MERCURY MONTEGO/SABLE FRONT SEAT FLOOR LINERS

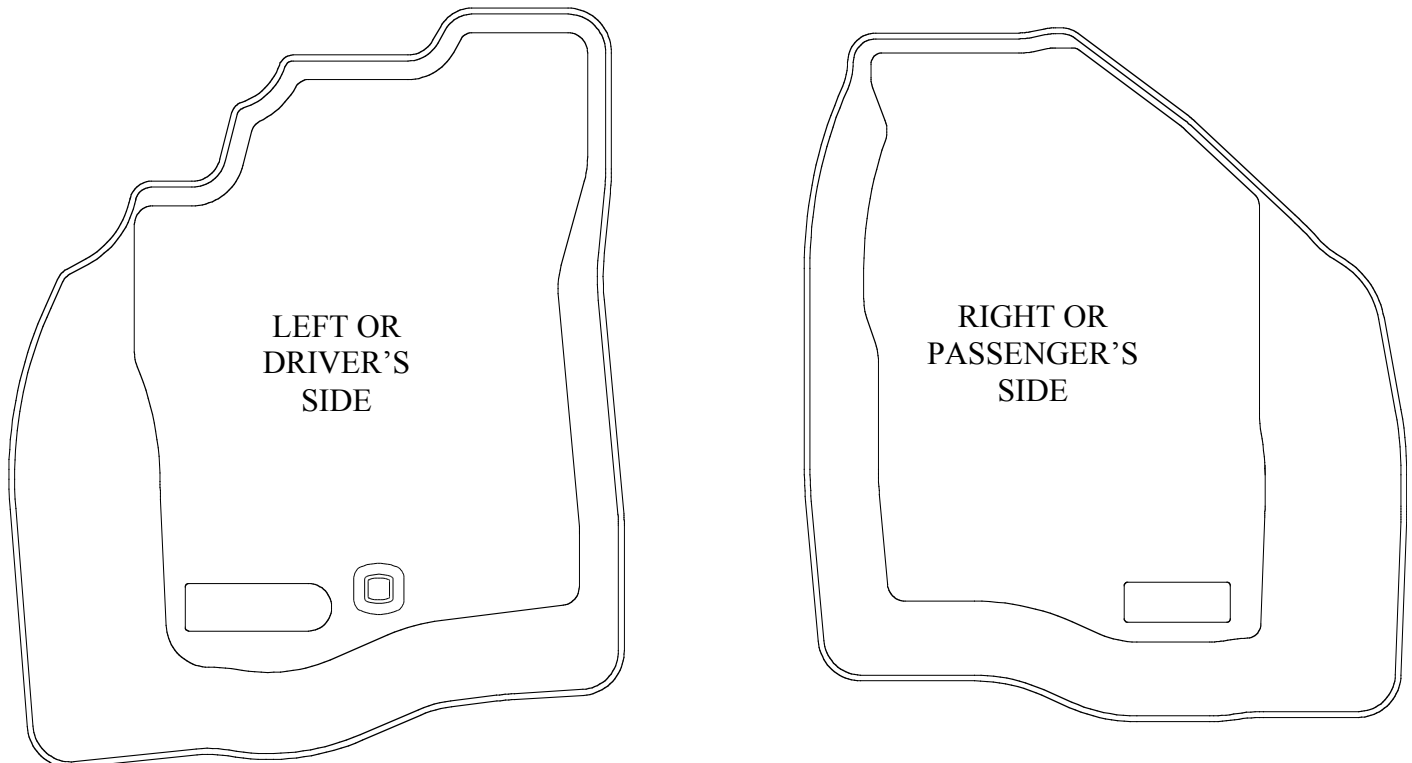

TO EASE INSTALLATION OF YOUR HUSKY FRONT FLOOR LINERS, MOVE FRONT SEATS TO THE FARTHEST BACK POSITION BEFORE INSTALLING. ONCE YOU HAVE YOUR LINERS INSTALLED, REPOSITION FRONT SEATS AS NEEDED.