

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FORD SUPERDUTY F250/F350/F-450 TRUCK

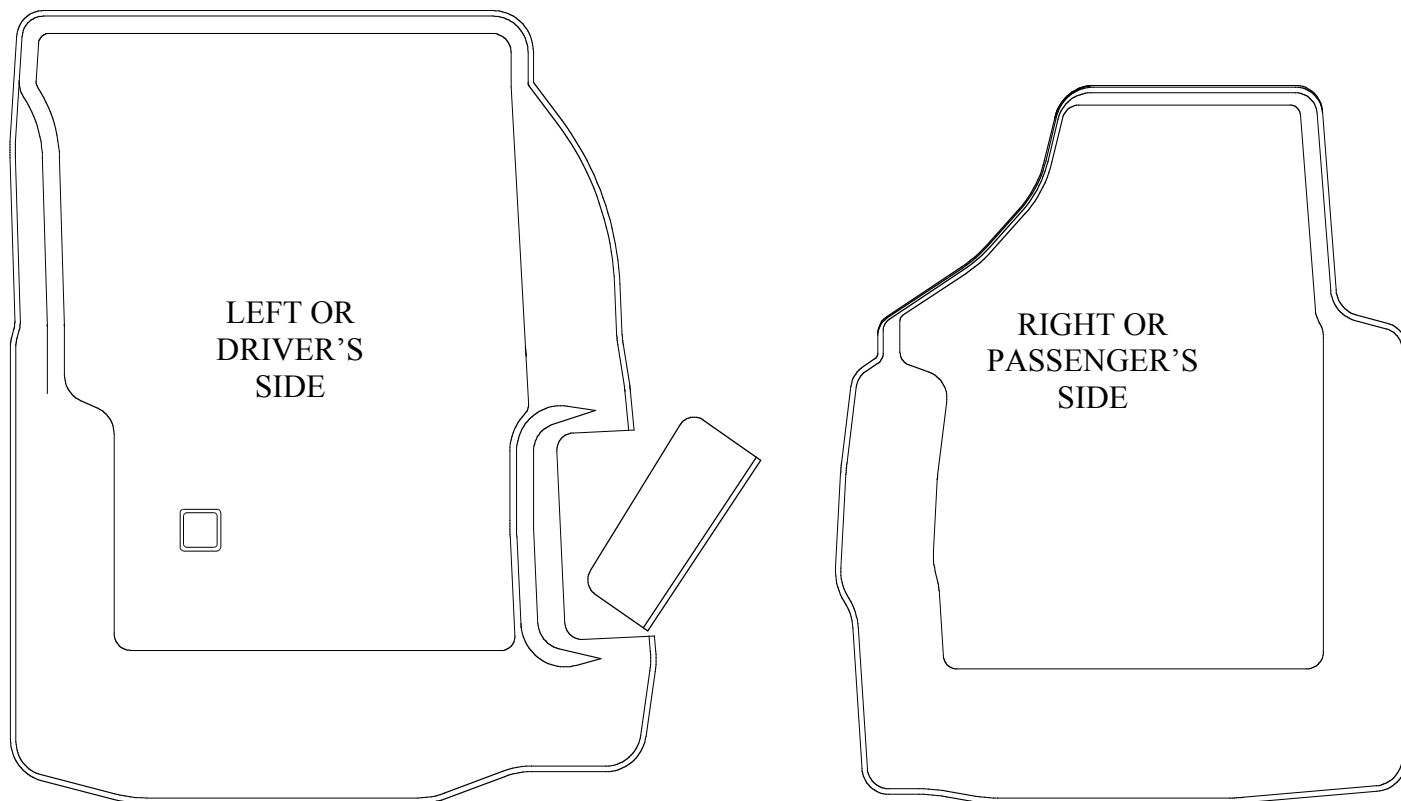

IF YOUR SUPER DUTY IS EQUIPPED WITH A MANUAL TRANSFER CASE SHIFTER, YOU WILL NEED TO TRIM YOUR LINER AS SHOWN ABOVE. TRIM AWAY THE MATERIAL FROM THE RAISED AREA ON YOUR LINER AS DEMONSTRATED ABOVE. A PHOTO OF THE TRIMMED LINER IS SHOWN ON THE BACK OF THIS PAGE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.



PART #3388 SHOWN TRIMMED FOR A MANUAL TRANSFER CASE SHIFTER. TO TRIM, SIMPLY REMOVE THE LOWERED SECTION ON THE LINER.