


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA LAND CRUISER FRONT FLOOR LINERS

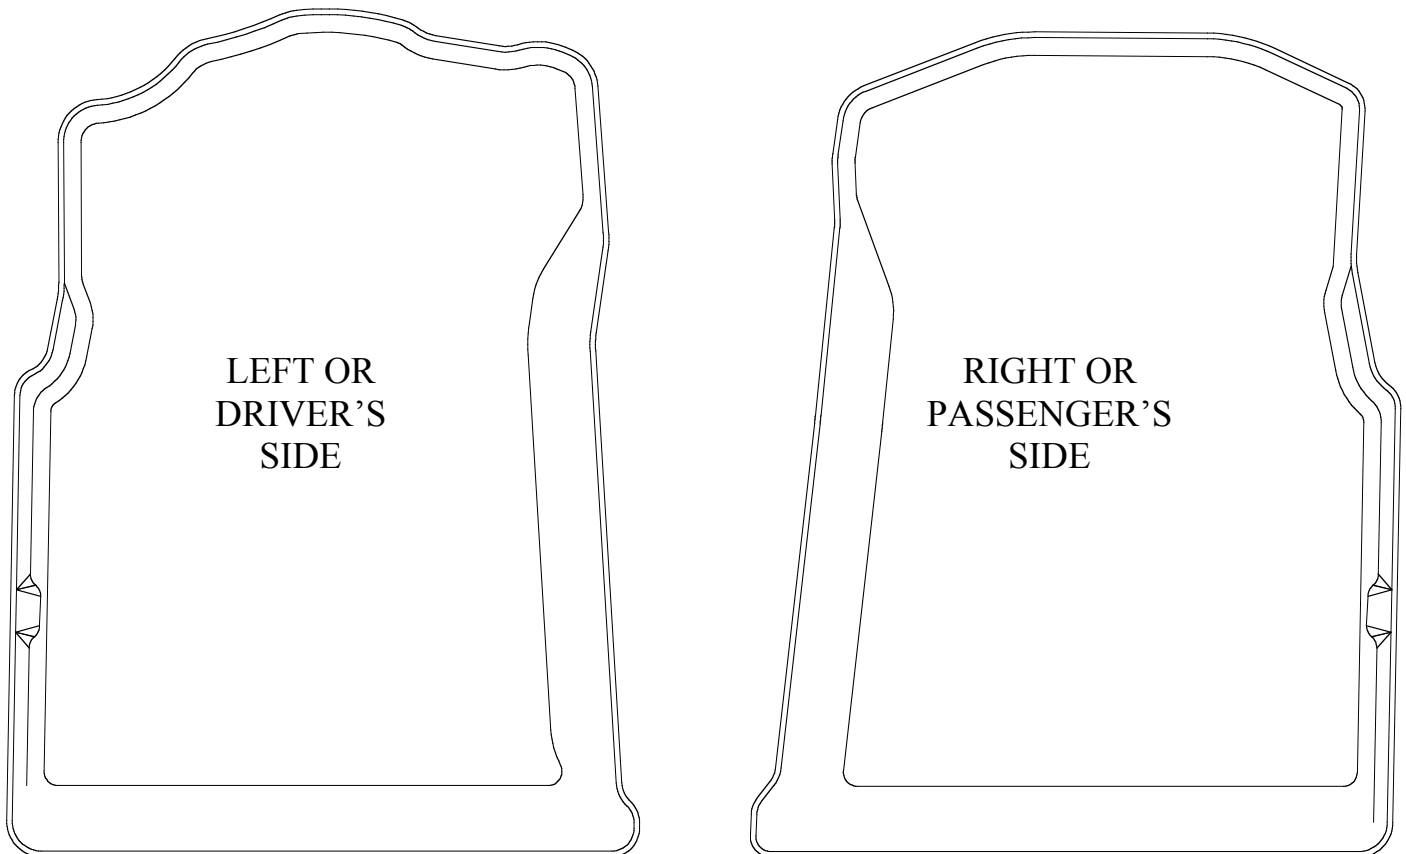

TO INSURE PROPER FIT OF YOUR DRIVER'S SIDE LINER, PLEASE REMOVE YOUR FACTORY CARPET HOOK. THIS CAN BE EASILY DONE BY PULLING THE L-SHAPED HOOK DIRECTLY TOWARD THE MOUNTING HOLE. THIS WILL ALLOW THE HOOK TO "POP" OUT. IT CAN BE STORED IN YOUR GLOVE BOX FOR REPLACEMENT AT A LATER DATE.