


**THANK YOU FOR SELECTING A HUSKY FLOOR LINER
FROM WINFIELD CONSUMER PRODUCTS
CARE AND USE INSTRUCTIONS**


Your new floor liners are custom molded to fit your Toyota Tundra and Sequoia. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

**INSTALLATION INSTRUCTIONS FOR YOUR
TOYOTA TUNDRA AND SEQUOIA FRONT SEAT FLOOR LINERS**

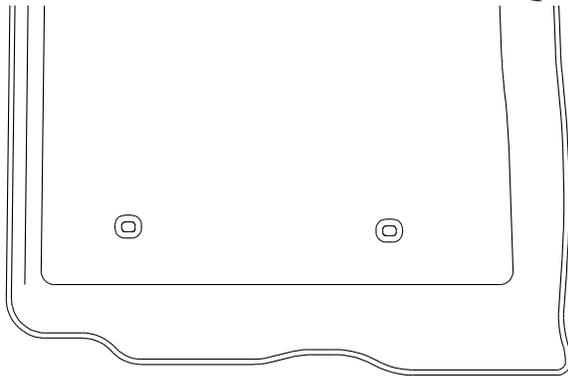

LEFT OR
DRIVER'S
SIDE

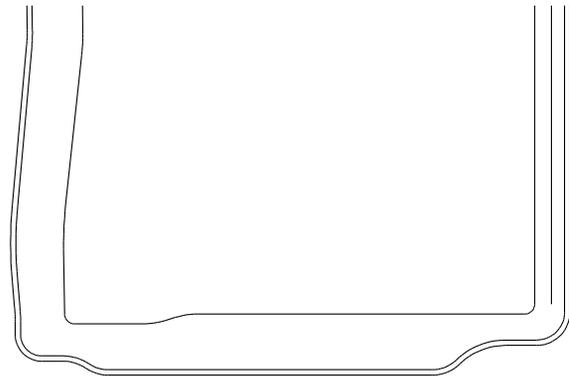

RIGHT OR
PASSENGER'S
SIDE

YOUR TOYOTA TUNDRA / SEQUOIA MAY HAVE A FACTORY MAT RETAINER INSTALLED WHICH COULD AFFECT THE FIT OF YOUR HUSKY LINER. PLEASE READ THE INSTALLATION NOTES FOR EACH TYPE OF FACTORY MAT BEFORE INSTALLING YOUR LINERS:

IF YOU HAVE THE FACTORY “CARPET HOOKS”—YOU WILL NEED TO REMOVE THESE HOOKS TO ALLOW PROPER FIT. THIS IS EASILY DONE BY PULLING THE L-SHAPED HOOK DIRECTLY TOWARD THE MOUNTING HOLE. THIS WILL ALLOW THE HOOK TO “POP” OUT OF THE RETAINING GROMMET. THE HOOKS CAN BE STORED IN YOUR GLOVE BOX FOR REPLACEMENT AT A LATER DATE.

IF YOU HAVE THE FACTORY TWIST-LOCK RETAINERS, YOUR LINER WILL NEST OVER THE TOP OF THE RETAINER BUT FIRST YOU MUST ORIENT THE TOP TWIST-LOCK PIECE SO IT IS ALIGNED WITH THE BASE (ARROWS ON TOP OF TWIST-LOCK RETAINER WILL BE POINTING HORIZONTALLY).