

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liners are custom molded to fit your FJ Cruiser with a manual transmission. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.**

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA FJ CRUISER FRONT FLOOR LINERS (WITH MANUAL TRANSMISSION)

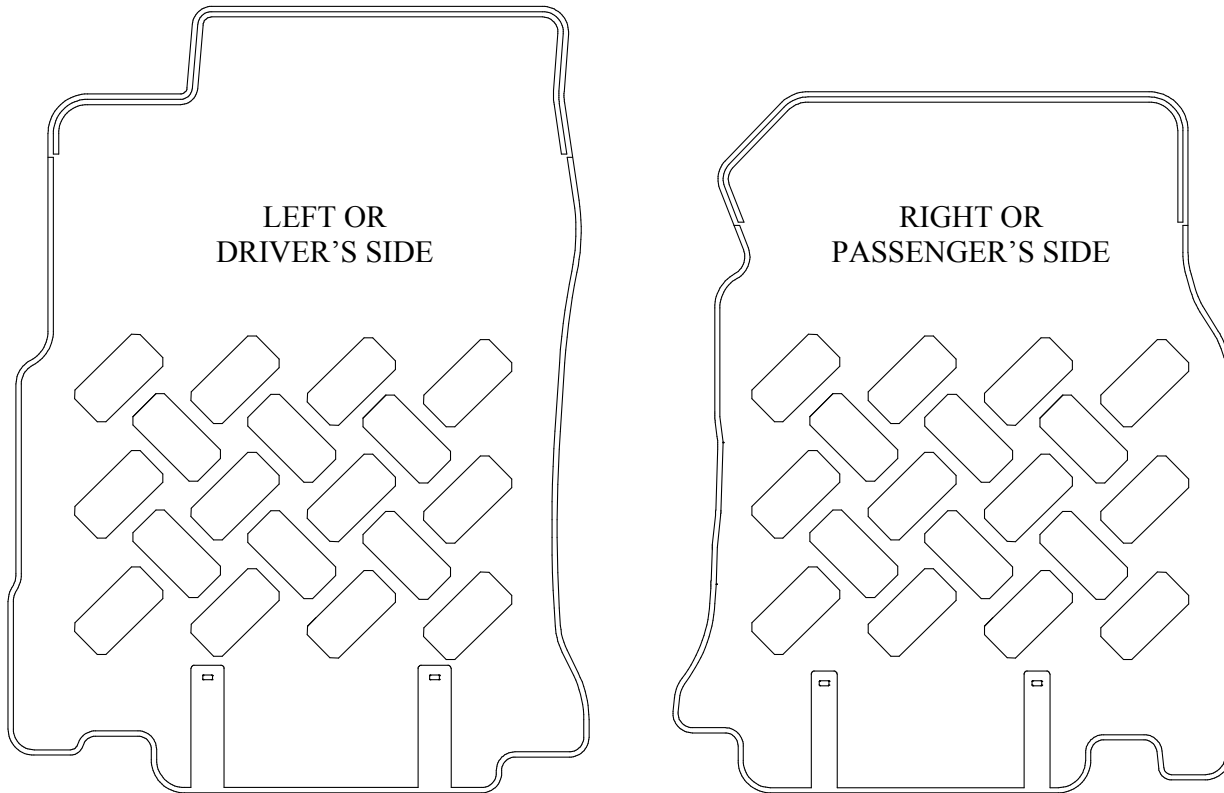

NOTE: YOUR TOYOTA FJ CRUISER COMES EQUIPPED WITHOUT FACTORY INSTALLED CARPETING. THE HUSKY LINERS ARE DESIGNED TO UTILIZE THE FACTORY MAT RETAINERS TO HELP SECURE THEM IN PLACE. SIMPLY PLACE YOUR LINER OVER YOUR FJ CRUISER SHOULD HAVE TWO FACTORY TWIST LOCK MAT HOOKS ON THE DRIVER'S AND PASSENGER'S SIDE FLOOR PANS (SEE PHOTO ON BACK). IF YOUR FJ CRUISER DOES NOT HAVE THESE HOOKS INSTALLED, CHECK IN THE GLOVE BOX AS THEY ARE OFTEN PLACED IN THE GLOVE BOX DURING SHIPPING. FOLLOW THE INSTALLATION INSTRUCTIONS PROVIDED WITH THE MAT HOOKS TO INSTALL THEM. IF YOU CANNOT FIND THE HOOKS IN YOU VEHICLE, CONSULT YOUR DEALERSHIP. DO NOT INSTALL THE LINERS WITHOUT UTILIZING THE FACTORY TWIST LOCK MAT HOOKS. FURTHER NOTE THAT THESE LINERS ARE DESIGNED FOR AUTOMATIC TRANSMISSION EQUIPPED FJ CRUISERS ONLY. IF YOU HAVE A MANUAL TRANSMISSION EQUIPPED FJ CRUISER, YOU NEED HUSKY LINER PART #3594.



HUSKY LINER PART #3593 SHOWN INSTALLED IN AN FJ CRUISER WITH AUTOMATIC TRANSMISSION. NOTE THAT LINERS MUST BE ATTACHED OVER FACTORY MAT HOOKS TO HELP SECURE LINERS IN POSITION.