


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your Nissan Murano. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR NISSAN MURANO FRONT FLOOR LINERS

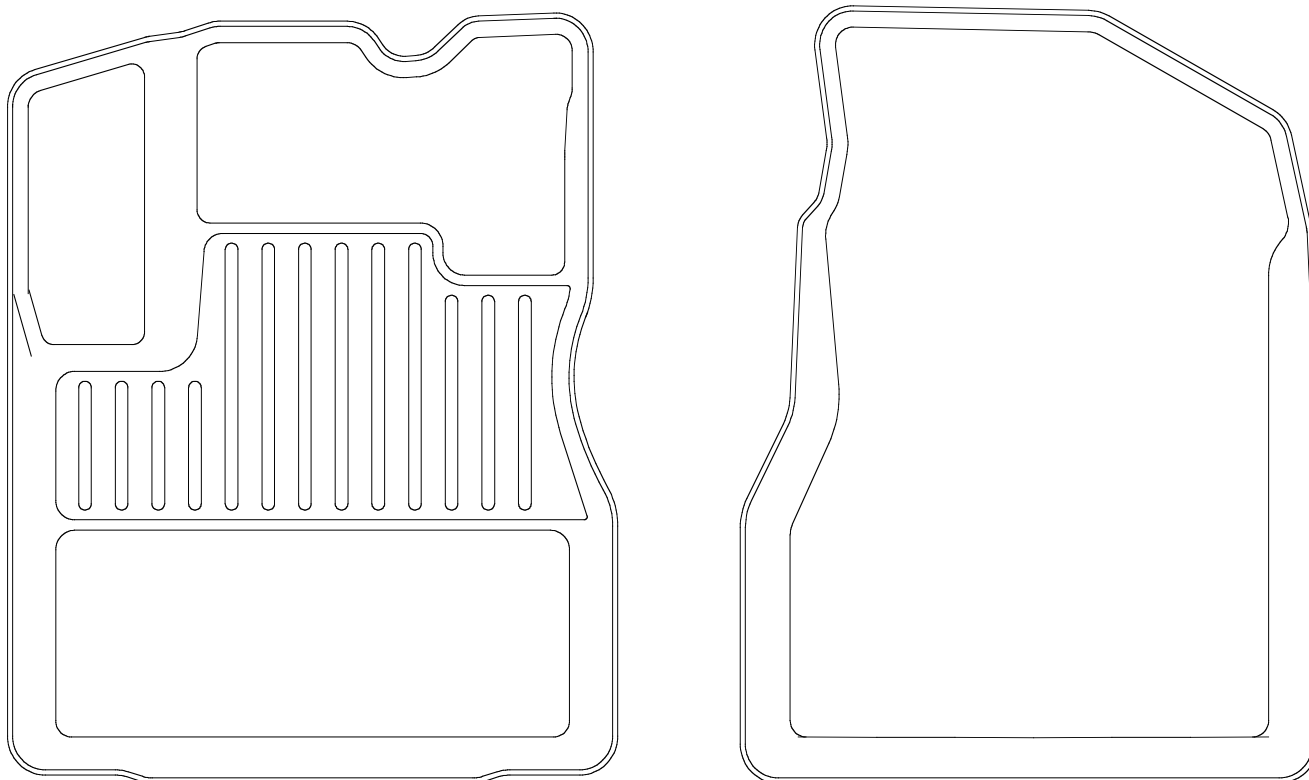

TO INSURE THE PROPER FIT OF YOUR DRIVER'S SIDE LINER, PLEASE REMOVE THE FACTORY INSTALLED CARPET HOOKS. THE HOOKS CAN BE EASILY REMOVED BY GENTLY PULLING THE HOOK END UP AND BACK TOWARD THE MOUNTING HOLE. THIS WILL ALLOW THE HOOKS TO "POP" OUT. SIMPLY STORE THE REMOVED HOOKS IN YOUR GLOVE BOX OR CONSOLE SHOULD YOU NEED TO REPLACE THEM AT A LATER DATE.

TO EASE INSTALLATION OF YOUR LINER, MOVE BOTH FRONT SEATS TO THEIR FAR BACK POSITION (ALLOWING THE MOST LEG ROOM) BEFORE BEGINNING INSTALLATION. ONCE LINERS ARE INSTALLED, REPOSITION FRONT SEATS AS NEEDED.