



XACT-CONTOUR


CARE AND USE INSTRUCTIONS - PN: 53901

Thank you for selecting a XACT-CONTOUR Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Chevrolet Silverado/GMC Sierra Crew Cab truck. The liner is made to take the place of your factory floor mats. ***For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting.***

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET SILVERADO/GMC SIERRA CREW CAB TRUCK 2ND SEAT FLOOR LINERS

FRONT OF

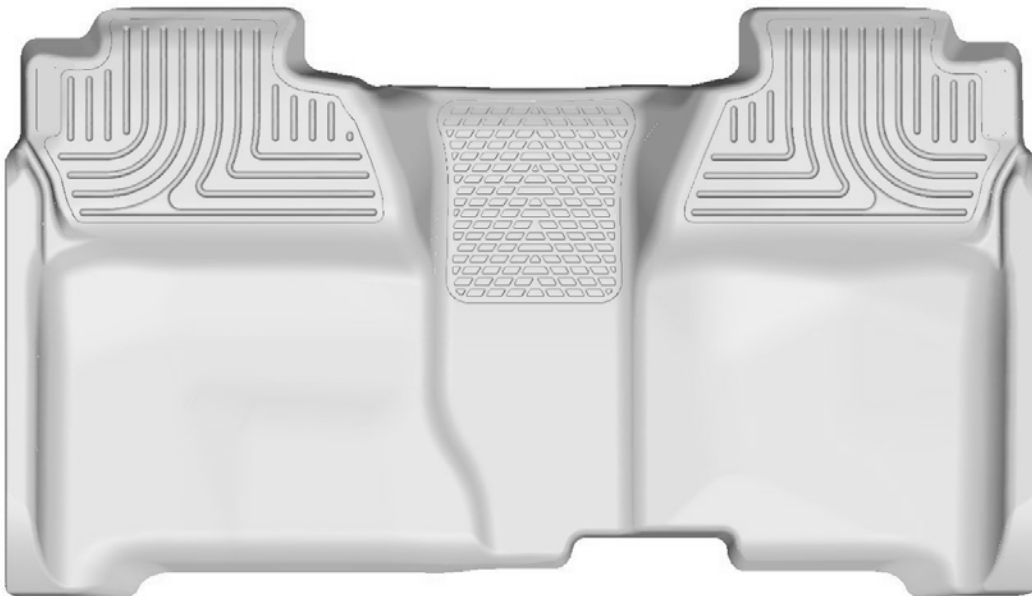

TO EASE INSTALLATION OF YOUR SILVERADO/SIERRA CREW CAB TRUCK SECOND SEAT LINER, MOVE BOTH FRONT ROW SEATS TO THEIR MOST FORWARD POSITION AND FLIP UP THE 2ND ROW SEATS. WITH THIS DONE, INSTALL YOUR LINER, POSITIONING IT AS SHOWN IN THE IMAGE ABOVE. ONCE THE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED AND LOWER YOUR 2ND ROW SEATS.

YOUR LINER WILL WORK IN CONJUNCTION WITH THE HUSKY LINER GEARBOX™.