

DODGE RAM LOGO READY

FRONT MUD GUARD INSTALLATION INSTRUCTIONS


Please read instructions thoroughly before installation.

Tools Required

- 1/8" drill bit / Drill
- · Short Phillips screwdriver
- Marking utensil (fine tip marker, grease pencil, etc.)

Package Contents

- · Driver & passenger side front mud guard
 - #10 screw (qty. 4)
- #8 screw (qty.2)
- Washer (qty 6)
- Instruction sheet
- 1. Clean and degrease the mud guard location area on the fender before installation.
- 2. Remove factory fastener from location B and attach mud guard to fender with #8 screw and washer. (Figure 1).
- 3. Using the mud guard as a template, mark and drill 1/8" holes at locations A and C.
- 4. Install #10 screw and washer at locations A and C.

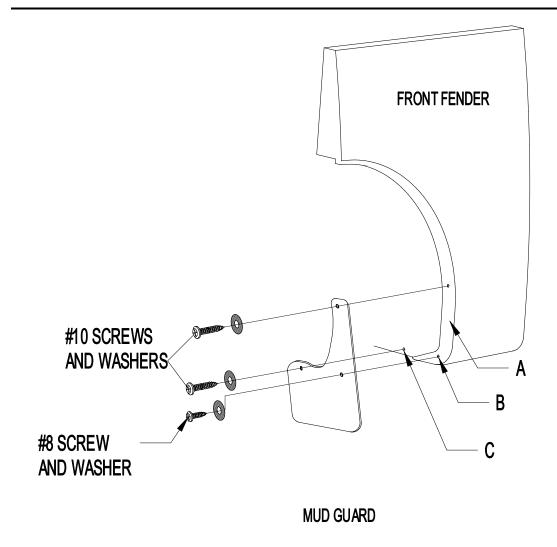

DRILL 1/8" HOLES &
ATTACH MUD GUARD
WITH #10 SCREWS
AT LOCATIONS A & C

Figure 1

NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR "EMBLEM" ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.