

## DODGE RAM WITH FENDER FLARES - LOGO READY FRONT MUD GUARD INSTALLATION INSTRUCTIONS

### Please read instructions thoroughly before installation.

#### **Tools Required**


- 1/8" drill bit / Drill
- Short Phillips screwdriver
- Marking utensil (fine tip marker, grease pencil, etc.)

#### **Package Contents**

- Driver & Passenger Side Front Mud Guards
- #10 SEM Screws (qty. 4)
- Small U-Clips (qty. 2)
- Instruction sheet

# NOTE: Turn wheels all the way left or right for easier installation. It may be necessary to remove the wheels before mud guard installation.

- 1. Remove the existing fasteners from locations A and C (Figure 1).
- 2. Attach the mud guard at locations A and C with the existing fasteners. Check the mud guard fit and appearance before tightening.
- 3. Using the mud guard as a template, mark and drill 1/8" holes at locations B and D.
- 4. Install a #10 SEM Screw at location B.
- 5. Install a #10 SEM Screw at location D, thru the mud guard, the fender liner, and into a Small U-Clip on the backside of the fender liner. NOTE: The Small U-Clip does not clip over the fender liner.

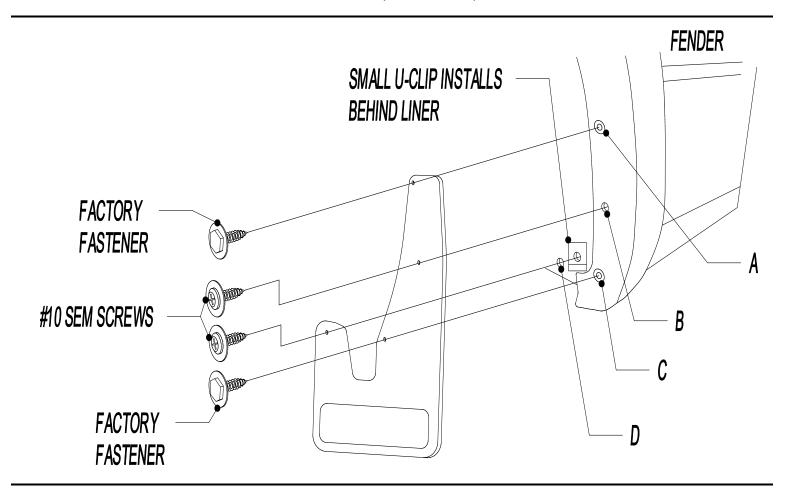

NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR "EMBLEM" ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.