



**FORD F-250/350 w/o FENDER FLARES  
FRONT MUD GUARD INSTALLATION INSTRUCTIONS**

*Please read instructions thoroughly before installation.*

**Tools Required**

- 1/8" drill bit / Drill
- Short #2 Phillips screwdriver


**Package Contents**

- Driver & passenger side rear mud guard
- #10 SEM screw (qty. 2)
- U-Clip (qty. 2)
- Instruction Sheet

**NOTE:** It may be necessary to remove the rear wheels for mud guard installation.

1. Clean the mud guard location area on the fender before installation.
2. Remove factory fasteners from locations A and B (Figure 1).
3. Attach mud guard with existing screws at locations A and B, check fit and make sure the mud guard is parallel to the ground before tightening.
4. Using the mud guard as a template, mark and drill an 1/8" hole at location C (Figure 1).
5. Install #10 SEM screw through the mudguard and fender liner and into the u-clip on the back-side of the liner (the u-clip does not clip over the liner, it acts as a nut on the back side of the liner) Figure 2.

e

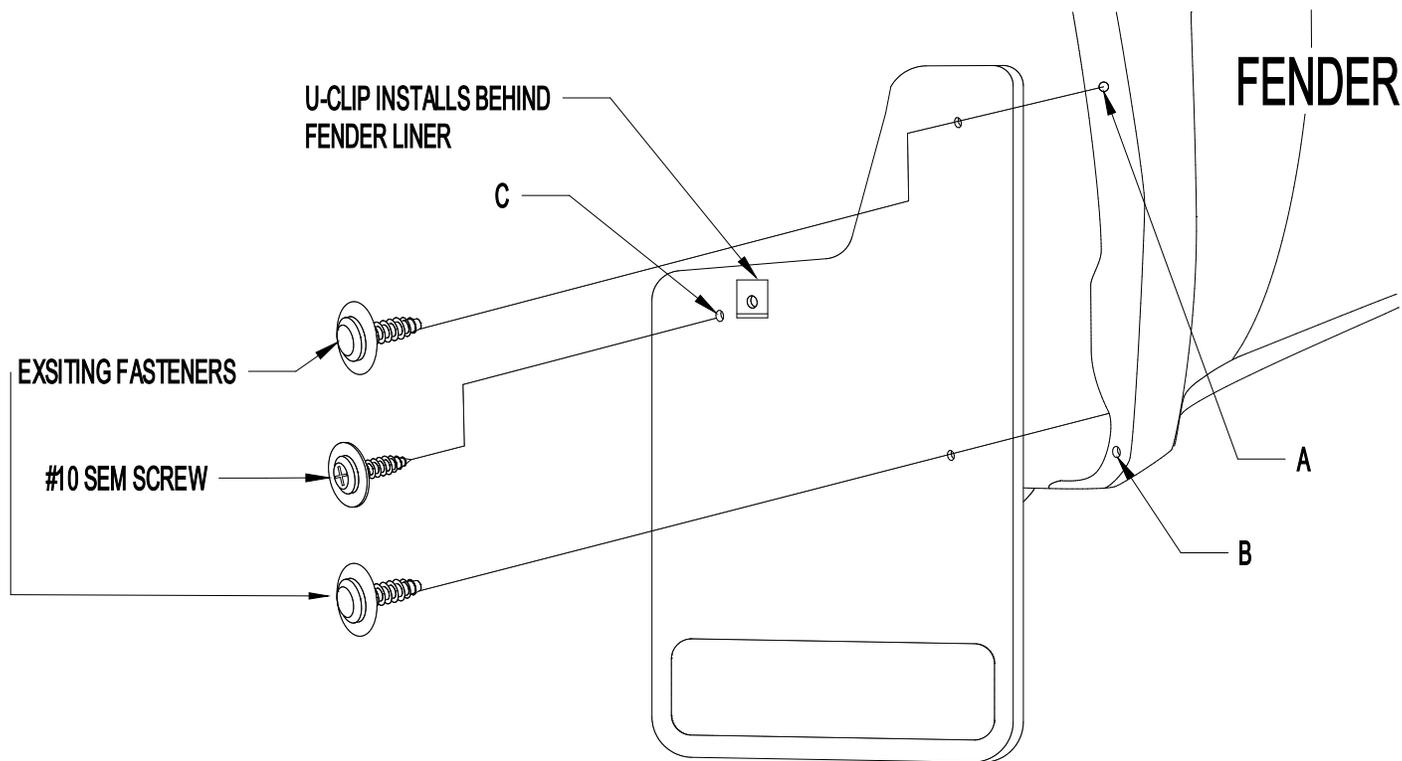

**MUD GUARD**