

FORD ESCAPE – FRONT MUD GUARD INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required

- Short Phillips screwdriver
- Center punch
- Drill / 1/8" drill bit


Package Contents

- Driver & passenger side rear mud guard
- #10 SEM Screws (qty. 6)
- U-Clips (qty. 2)
- Instruction sheet

MUD GUARD INSTALLATION

NOTE: *It may be necessary to turn the wheels before mud guard installation.*

1. Remove the existing fastener from location A (Figure 1).
2. Install Mud Guard with existing fastener at location A, check the Mud Guard fit and appearance before tightening.
3. Using the mud guard as a template, mark and drill 1/8" holes at locations B, C, and D.
4. Install #10 SEM Screws at locations B and C.
5. Install a U-clip over the fender liner and align with drilled hole at location D (Figures 1 and 2).
6. Install a #10 SEM Screw at location D.

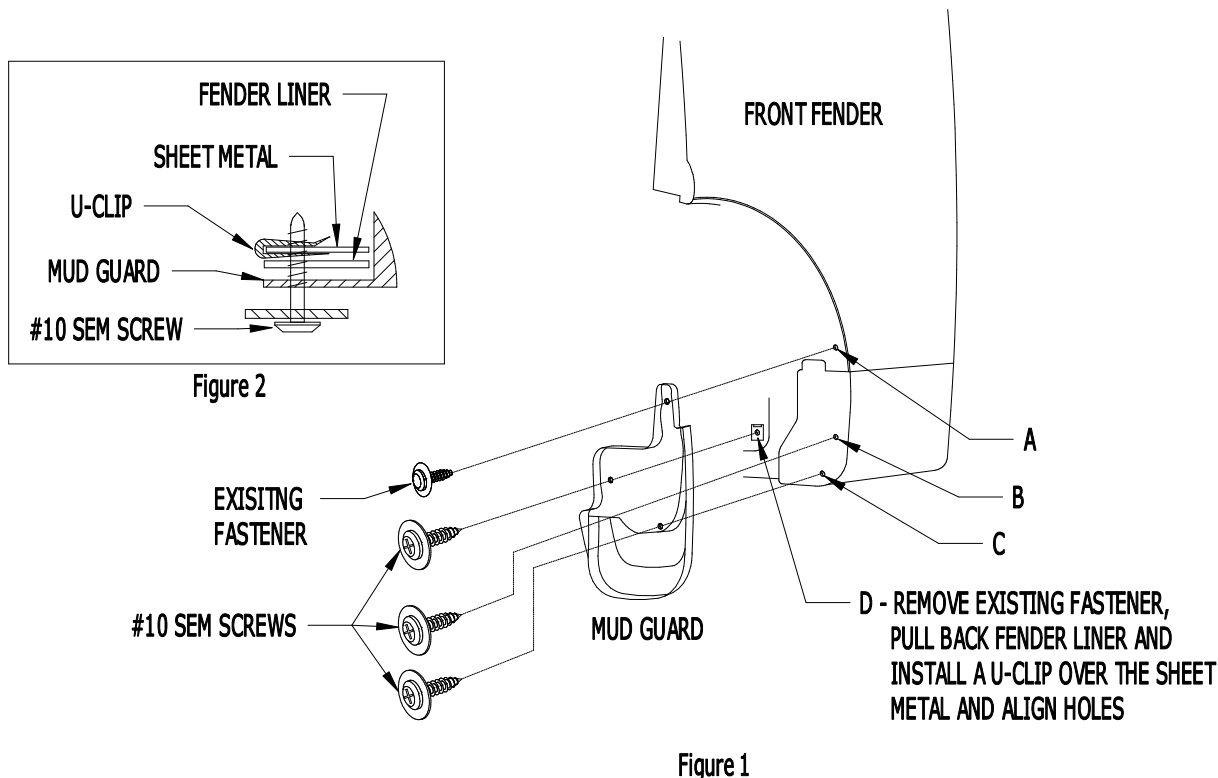

PAINTING INSTRUCTIONS

1. Clean mud guard with soap and water to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.