



GMC SIERRA REAR MUD GUARD - INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required

- Phillips Screwdriver
- 1/8" Drill bit / Driver


Package Contents

- Driver & passenger side rear mud guards
- #10 SEM SCREWS (Qty 6)
- Instruction sheet

MUD GUARD INSTALLATION

NOTE: *It may be necessary to remove the wheels before mud guard installation.*

1. Using the mudguard as a template, mark and drill an 1/8" hole at locations A, B and C
2. Install #10 SEM screws at locations A, B and C.

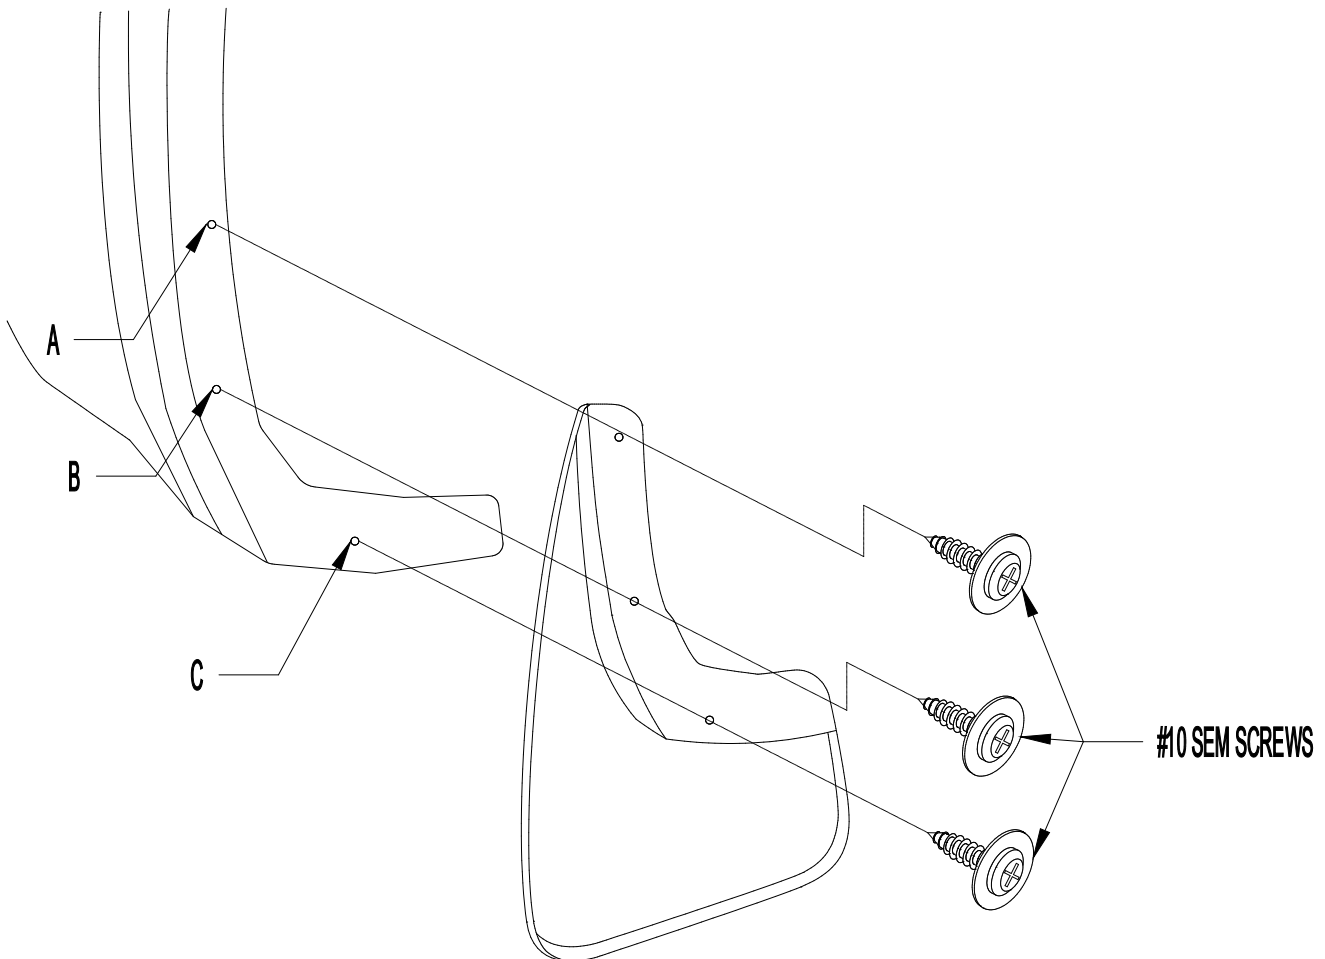

PAINING INSTRUCTIONS

1. Clean mud guard with soap and water to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.