

THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET COLORADO/GMC CANYON CREW CAB TRUCK SECOND SEAT LINER

FRONT OF VEHICLE

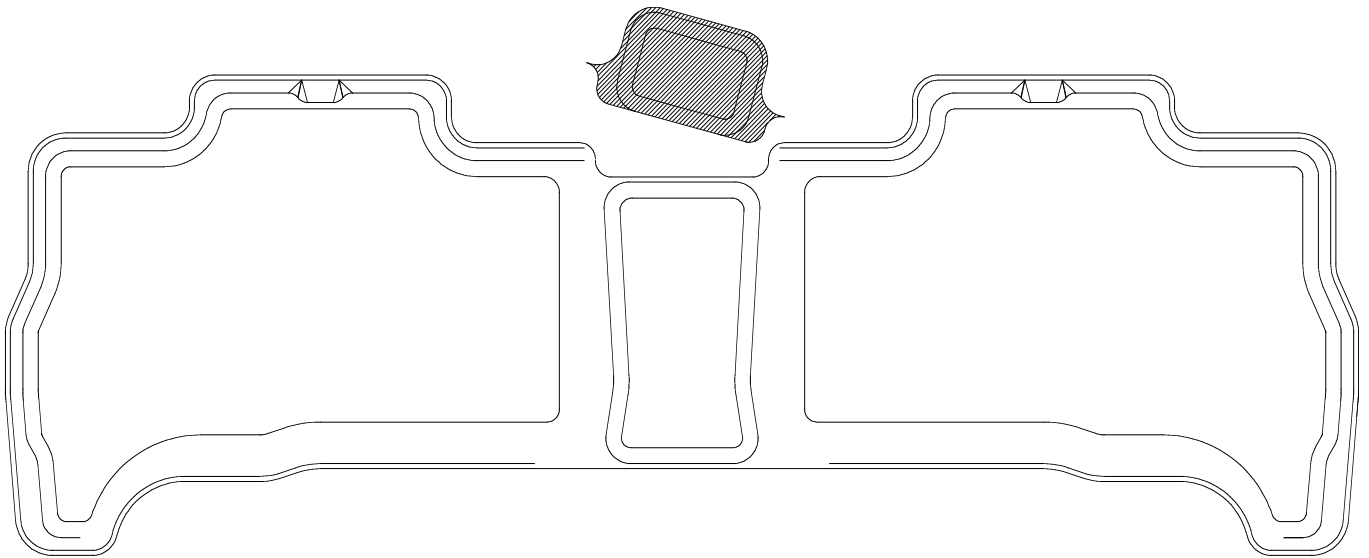

YOUR COLORADO/CANYON LINER IS DESIGNED TO ACCOMMODATE TRUCKS WITH OR WITHOUT A CENTER CONSOLE. IF YOU HAVE A FACTORY CENTER CONSOLE LOCATED BETWEEN THE FRONT SEATS, IT WILL BE NECESSARY TO TRIM A SMALL PORTION OFF OF YOUR LINER TO ALLOW FOR THE CORRECT FIT. TRIM YOUR LINER AS SHOWN PICTURED ABOVE. AN OFFSETTING DEPTH LINE IS MOLDED INTO THE LINER TO SERVE AS A TRIMMING GUIDE. TRIM ALONG THE OFFSET AND AGAINST THE RAISED BAND. A PHOTO OF A TRIMMED PART IS SHOWN ON THE BACK OF THIS PAGE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

PART #6251 COLORADO/CANYON LINER SHOWN TRIMMED
FOR VEHICLES WITH A CENTER CONSOLE

