


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners. *However, do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD EXPLORER SECOND SEAT FLOOR LINER

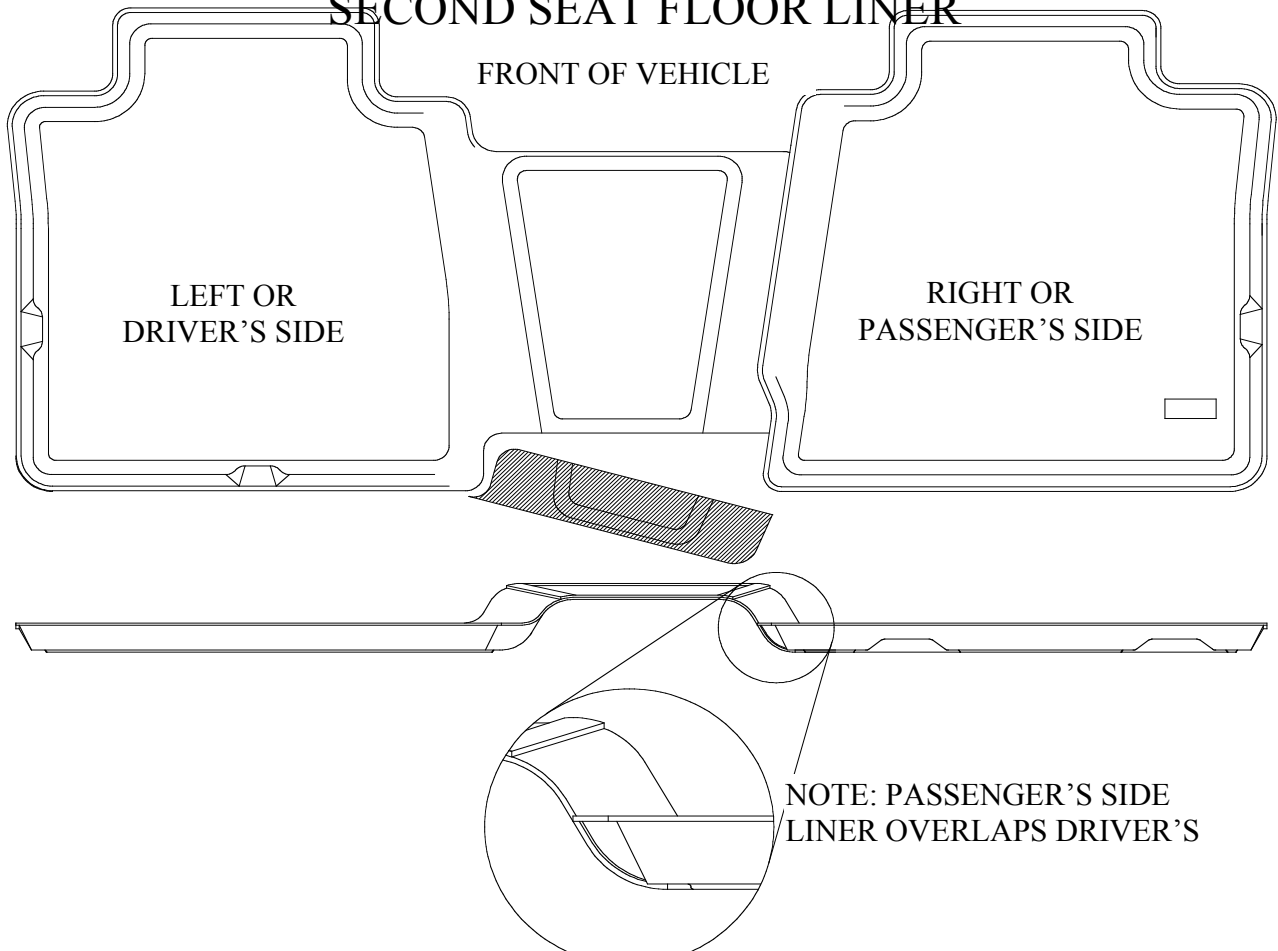

NOTE: TO ACHIEVE THE CORRECT FIT FOR EXPLORERS EQUIPPED WITH SECOND ROW BUCKET SEATS/SECOND ROW CONSOLE, SIMPLY TRIM AWAY THE MATERIAL FROM THE LOWER PORTION OF THE LINER THAT COVERS THE CENTER HUMPS (SEE HATCHED AREA ABOVE). USE THE MOLDED IN TRIM GROOVE AS A GUIDE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING. SEE PHOTOS ON BACK SIDE OF PAGE.

