

THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD SUPER DUTY CREW CAB TRUCK SECOND SEAT FLOOR LINER

FRONT OF VEHICLE

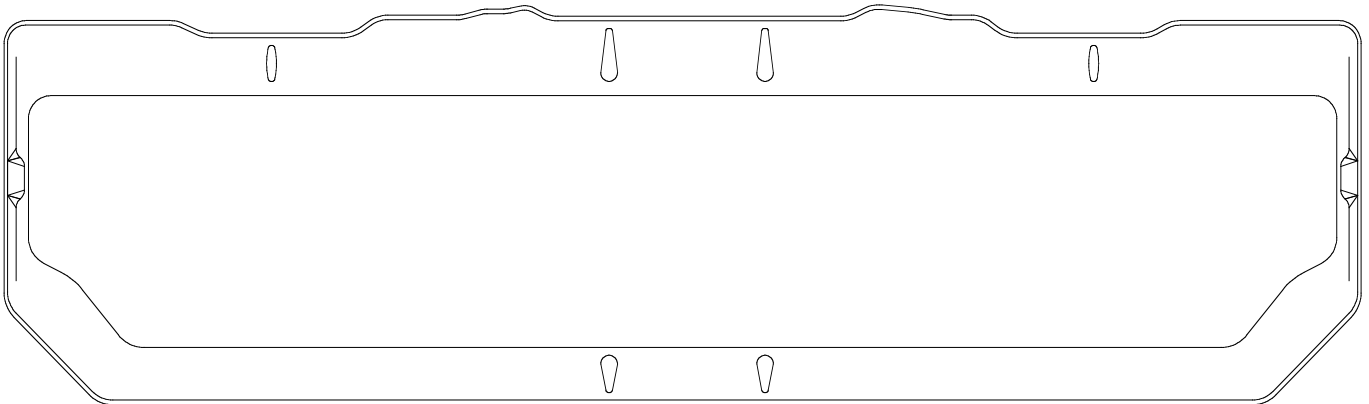

YOUR HUSKY FLOOR LINER WILL ACCOMMODATE THE UNDER SEAT STORAGE PLATFORM LOCATED UNDER THE REAR SEAT OF THOSE CREW CAB SUPER DUTY TRUCKS EQUIPPED WITH THIS OPTION. SIMPLY INSTALL THE LINER BEFORE OPENING THE STORAGE PLATFORM. THE STORAGE PLATFORM SUPPORT WILL REST ON THE LINER. SEE THE BACK OF THIS PAGE FOR PHOTOS.

THIS LINER IS DESIGNED TO FIT THE NEW BODY STYLE FORD SUPER DUTY RELEASE IN 2008. IF YOU HAVE RECEIVED THIS PART FOR A 1999-2007 FORD SUPER DUTY CREW CAB TRUCK, IT WILL NOT FIT PROPERLY. YOU NEED PART #6381 FOR THIS APPLICATION. JUST CALL YOUR RETAILER TO GET THE CORRECT PART.

PHOTOS SHOWING PART #6382 USED IN CONJUNCTION WITH THE UNDER SEAT STORAGE PLATFORM. SIMPLY INSTALL YOUR LINER BEFORE FOLDING PLATFORM FORWARD.

