


**THANK YOU FOR SELECTING A HUSKY FLOOR LINER  
FROM WINFIELD CONSUMER PRODUCTS  
CARE AND USE INSTRUCTIONS**

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

**INSTALLATION INSTRUCTIONS FOR YOUR FORD SUPER DUTY  
SUPER CAB TRUCK SECOND SEAT FLOOR LINER**

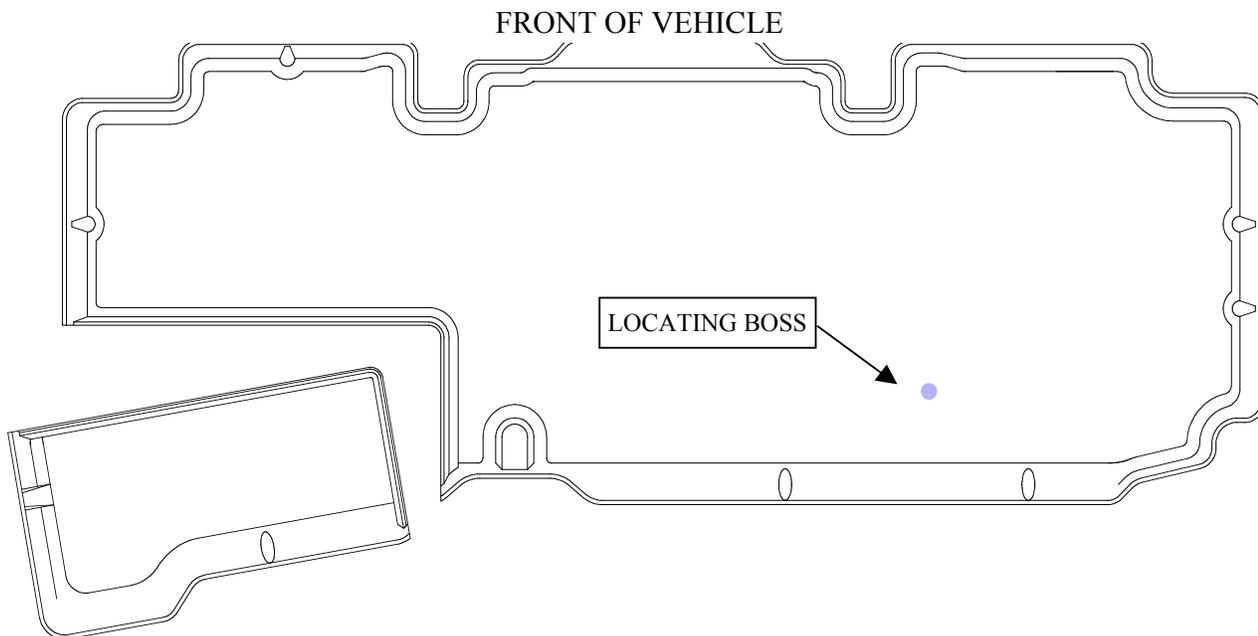

TO INSTALL YOUR LINER, SIMPLY MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITION AND “FOLD UP” THE REAR SEAT BOTTOMS. THIS WILL ALLOW EASY ACCESS TO THE REAR FLOOR PAN. INSTALL LINER AND REPOSITION SEATS AS NEEDED.

IF YOUR TRUCK HAS A JACK TOOL POUCH LOCATED UNDER THE REAR PASSENGER SEAT, YOU WILL NEED TO TRIM YOUR HUSKY LINER BEFORE INSTALLING IT. TO ACCOMMODATE THE TOOL POUCH RETAINING STUD, SIMPLY TRIM AWAY THE RECESSED MATERIAL FROM THE TOP OF THE RAISED LOCATING BOSS MOLDED INTO THE LINER (SEE DRAWING ABOVE & PHOTOS ON BACK OF THIS SHEET). NEXT, REMOVE THE JACK TOOL POUCH ASSEMBLY BY REMOVING THE WING NUT RETAINING STUD. WITH THIS DONE, INSTALL YOUR LINER AND REPLACE THE TOOL POUCH ASSEMBLY, SECURING IT IN PLACE WITH THE ORIGINAL BRACKETS AND WING NUT STUD.

IF YOUR TRUCK IS EQUIPPED WITH THE OPTIONAL AUDIOPHILE STEREO SYSTEM, YOUR TRUCK HAS A SUB-WOOFER MOUNTED UNDER THE REAR DRIVER’S SIDE SEAT. YOUR LINER WILL NEED TO BE TRIMMED TO ACCOMMODATE THIS FEATURE. TO TRIM, SIMPLY FOLLOW THE MOLDED IN GROOVE IN THE MIDDLE OF THE RAISED WALL THAT IS MOLDED INTO YOUR LINER (SEE DRAWING ABOVE AND PHOTOS ON BACK).

## HUSKY LINER PART #6388 INSTALLATION PHOTOS

