
THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floorsliner are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. *However, do not remove the factory-installed carpeting*.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA TACOMA ACCESS CAB SECOND SEAT FLOOR LINER

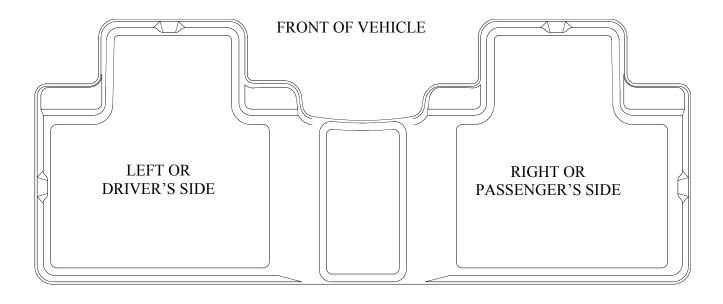

TO EASE INSTALLATION OF LINER, ADJUST BOTH FRONT SEATS TO THEIR MOST FORWARD POSITION AND FOLD SEATBACKS FORWARD BEFORE INSTALLING LINER. ONCE LINER IS INSTALLED, REPOSITION SEATS AS DESIRED.