


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR NISSAN TITAN CREW CAB TRUCK SECOND SEAT LINER

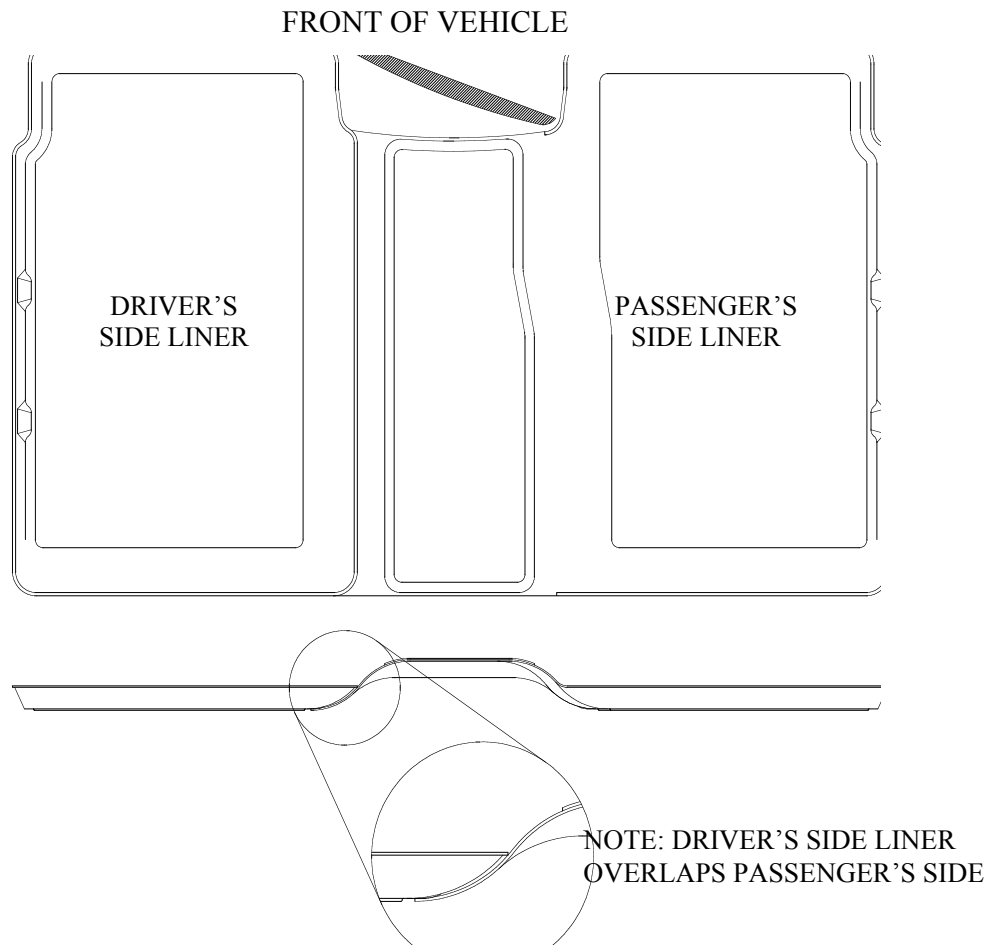

TO EASE INSTALLATION, POSITION FRONT SEATS TO THEIR MOST FORWARD POSITION AND FOLD REAR SEATS UP. IF YOUR TITAN HAS A CONSOLE BETWEEN THE FRONT SEATS, YOU WILL NEED TO TRIM AWAY A PORTION OF YOUR LINER TO ACHIEVE THE PROPER FIT. TRIM YOUR LINER AS SHOWN ABOVE (SEE SHADED AREA). A TRIM GUIDE IS MOLDED INTO YOUR LINER TO AID TRIMMING; TRIM ALONG THE RECESSED LINE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.