


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners. *However, do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR 2ND ROW BENCH SEAT EQUIPPED SUBURBAN/YUKON XL/CADILLAC ESV THIRD SEAT FLOOR LINER

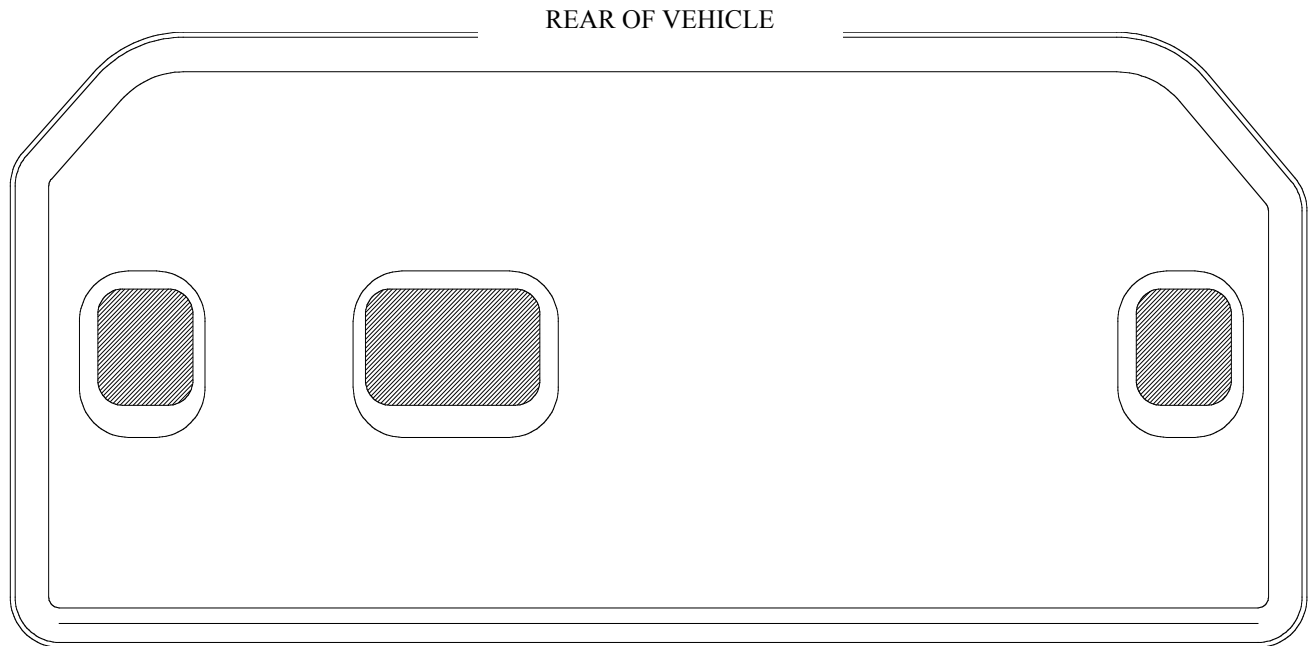

PLEASE NOTE THAT THIS LINER IS DESIGNED FOR VEHICLES WITH 2ND ROW BENCH SEATING. IT WILL NOT WORK IN APPLICATIONS WITH 2ND ROW BUCKET SEATING. IF YOU HAVE NOT RECEIVED PART #7144, YOU HAVE THE WRONG LINER. PLEASE CONTACT YOUR RETAILER OR HUSKY LINERS AT 800-344-8759.

NOTE THAT THE DIAGRAM ABOVE SHOWS THREE (3) AREAS DARKENED. YOUR LINER SHOULD HAVE THREE (3) PRE-TRIMMED HOLES IN THE SAME AREAS TO ALLOW THE SECOND ROW SEATS TO FASTEN THROUGH THE LINER. IF YOUR LINER DOES NOT HAVE THESE THREE AREAS TRIMMED, DO NOT INSTALL THE LINER. INSTEAD, PLEASE CALL HUSKY LINERS AT 800-344-8759.

TO ALLOW INSTALLATION OF YOUR NEW LINER, YOU MUST FIRST FLIP/FOLD BOTH OF YOUR 2ND ROW SEATS FORWARD. ONCE LINER IS INSTALLED, YOU CAN FLIP/FOLD YOUR 2ND ROW SEATS INTO THE NORMAL USE POSITION. CHECK SEATS TO MAKE SURE THEY ARE SECURELY LOCKED INTO PLACE BEFORE OPERATING VEHICLE.