


**THANK YOU FOR SELECTING A HUSKY FLOOR LINER
FROM WINFIELD CONSUMER PRODUCTS
CARE AND USE INSTRUCTIONS**

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat(s) before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

**INSTALLATION INSTRUCTIONS FOR YOUR THIRD SEAT FORD
EXPEDITION /LINCOLN NAVIGATOR FLOOR LINER**

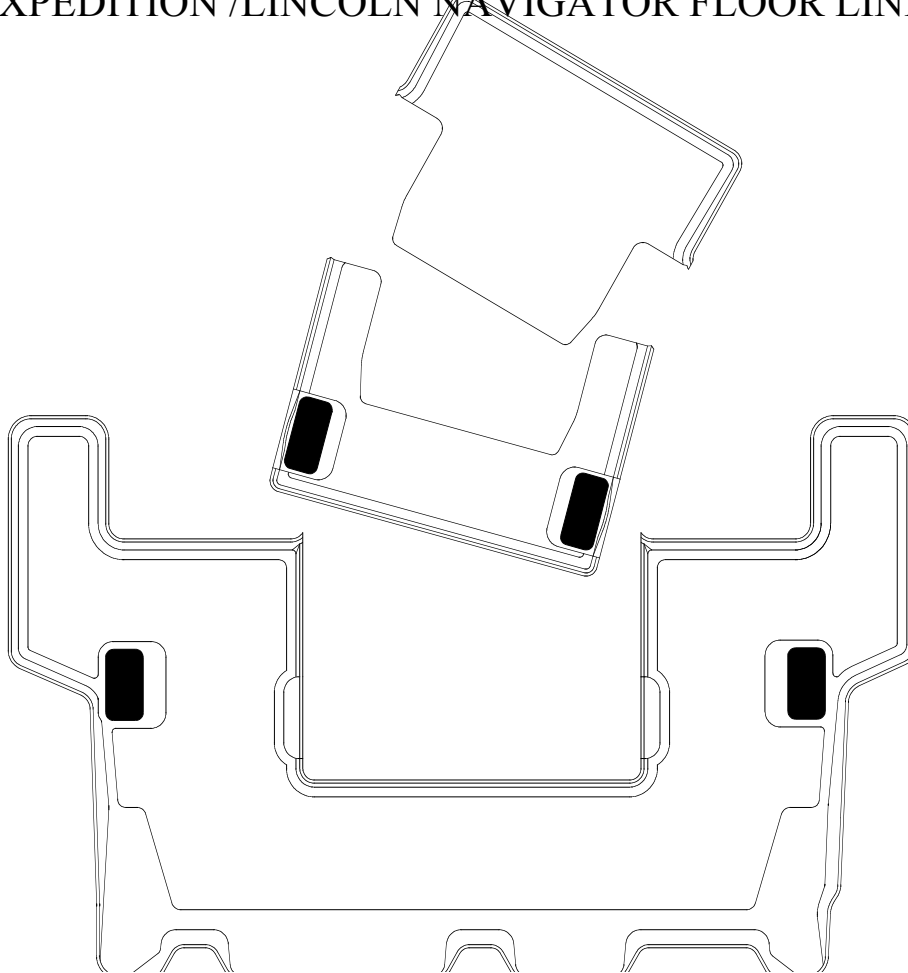

BEFORE INSTALLATION OF YOUR HUSKY LINER, CHECK LINER TO MAKE SURE THE FOUR (4) AREAS SHOWN ABOVE DARKENED ARE TRIMMED AWAY. IF THEY ARE NOT, DO NOT INSTALL LINER AS THE SECOND ROW OF SEATS WILL NOT LOCK SECURELY INTO POSITION. INSTEAD, PLEASE CALL HUSKY LINERS AT 800-344-8759.

TO PREPARE FOR INSTALLATION, YOU MUST FIRST RELEASE AND FLIP FORWARD BOTH SECOND ROW SEATS. AFTER INSTALLATION, MAKE CERTAIN THAT THE SEATS ARE SECURELY LOCKED BACK INTO POSITION BEFORE DRIVING VEHICLE. SEE BACK SIDE OF PAGE FOR FURTHER INSTALLATION INSTRUCTIONS.

TO ACCOMMODATE THE MULTIPLE SEATING CONFIGURATIONS AVAILABLE IN THE EXPEDITION/NAVIGATOR, YOUR LINER HAS TWO TRIM AREAS. THE PHOTOS BELOW DETAIL THE TRIMMING OF THESE AREAS. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

LINER SHOWN TRIMMED FOR APPLICATIONS WITH A CONSOLE BETWEEN THE SECOND ROW BUCKET SEATS. TRIM LINER USING THE STEP MOLDED INTO THE TREADED AREA OF THE PART AS A GUIDE (SHOWN BELOW).



LINER SHOWN TRIMMED FOR APPLICATIONS WITH SECOND ROW BENCH SEATING. TRIM LINER FOLLOWING THE STEP MOLDED INTO THE MIDDLE OF THE RAISED “U-SHAPED” BAND ON PART AS SHOWN BELOW.