


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat(s) before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR THIRD SEAT NISSAN ARMADA/INFINITI QX-56 FLOOR LINER

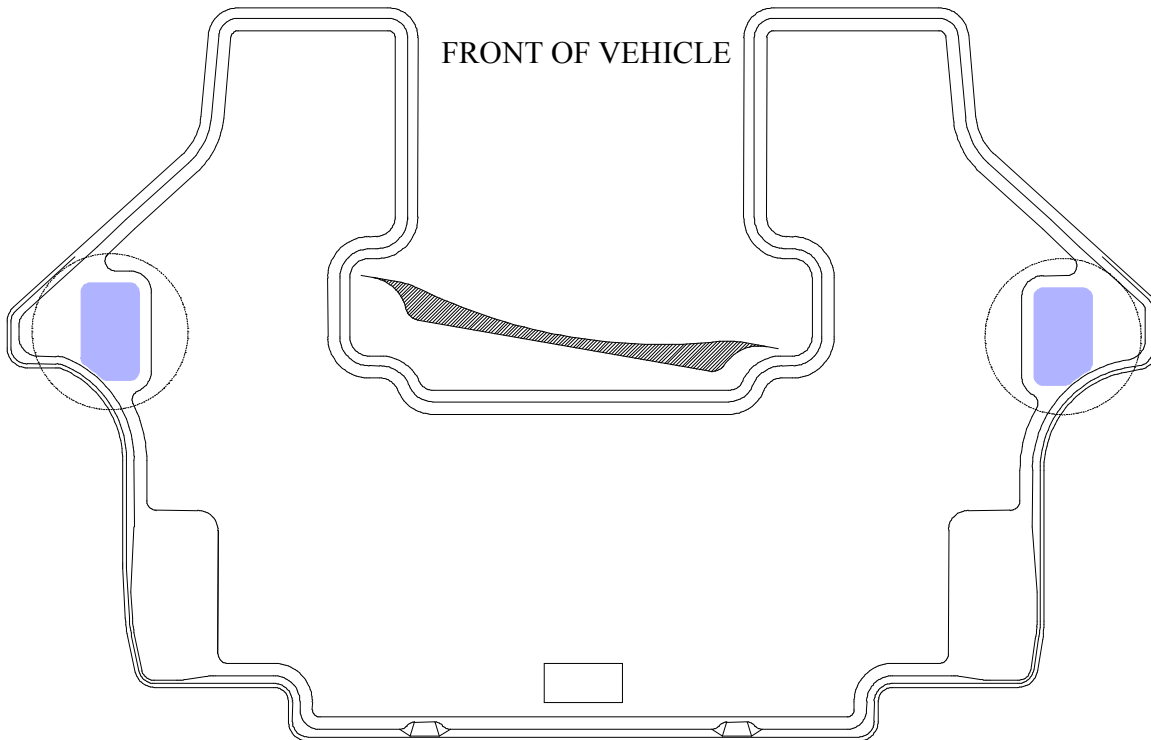

TO INSTALL YOUR LINER, JUST RELEASE AND FLIP/FOLD FORWARD THE SECOND ROW OUTER SEATS. THE CENTER SEAT, WHERE APPLICABLE, DOES NOT FOLD FORWARD. NOTE, THE SEAT BOTTOMS WILL FOLD FORWARD INDIVIDUALLY, BUT TO INSTALL THE LINER, THE WHOLE SEAT MUST PIVOT FORWARD. TO RELEASE THE SEAT, PULL THE RELEASE LOCATED ON TOP OF THE SEAT BACK. THIS ALLOWS THE SEATS TO FOLD FORWARD, EXPOSING THE CARPET UNDER THE SECOND ROW SEAT.

ONCE THESE SEATS ARE BOTH FOLDED FORWARD, YOU CAN INSTALL YOUR LINER. THE SECOND ROW SEATS WILL REATTACH THROUGH THE TWO (2) HOLES IN THE LINER. IF YOUR ARMADA/QX56 ***DOES NOT*** HAVE A CENTER CONSOLE IN THE SECOND ROW OF SEATS, YOU WILL NEED TO TRIM YOUR LINER AS SHOWN ABOVE (AREA "1"). TRIM FOLLOWING THE MOLDED IN TRIM GROOVE.

NOTICE: THE TWO (2) AREAS DARKENED ABOVE SHOULD BE TRIMMED OUT WHEN YOU RECEIVE YOUR LINER. IF THESE ARE NOT TRIMMED, YOUR 2ND ROW OF SEATS WILL NOT BE ABLE TO LOCK INTO PLACE AND THE LINER SHOULD NOT BE INSTALLED. IF YOUR LINER IS NOT TRIMMED IN THESE TWO AREAS, PLEASE CALL US AT 800-344-8759.