

Wheel Well Guards

79031 - Installation Instructions GMC Sierra

PACKAGE CONTENTS:



Wheel Well Guard Driver's Side (1)

Supplied Hardware for Work Truck Models 12 - #10 SEM Screws 12 - U-Clips




Wheel Well Guard Passenger's Side (1)

TOOLS REQUIRED:

- Phillips Head Screwdriver
- T-15 Torx bit / Driver

VEHICLE PREPARATION:

Your vehicle's rear fender wells should be cleaned prior to the installation of your new Husky Wheel Well Guards.

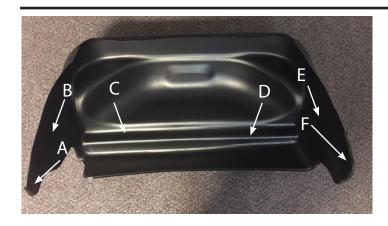

Installation

Read all directions thoroughly prior to the installation of your Wheel Well Guards.

A, B, C, D, E and F are pre-drilled fastener locations for installation.



- 1. Check part number on the top of the Wheel Well Guard and identify DS & PS to determine which side to install.
- 7903 DS installs on the driver's side.
- 7903 PS installs on the passenger's side.



2. Remove the factory Torx head screws that hold the factory carpeted wheel well liner in place and remove the factory wheel well liner.

Note: If your Sierra was not equipped with factory wheel well liners skip to step 3.



3. If your truck was not equipped with factory wheel well liners install a u-clip at locations C and D by clipping the u-clip over the tab and aligning with the factory hole.



4. Insert the Wheel Well Guard into the fender opening.

NOTE: It is not necessary to remove the tire.



5. Push the Wheel Well Guard up into the fender opening.



6. Insert the lower flap sections of the Wheel Well Guard into the fender well behind the fender well lip. Perform this step for both the front and rear lower flap sections. Well Guard lip is tucked behind the metal fender well lip of the truck



7. Tuck the remaining portion of the Wheel Well Guard behind the fender lip all the way around the fender well opening.



8. Install the factory Torx head screws at locations A, B, C, D, E and F.



9. If your vehicle was not equipped with a factory wheel well guard, install the supplied SEM screws at locations C and D through the Wheel Well Guard and into the u-clips that are clipped over the sheet metal.



10. At locations A, B, E, and F install a SEM screw through the Wheel Well Guard and hole in the sheet metal and into the supplied u-clip on the backside on the metal.

Note: The u-clip does not clip over the metal at these locations. It is used on the backside of the metal like a nut.



11. Repeat steps 1-10 on the opposite side.

Congratulations,

You have now successfully installed your new Husky Liners Wheel Well Guards. If you have any questions please call us at 1-800-344-8759.

HUSKY LINERS WHEEL WELL GUARDS LIMITED LIFETIME WARRANTY

WINFIELD CONSUMER PRODUCTS WARRANTS YOUR HUSKY LINERS WHEEL WELL GUARD PROTECTION PRODUCT WITH A LIMITED LIFETIME WARRANTY TO THE ORIGINAL PURCHASER. IF YOUR FINISHED PRODUCT IS FOUND DEFECTIVE, WINFIELD CONSUMER PRODUCTS WILL AUTHORIZE THE REPLACEMENT OF YOUR PRODUCT AT NO CHARGE TO THE ORIGINAL PURCHASER. THIS WARRANTY COVERS PRODUCT REPLACEMENT ONLY. WINFIELD CONSUMER PRODUCTS WILL NOT PROVIDE A MONETARY REFUND FOR THE PRICE OF THE PRODUCT OR CHARGES INCURRED DURING INSTALLATION. THIS WARRANTY IS NOT TRANSFERABLE. WINFIELD CONSUMER PRODUCTS ASSUMES NO LIABILITY FOR PRODUCT FAILURE DUE TO ACCIDENT, COLLISION, NEGLIGENCE, VANDALISM OR ABUSE.

THERE IS NO WARRANTY OF MERCHANTABILITY AND NO WARRANTY THAT THE PRODUCT SHALL BE FIT FOR ANY PARTICULAR PURPOSE OR USE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION.

THIS PRODUCT IS TO BE USED IN COMPLIANCE WITH ALL APPLICABLE STATE OR PROVINCIAL LAWS. INSTALLATION OF THIS PRODUCT IN A MANNER THAT VIOLATES STATE OR PROVINCIAL LAW IS A MISUSE OF THE PRODUCT AND VOIDS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY. WINFIELD CONSUMER PRODUCTS SHALL NOT BE LIABLE IN ANY MANNER WHATSOEVER FOR DAMAGES RELATED TO THE USE OF THIS PRODUCT IN AN ILLEGAL MANNER.

FOR WARRANTY SERVICE CONTACT YOUR HUSKY LINERS DEALER OR CALL WINFIELD CONSUMER PRODUCTS AT (800) 344-8759.