

THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TAHOE YUKON/DENALI/ESCALADE THIRD SEAT ACCESS LINER

REAR OF VEHICLE (CARGO AREA)

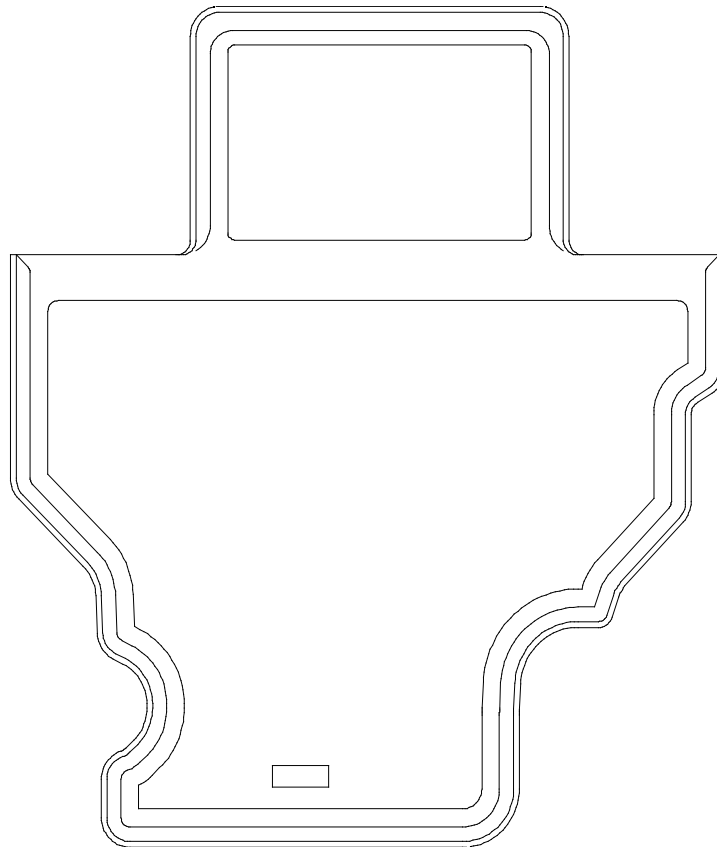

PART (#8140) IS DESIGNED FOR USE WITH ESCALADE'S/YUKON'S/YUKON DENALI'S AND TAHOE'S EQUIPPED WITH REAR BUCKET (QUAD) SEATING. IF YOUR VEHICLE IS EQUIPPED WITH A REAR 60/40 SPLIT BENCH SEAT, YOU DO NOT NEED THIS PART. THIS LINER PROTECTS THE THIRD SEAT ACCESS AREA THAT IS NOT COVERED BY THE SECOND SEAT HUSKY LINER (PART #6145).