


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD SUPER DUTY CENTER HUMPH LINER (SUPER CAB AND CREW CAB MODELS ONLY)

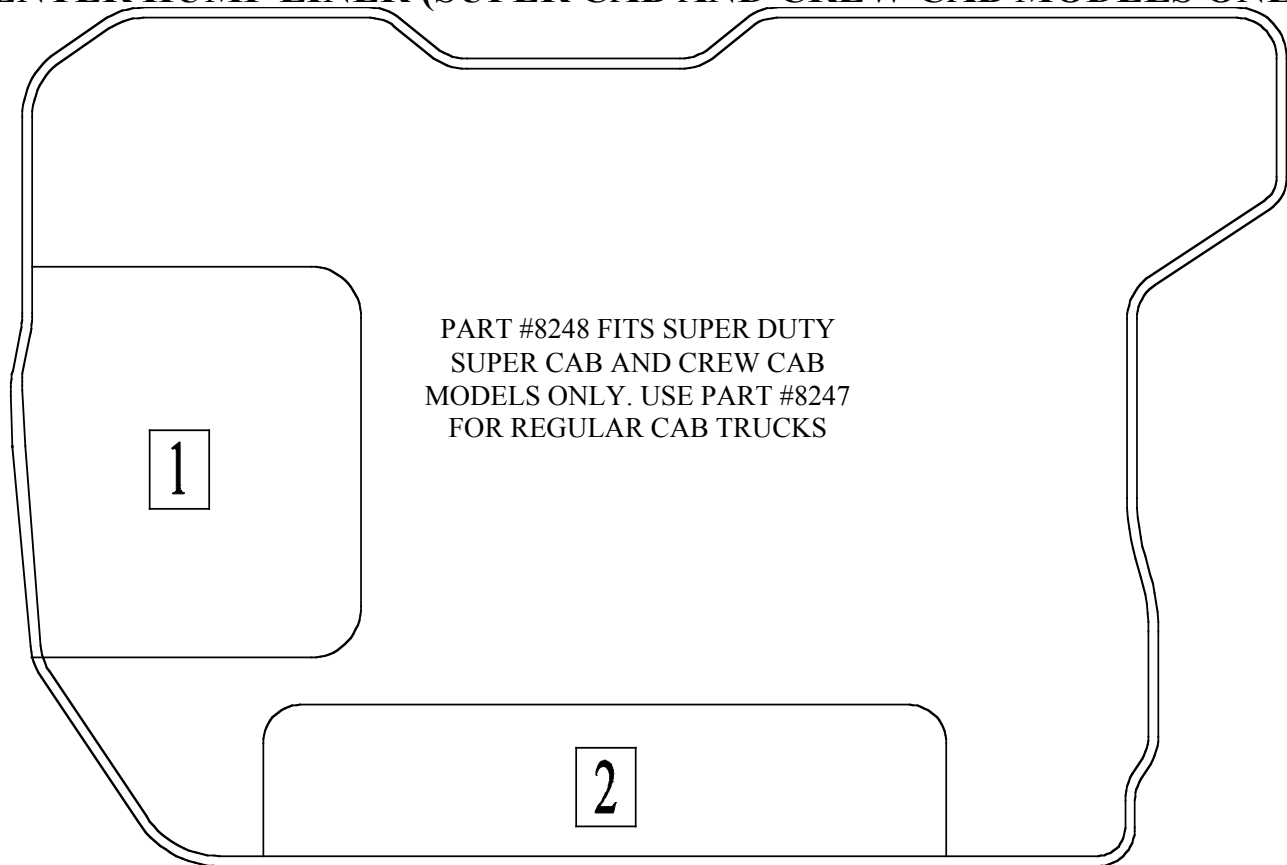

NOTE: IF YOUR VEHICLE IS EQUIPPED WITH A MANUAL TRANSFER CASE SHIFTER, YOU WILL NEED TO TRIM AWAY THE MATERIAL FROM AREA "1" SHOWN ABOVE. THIS AREA IS RECESSED ON YOUR LINER. USE THE EDGE FORMED BY THE RECESSED SECTION AS YOUR TRIMMING GUIDE. ONCE TRIMMED, THE LINER WILL FIT AROUND THE TRANSFER CASE SHIFTER HOUSING.

IF YOUR VEHICLE IS EQUIPPED WITH A FRONT ROW CENTER CONSOLE, YOU WILL NEED TO TRIM THE MATERIAL FROM AREA "2" SHOWN ABOVE. THIS AREA IS SLIGHTLY RECESSED ON THE LINER AS WELL. USE THE EDGE FORMED BY THE RECESSED SECTION AS YOUR TRIMMING GUIDE. ONCE TRIMMED, THE LINER WILL FIT AROUND THE FRONT EDGE OF THE CONSOLE. A UTILITY KNIFE OR HEAVY SCISSORS WORK WELL FOR TRIMMING.