


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new center hump liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

CENTER HUMP LINER INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET COLORADO/GMC CANYON REGULAR AND EXTENDED CAB

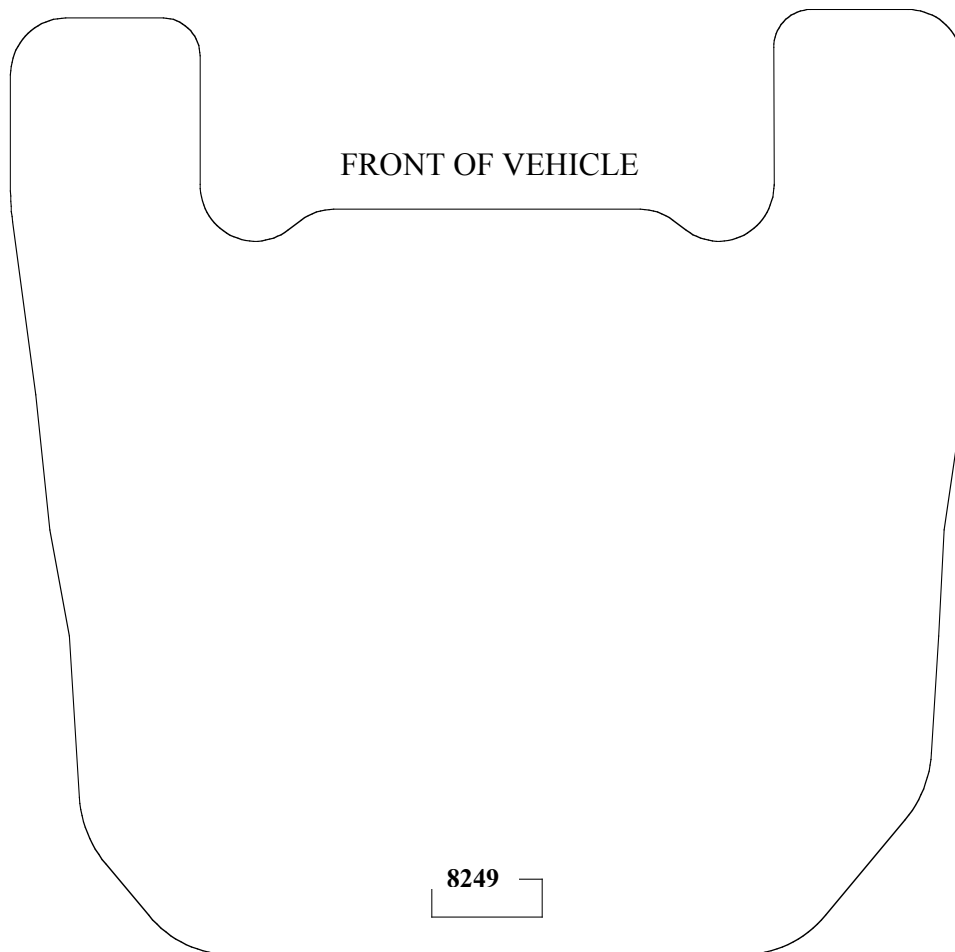

INSTALL YOUR CENTER HUMP LINER BEFORE INSTALLING YOUR FRONT FLOOR LINERS. YOUR FRONT FLOOR LINERS WILL OVERLAP THE CENTER HUMP LINER.