

HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Infiniti QX56/QX80 and Nissan Armada. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR INFINITI QX56/QX80 & NISSAN ARMADA FRONT FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR FRONT LINERS, MOVE THE FRONT SEATS TO THEIR MOST REARWARD POSITION. THEN, WITH THIS DONE, YOU CAN EASILY INSTALL THE LINERS. ONCE LINERS ARE IN PLACE, REPOSITION THE FRONT SEATS AS DESIRED. NOTE THAT THE LINERS HAVE HOLES THAT ALIGN WITH THE FACTORY FLOOR MAT RETAINING HOOK. TAKE CARE TO INSURE LINERS ARE SECURED OVER THE HOOKS.


HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new 2nd seat liner is custom molded to fit your Infiniti QX56/QX80 and Nissan Armada. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR INFINITI QX56/QX80 & NISSAN ARMADA SECOND SEAT FLOOR LINERS

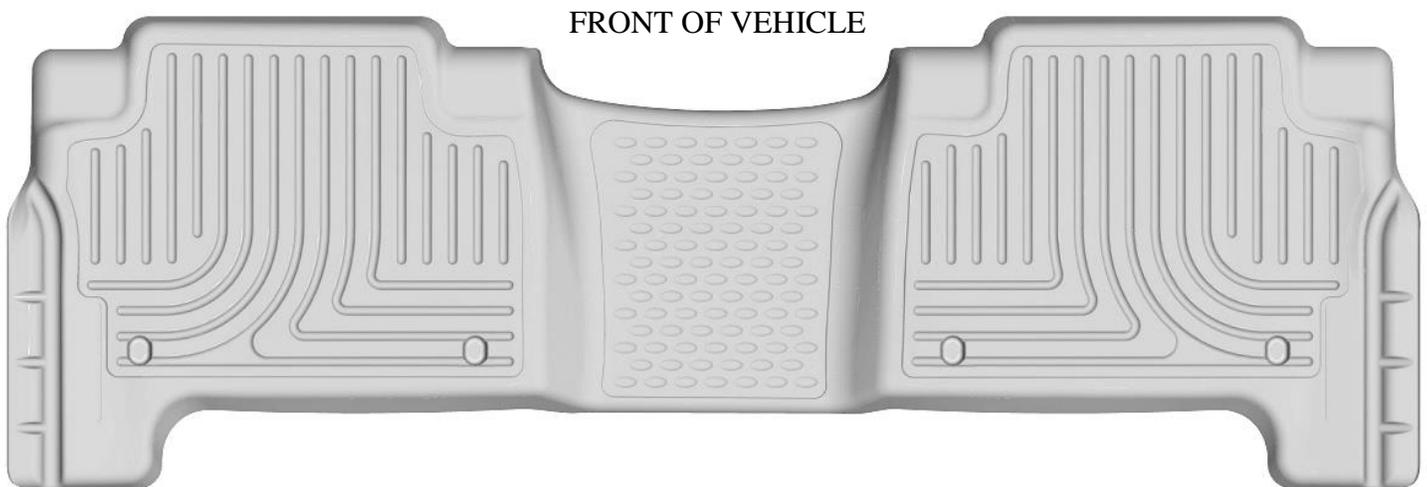

TO EASE INSTALLATION OF YOUR SECOND SEAT LINER, MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT LINER IN VEHICLE ANGLING IT SO THAT THE BACK EDGE OF THE LINER IS SEATED INTO PLACE FIRST, THEN LOWER FRONT PORTION. ONCE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.

TO ALLOW THE LINER TO SIT PROPERLY OVER THE REAR SEAT FLOOR MAT RETAINING HOOKS, POSITION THE HOOKS SO THAT THEY ARE POINTING FORWARD (HOOK TOWARD THE FRONT ROW OF SEATS).