


HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS


Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Ford F250 or F350 Super Cab truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F-SERIES SUPER DUTY SUPER CAB TRUCK FRONT FLOOR LINERS

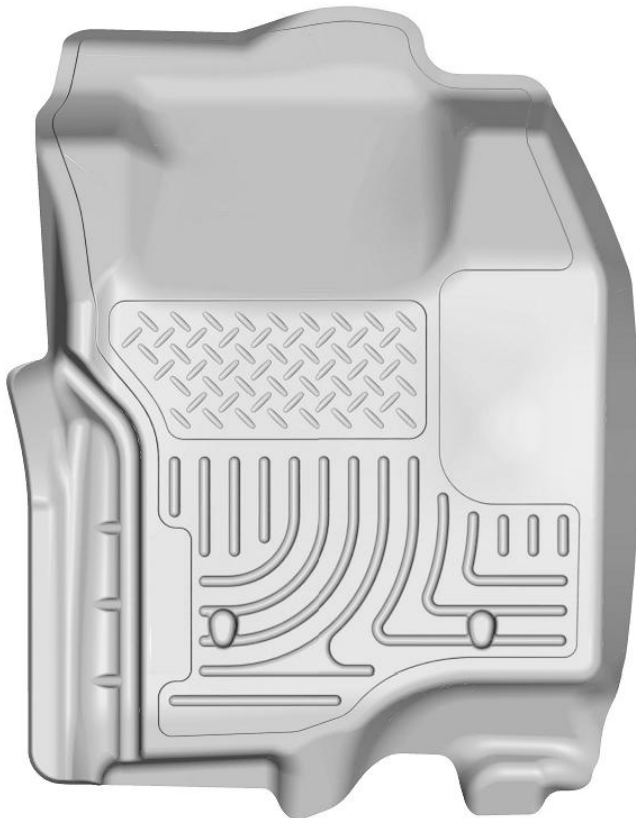

LEFT OR DRIVER'S SIDE

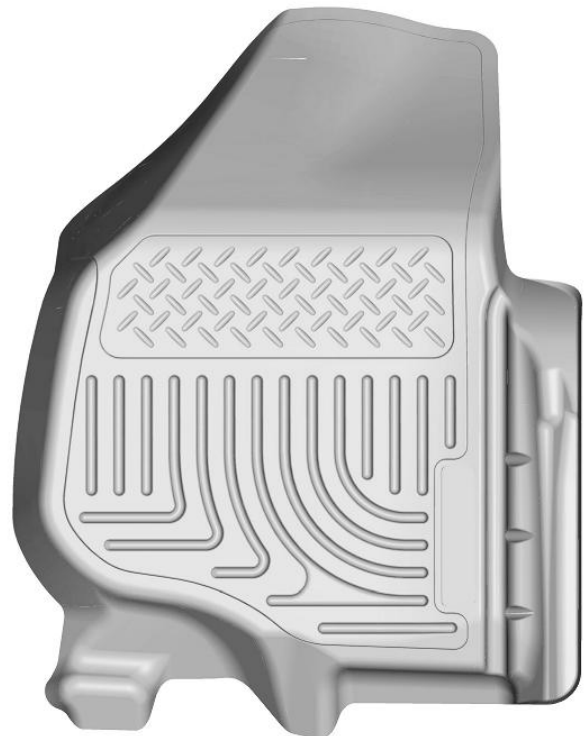

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS ALL THE WAY BACK SO AS TO ALLOW THE MOST LEG ROOM. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE FRONT SEATS AS DESIRED.

NOTE TO 2012 SUPER DUTY OWNERS--DURING A MID-YEAR CHANGE FORD ADDED A DRIVER'S SIDE FOOT REST ALONGSIDE THE KICK PANEL ON 2012 SUPER DUTY'S. PART #9872 WILL NOT FIT TRUCKS WITH THIS FOOT REST. PLEASE SEE THE NEXT PAGE FOR MORE DATA REGARDING THIS CHANGE.

HUSKY WeatherBEATER™ Custom Vehicle Floor Protection


CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Ford F250 or F350 Super Cab truck. The liner is made to take the place of your factory floor mat. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F-SERIES SUPER DUTY SUPER CAB TRUCK 2nd SEAT FLOOR LINER


FRONT OF
VEHICLE

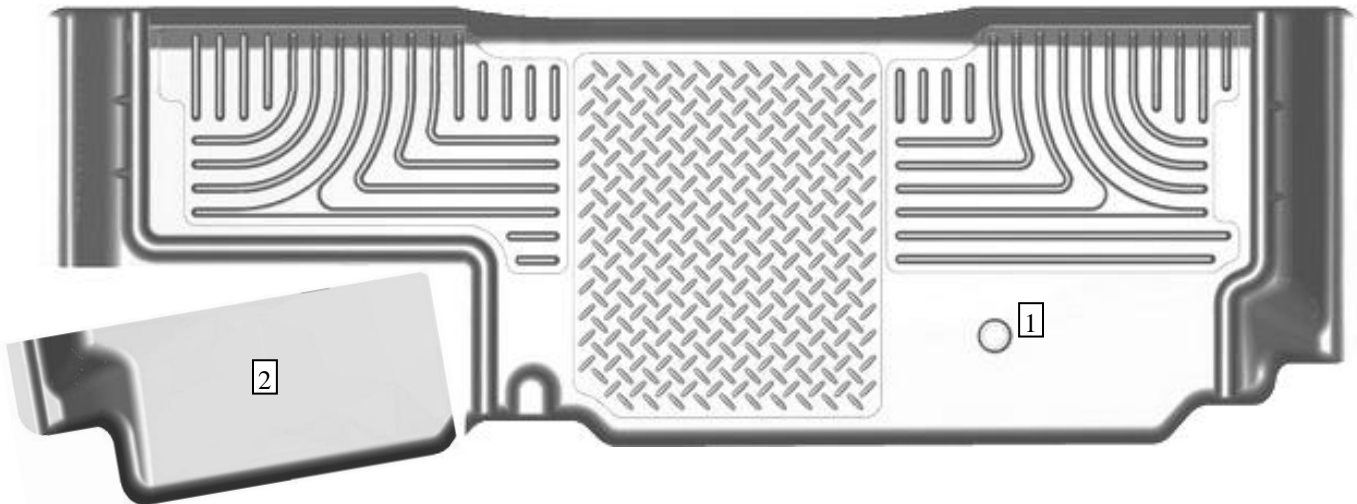


TO EASE INSTALLATION OF YOUR REAR SEAT SUPER CAB FLOOR LINER, FIRST MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT THE LINER IN YOUR VEHICLE THEN REPOSITION THE FRONT SEATS AS DESIRED.

IF YOUR TRUCK HAS THE FACTORY JACK TOOL POUCH LOCATED UNDER THE REAR PASSENGER SEAT, YOUR LINER CAN EASILY BE TRIMMED TO ALLOW THE TOOLS TO MOUNT ON TOP OF THE INSTALLED LINER. TO DO THIS, SIMPLY TRIM AWAY THE RECESSED MATERIAL FROM THE TOP OF THE RAISED LOCATING BOSS MOLDED INTO THE LINER (SEE AREA "1" ABOVE AND ATTACHED PHOTOS ON THE FOLLOWING PAGE). NEXT, REMOVE THE JACK TOOL POUCH ASSEMBLY BY REMOVING THE WING NUT RETAINING STUD. WITH THIS DONE, INSTALL YOUR LINER AND REPLACE THE TOOL POUCH ASSEMBLY, SECURING IT IN PLACE WITH THE ORIGINAL BRACKETS AND WING NUT STUD.

IF YOUR TRUCK HAS A FACTORY SUBWOOFER UNDER THE REAR DRIVER'S SIDE SEAT (SEE AREA 2 ABOVE), PLEASE REFER TO THE TRIMMING INSTRUCTIONS ON THE OPPOSITE PAGE.

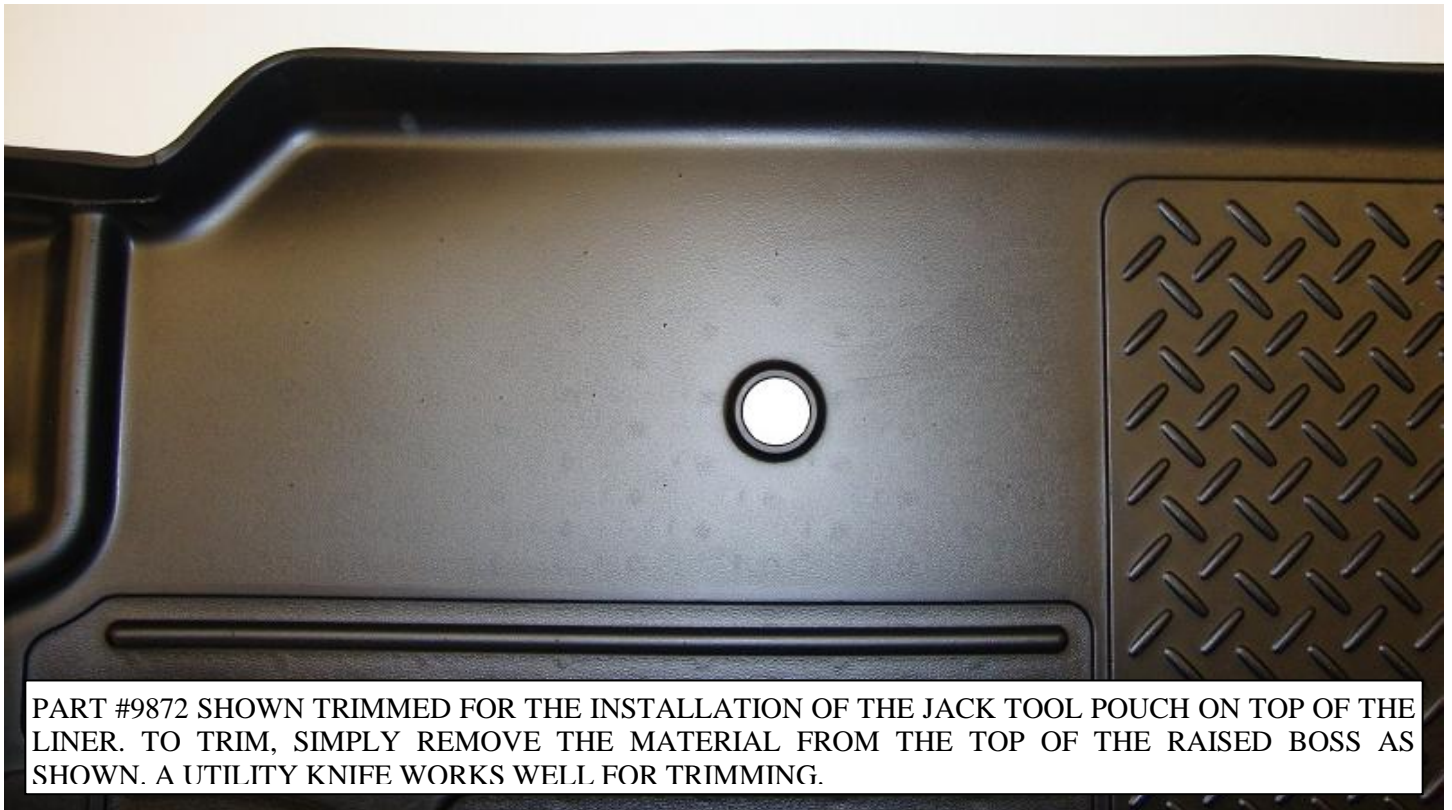


PART #9872 SHOWN TRIMMED FOR THE INSTALLATION OF THE JACK TOOL POUCH ON TOP OF THE LINER. TO TRIM, SIMPLY REMOVE THE MATERIAL FROM THE TOP OF THE RAISED BOSS AS SHOWN. A UTILITY KNIFE WORKS WELL FOR TRIMMING.

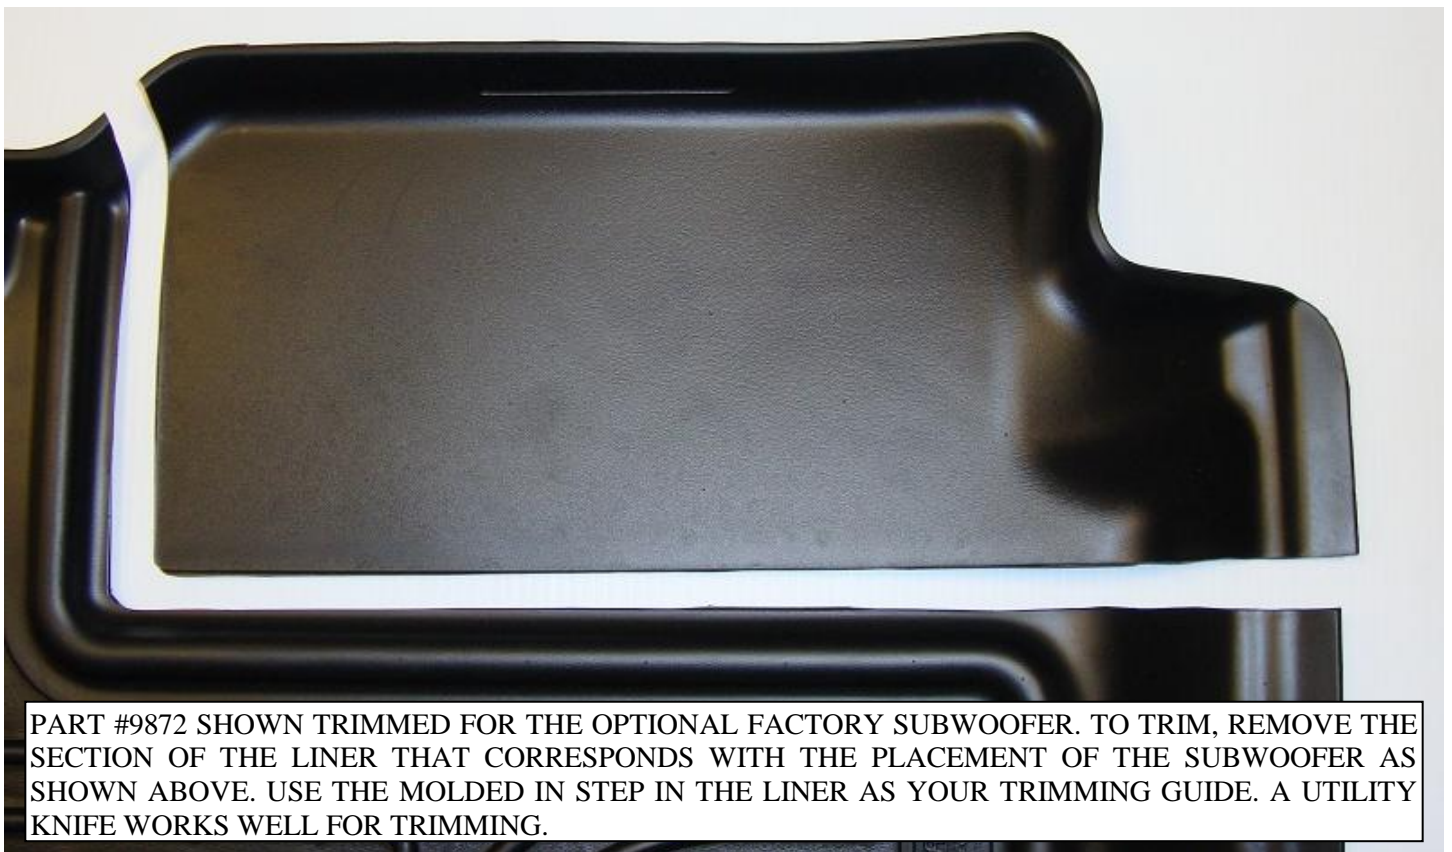

PART #9872 SHOWN TRIMMED FOR THE OPTIONAL FACTORY SUBWOOFER. TO TRIM, REMOVE THE SECTION OF THE LINER THAT CORRESPONDS WITH THE PLACEMENT OF THE SUBWOOFER AS SHOWN ABOVE. USE THE MOLDED IN STEP IN THE LINER AS YOUR TRIMMING GUIDE. A UTILITY KNIFE WORKS WELL FOR TRIMMING.

BELOW IS A PHOTO OF THE FOOT REST ADDED MID-YEAR TO THE 2012 SUPER DUTY. IF YOUR TRUCK HAS THIS FEATURE, YOU WILL NEED PART #9972 FOR THE PROPER FITMENT. PLEASE CONTACT YOUR RETAILER OR CALL US AT 800-344-8759 TO GET PART #9972.

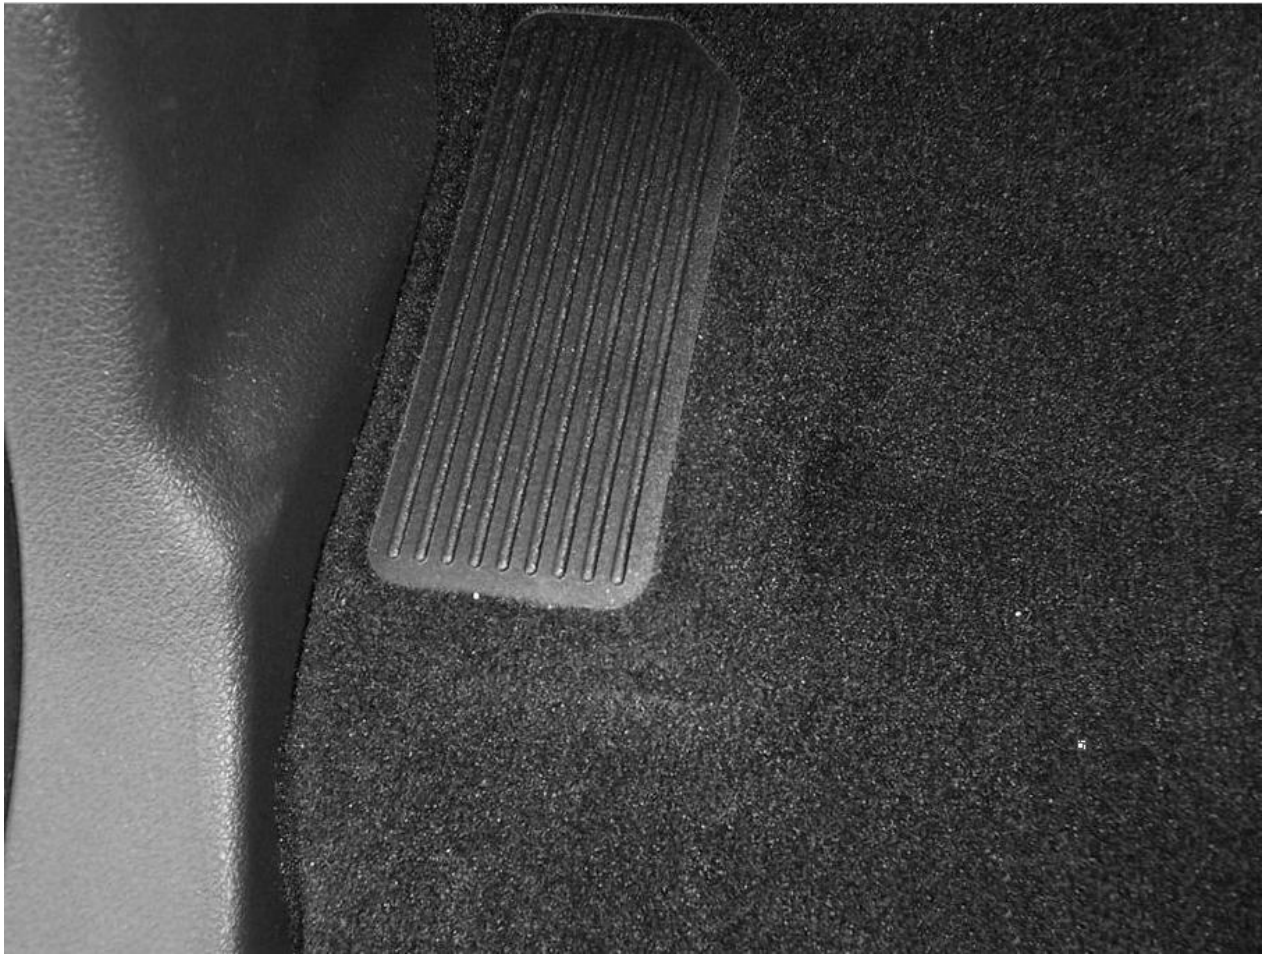

HUSKY LINERS PRODUCT WARRANTY

Husky Liners guarantees to the original purchaser of Husky Liners products that they will not break or tear under normal usage during the life of the motor vehicle in/on which they are installed. This warranty shall only be effective while the original purchaser owns the motor vehicle and shall not apply to Husky Liners products that have been removed from the original vehicle on which they were installed. This warranty applies only to those parts that are correctly installed in/on the vehicle for which they were intended.

Husky Liners will warrant any part during the warranty period that proves defective in material and/or workmanship under normal installation, use, service, or maintenance. Return alleged defective part to the place of purchase for replacement or refund. Please have a copy of your purchase receipt available when you call. The foregoing is the only express warranty made by the manufacturer and is limited to the duration of this warranty. **ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LABOR CHARGES, INJURIES, OR ANY OTHER LOSS OR DAMAGES WHATSOEVER, INCLUDING THOSE INCURRED IN INSTALLATION ARE EXCLUDED. ADDITIONALLY, PAINTING OF REPLACEMENT HUSKY LINER PARTS AND ANY VEHICLE COMPONENT REPAIR OR REPLACEMENT AS WELL AS INCIDENTAL DAMAGES ARE EXCLUDED.**

This warranty is void for damages to the product due to misuse, abuse, neglect, accident, improper installation or any use that violates the instructions furnished by us.

ABNORMAL WEAR AND TEAR ARE NOT COVERED UNDER THIS WARRANTY. Obviously, if your dog chews up your Husky Liner product, it's not covered under the warranty. Likewise, if you shut your Husky Liner in the door of your vehicle, damage to the liner and/or door are not covered. Commonplace, everyday wear on a particular product is considered normal, and is not covered under warranty repair.