



WEATHERBEATER™ FLOOR LINERS

PT #9892

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Floor Liner from Husky Liners. Your new front floor liners are custom molded to fit your Toyota Prius. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA PRIUS FRONT FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR TOYOTA PRIUS FRONT FLOOR LINERS, FIRST MOVE THE FRONT SEATS TO THEIR REAR MOST POSITION. WITH THIS DONE, THE FACTORY CARPET HOOK(S) FOUND IN THE DRIVER'S SIDE CARPET OF 2010-2011 VEHICLES CAN BE EASILY REMOVED. REMOVING THE HOOK(S) WILL ALLOW YOUR LINER TO LAY COMPLETELY FLAT. TO REMOVE, APPLY FIRM AND EVEN PRESSURE WHILE LIFTING THE END OF THE HOOK ARM UP. ONCE THE HOOK(S) ARE REMOVED, INSTALL THE LINERS AND REPOSITION SEATS AS DESIRED. SEE BACK OF THIS PAGE FOR ADDITIONAL DETAILS ON HOOK REMOVAL.



WEATHERBEATER™ FLOOR LINERS

PT #9892

REMOVAL OF FACTORY HOOKS IN 2010-2011 PRIUS MODELS

- 1) REMOVE THE EXISTING FACTORY MAT HOOKS AS SHOWN IN IMAGE 1 AND IMAGE 2 BELOW. MODERATE EFFORT IS REQUIRED TO POP THE FACTORY HOOKS OUT. NEWER GENERATIONS OF THE FACTORY HOOK HAVE A CENTER SPREADER THAT MUST FIRST BE REMOVED BEFORE THE HOOK WILL RELEASE - SEE IMAGES 3 AND 4 BELOW. ONCE THE SPREADER IS REMOVED, THE HOOK WILL POP OUT JUST AS WITH THE OLDER STYLE HOOKS. YOU CAN VIEW A YOUTUBE VIDEO OF THE HOOK REMOVAL BY ACCESSING THIS LINK-- http://www.youtube.com/watch?v=5P-d_BkQ6Uc.

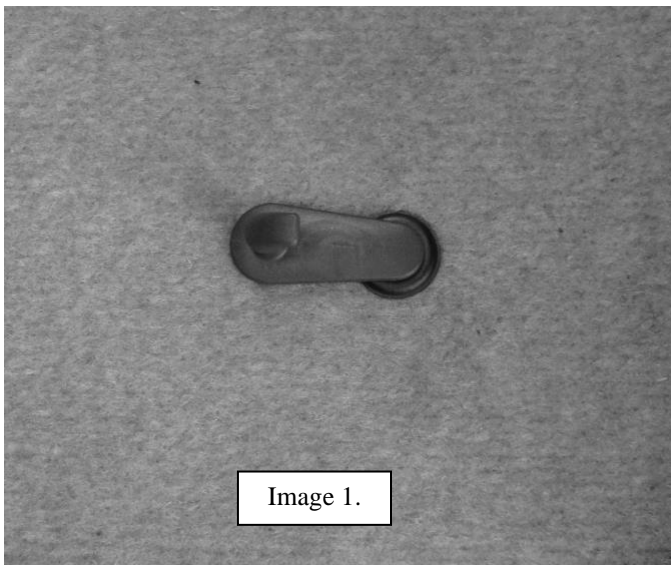


Image 1.

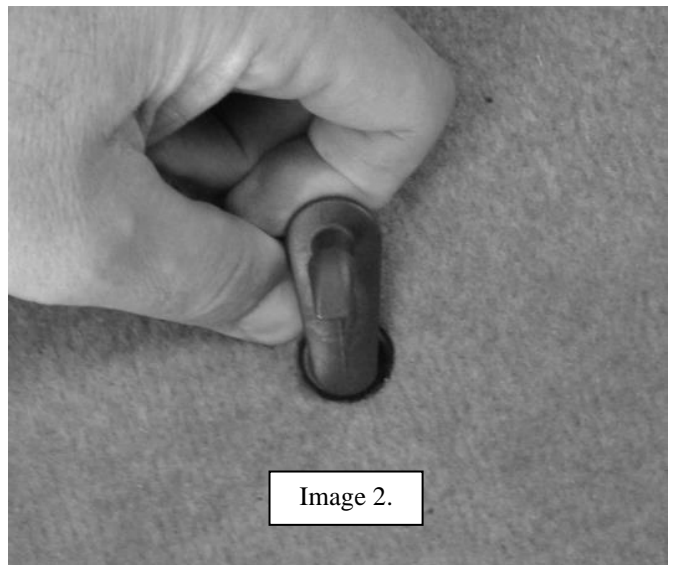


Image 2.



Image 3.

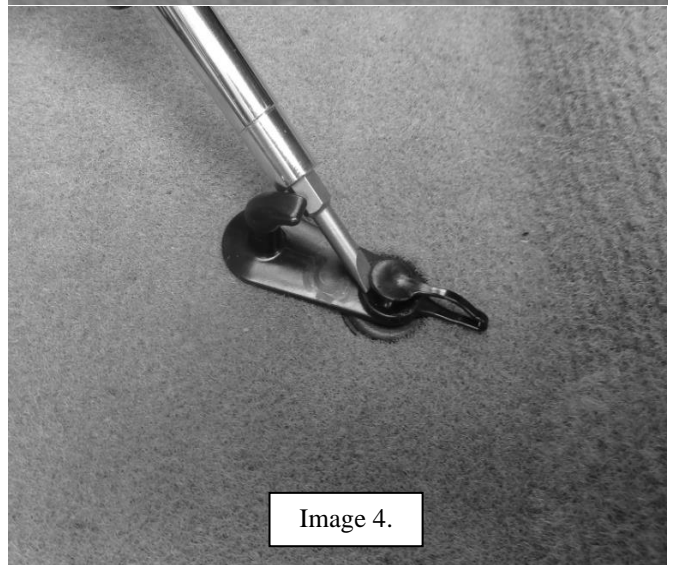


Image 4.



WEATHERBEATER™ FLOOR LINERS

PT #9892

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Floor Liner from Husky Liners. Your new second seat liner is custom molded to fit your Toyota Prius. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, *do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA PRIUS SECOND SEAT FLOOR LINER



TO EASE INSTALLATION OF YOUR SECOND SEAT LINER, FIRST MOVE BOTH FRONT SEATS TO THEIR MOST FORWARD POSITION. NEXT, INSTALL THE LINER, ORIENTING IT AS SHOWN ABOVE. ONCE YOU HAVE INSTALLED YOUR LINER, REPOSITION THE FRONT SEATS AS DESIRED.