

FACTORY BUMPER LED FOG LIGHT MOUNT LBKT31CH-H

2015 GMC SIERRA HD

6/26/14

Recommended Light: Rigid Dually or D2

Hardware Kit Includes:

1. (4)-3/8"-16x1" Hex Head Bolt
2. (4)-3/8" Flat washer
3. (4)-3/8" Hex head nut
4. (4)-3/8" Lock washer


Components List:

1. (2) – Mounting brackets (LBKT031CH-H)



LOOSE FIT ALL COMPONENTS.
DO NOT TIGHTEN UNTIL ALL
COMPONENTS ARE INSTALLED
AND ADJUSTED.

Driver Side

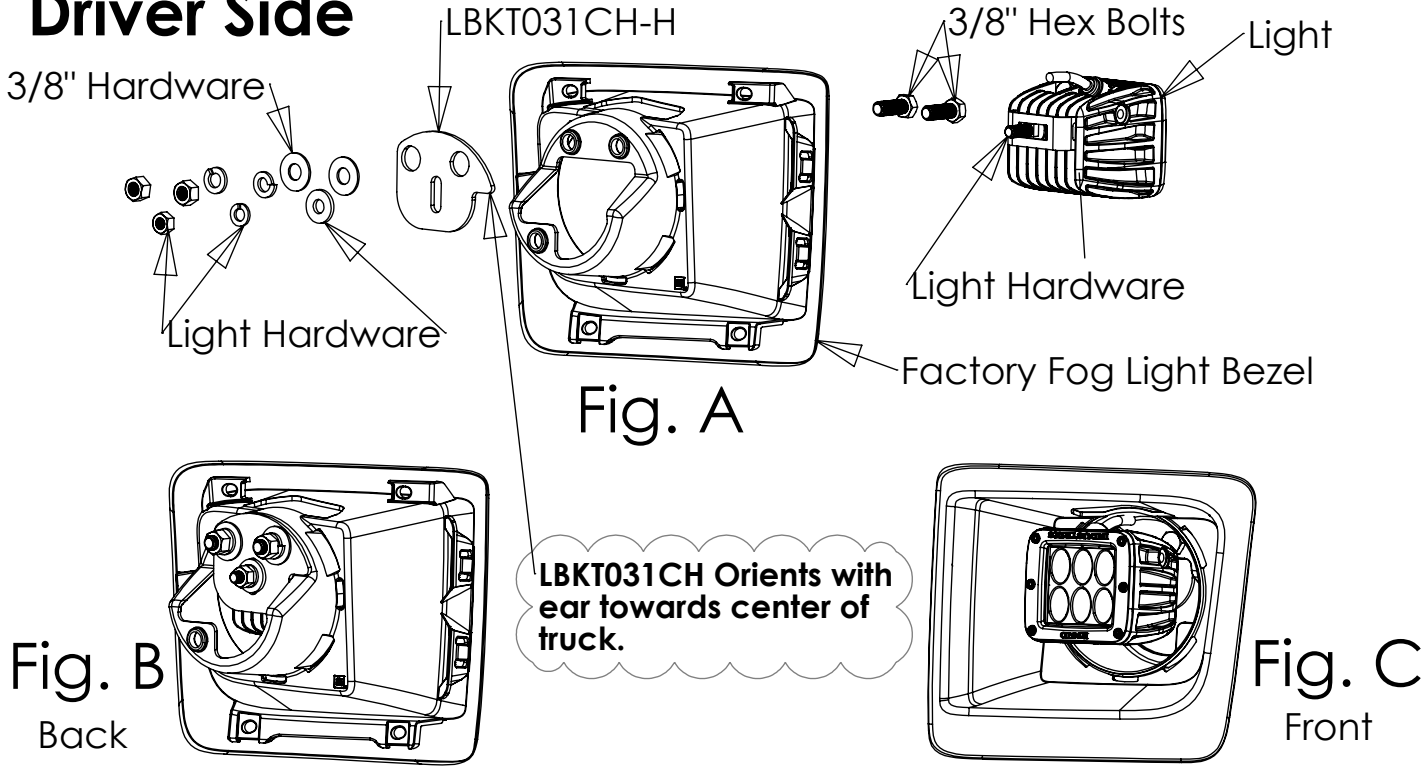

LBKT031CH-Oriented with
ear towards center of
truck.

Step by Step Instructions:

- STEP 1. Open hood of vehicle and disconnect negative battery terminal.
- STEP 2. Unplug OE fog light wiring harness by pinching release tab on top of OE plug on the back of the fog light.
- STEP 3. You will now need to remove the factory fog lights. The fog lights are held in with three plastic push tabs. Each push tab is flared to clip into place. Using pliers, gently squeeze the flares to release the tab out the front of the bumper.
- STEP 4. Next, load LBKT031CH in from the rear of the OE fog light bezel and line up the top two holes in LBKT031CH (FIG. A). Insert the two 3/8-16x1" hex head bolts from the front of the bumper through the factory fog light bezel and LBKT031CH. Install flat washer, lock washer and nut onto the 3/8" bolts and tighten.
- STEP 5. Depending on your selected light, it may be necessary to flip the mount that came with your light so when it is installed it will center in the factory fog light bezel.
- STEP 6. Using hardware provided with your light, install from the front of the bezel into the slotted hole in LBKT031CH. Once light is centered in the bezel, tighten light to LBKT031CH (FIG. A & FIG. B).
- STEP 7. Wire your LED fog lights to the light manufacturer specifications.
- STEP 8. Reconnect the negative battery cable and enjoy. It is recommended to re-torque all mounting hardware periodically to ensure safety and longevity of your new LED lights and mount. Refer to vehicle manual for aiming fog lights properly.