



Mounting Instructions for KC 7303 ATV Light Brackets on 3/4" & 1" Round Bars

Thank you for choosing a KC HiLiTES product. We take pride in building the highest quality, best engineered parts possible. Your satisfaction with our product is important. So if you have any problems or questions, please contact customer service at 800-528-0950.

Parts Included:

- Bracket top (flat)
- Bracket bottom (curved)
- 3/8" bolt, nut & washer
- Shim set for 3/4" bar

First determine the diameter of the bar on which you are mounting this bracket. Then follow the instructions below for your size bar.

1 INCH BAR

(do not use rubber shims)

1. Slip the curved bottom piece around the bar from the underside. Hold in place while placing the flat piece on top of the bar.
2. Align the inside holes and loosely bolt the brackets together.
3. Attach your light to the outside hole and tighten securely.
4. Tighten the inside bolt until bracket is secure.

3/4 INCH BAR

1. Clean both parts of the bracket with rubbing alcohol or similar solution.
2. Find the 7/8" x 1 3/8" rubber shim. Peel off the protective backing and place it in the middle of the flat top bracket. (see figure 1) *Press firmly in place.*
3. Find the 1 1/2" x 1 3/8" shim. Peel off the protective backing and place it in the center of the "U" shaped area of the curved bottom bracket. (see figure 1) *Press firmly in place.*
4. Slip the curved bottom piece around the bar from the underside. Hold in place while placing the flat piece on top of the bar.
5. Align the inside holes and loosely bolt the brackets together.
6. Attach your light to the outside hole and tighten securely.
7. Tighten the inside bolt until bracket is secure.

NOTE - The holes in the bracket will accommodate a 3/8" bolt. If your light bolt is larger, you will have to enlarge the hole.

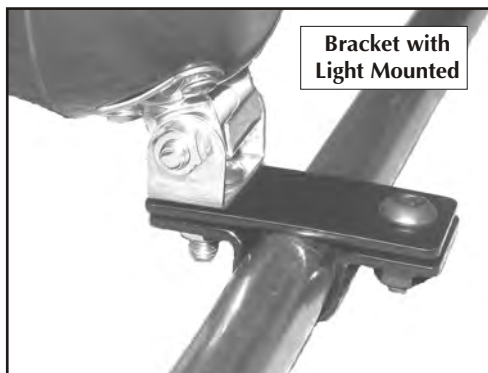


Fig. 1

