



**Installation Instructions for  
Front Light Bar KC 74031  
Fits 97-06 Jeep Wrangler w/winch**

Thanks for choosing a KC HiLITES product. We take pride in building the highest quality, best engineered systems possible. Your satisfaction with our product is important, so if you have any questions, please call our customer service line at 800-528-0950.


**Parts Included:**

- 1 - Front Light Bar
- 2 - Mounting brackets
- 4 - 3/8" x 1" black bolt
- 4 - 3/8" black locking nut
- 4 - 3/8" black flat washer



**Installing the Bar**

1. Remove the stock fog lights. They will interfere with the mounting of the bar.
2. Using a #55 Torx bit, remove the bolts holding the two tow hooks. **NOTE - Some vehicles may not have tow hooks, but the same bolts will be used.**
3. Locate the mounting bracket marked *DRIVING*. Using the hardware supplied, loosely attach the bracket to the end of the light bar with the 90 degree bend facing toward the center of the bar (see photo "A"). Similarly, attach the other bracket to the other end of the bar.
4. Align the KC bar mounting plates with the tow hook bolt holes. If you have tow hooks, reverse their position (that is left on right side & right on left side). Now place the tow hooks on top of the bar mounting plate, re-insert the bolts and tighten securely.
5. Align the bar so the light tabs are level and tighten all hardware.

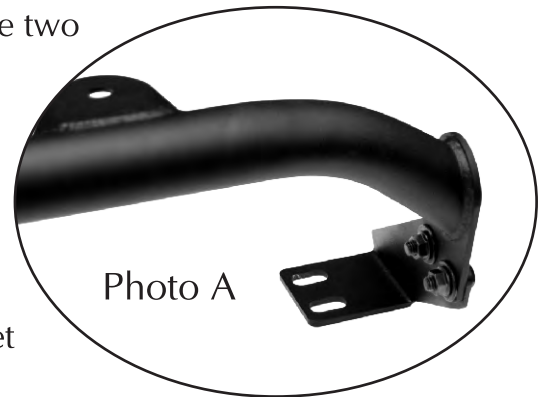

You're DONE! ----- Install your KC lights and enjoy.



**IF YOU HAVE ANY PROBLEMS  
OR QUESTIONS, PLEASE CALL  
CUSTOMER SERVICE AT 800-528-0950**