




Installation Instructions for KC 7404 Hood Mount Utility Bar For 97 - 05 Jeep Wrangler

Thanks for choosing a KC HiLiTES product. We take pride in building the highest quality, best engineered systems possible. Your satisfaction with our product is important, so if you have any questions, please call our customer service line at 800-528-0950.

Installing the Bar

1. Remove the six bolts securing the hood to the hinges .
2. Place the KC bar on top of the hinges and align the bolt holes on the hood, hinge and bar .
3. Using the bolts and washers supplied, start threading the bolts in each of the six holes.
4. Ensure all parts are aligned properly, then tighten all six bolts.

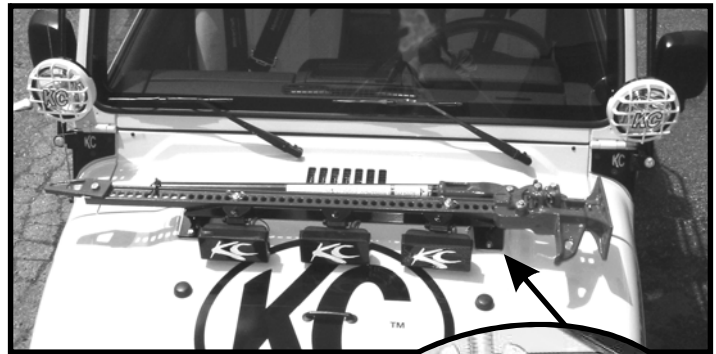

Attaching a Hi-Lift Jack

1. Find the two collared bolts included and insert them head first into the end of each of the slots on top of the bar. Position them so they will fit through any of the holes in the Hi-Lift jack.
2. Attach the wing nuts to hold the jack in place.

Adding KC Lights

We suggest one of the KC SportLite series lights, as these will fit easily hanging from any of the three light tabs on the bar. Call KC HiLiTES at the number below for a current catalog and suggested options.

You're DONE! - - - - - Enjoy your new KC products.



IF YOU HAVE ANY PROBLEMS
OR QUESTIONS, PLEASE CALL
CUSTOMER SERVICE AT 800-528-0950