

Thanks for choosing a KC HiLiTES product. We take pride in building the highest quality, best engineered systems possible. Your satisfaction with our product is important, so if you have any questions, please call our customer service line at 800-528-0950.


Please Read First ...

If your Toyota FJ has a TRD (Toyota Racing Development) skid plate installed (pictured at right), you must remove it and cut it as shown, before the light bar can be mounted. The skid plate can be taken off by removing the six bolts as shown in the photo. Install the KC bar on the vehicle following the instruction below before reinstalling the skid plate.

If you do not have the skid plate as pictured, continue with instructions below

Hardware Included

1 - Front Light Bar	2 - Spacers
2 - Mounting Brackets	4 - 3/8" black lock nut
2 -12mm -1.75 x 70 bolts	4 - 3/8" black flat washer
2 -12mm lock washer	4 - 3/8" x 1" black bolt

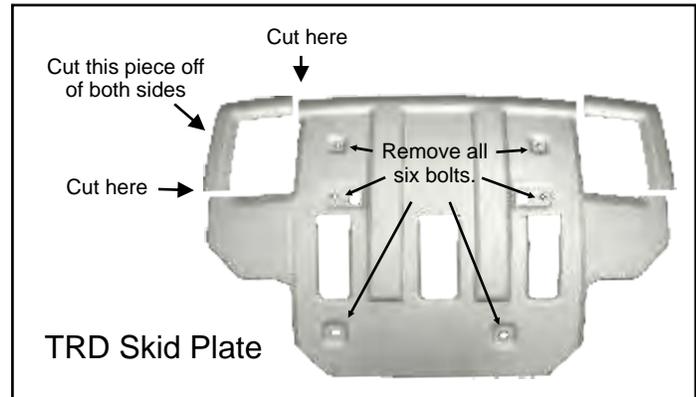

Installing the Bar

1. Locate the 3 studs on the front of each frame rail, behind the bumper cover. NOTE - These are the 3 studs pointing forward toward the outside.
2. Remove the nuts from each of the three studs. NOTE - Do not discard the nuts, as they will be reused.
3. Position the light bar brackets over the 3 studs on each side that you removed the nuts from.
4. Loosely install the upper nut on the left and right studs on the front of the frame rails.
5. Locate the hole towards the rear of each light bar bracket.
6. Place the supplied spacer between the light bar bracket and the frame. Line up with the rearward hole in each light bar bracket.
7. Insert and start the supplied bolt with lock washer, through the light bar bracket, the spacer and the threaded hole of the frame.
8. Install the remaining nuts and loosely tighten all on the 3 studs on each side of the frame.
9. Loosely tighten the supplied 12 mm bolts into the frame.
10. Place the light bar between the two brackets, align the holes and push all four bolts through the bracket and then the bar. Add the flat washers and loosely install the nuts.
11. Align and level bar and brackets, then securely tighten all bolts and nuts.
12. If you had previously removed the TRD skid plate for altering, you should now reinstall it using the six bolts that held it initially.
13. Your DONE! ---- Install your KC lights and enjoy.



IF YOU HAVE ANY PROBLEMS
OR QUESTIONS, PLEASE CALL
CUSTOMER SERVICE AT 800-528-0950