



Part Number 57-0369 INSTALLATION INSTRUCTIONS

Nissan 200 SX 2.0L 16v Turbo 1996-1999

1. Unclip & remove the electrical harness plug from the Mass Air Sensor (MAS).
2. Unclip and remove the original air intake scoop. (Fig. 1).
3. Loosen the hose clip and remove the intake hose from the MAS. (Fig. 2)
4. Unclip & remove the air box lid and filter. (Fig. 3)
5. Undo the bolt & 2 nuts, then remove the air box base. (Fig. 4)
6. Unbolt the MAS from the air box lid. (Fig. 5)
7. Ensuring the rubber O' ring is still in place on the MAS, fit the new Adaptor plate using the 3 short allen bolts & nylock nuts supplied. Leave the bolt-hole shown free, as this will be required to mount the MAS. (Fig. 6)
8. Loosely fit the bracket supplied to the rear air box-mounting stud, using the nylock nut and washer supplied. (Fig. 7)
9. Fit the MAS into the original intake hose & tighten the hose clip.
10. Fit the long allen bolt into the free bolt hole on the adaptor then into the bracket and secure with the nylock nut & washer supplied. (Fig. 8)
11. Now fully tighten the nut securing the adapter-fixing bracket to the rear air box mounting.
12. Fit the Filter Charger onto the adaptor plate and firmly tighten the hose clip. (Fig. 9)
13. Reconnect the electrical connector onto the MAS. (Fig. 10)
14. Installation is now complete.

Parts list:

- 1 x Air filter
- 1 x #104 Filter Hose Clip.
- 1 x Literature Pack.
- 1x Black adapter plate.
- 1 x Mounting Bracket
- 1 x Fixing Kit :-
 - 5 x M6 Nylock Nuts.
 - 3 x M6x20mm Allen Bolt.
 - 1 x M6x25mm Allen bolt..
 - 2 x Flat Washer.

WARNING: Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void the warranty.

FILTER MAINTENANCE: K&N suggests checking the filter periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the Recharger service kit available from your K&N dealer, part number 99- 5003EU.

For cleaning instructions please visit our website: www.knfilters.com/cleaning



Fig. # 1



Fig. # 2



Fig. # 3



Fig. # 4



Fig. # 5

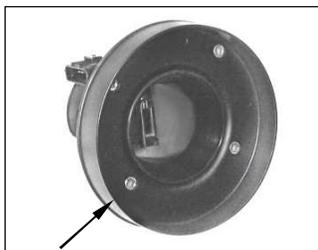


Fig. # 6



Fig. # 7



Fig. # 8



Fig. # 9



Fig. # 10

For technical support contact our European technical team: "eindhoven.tech@knfilters.com" We will try to answer your mail within 48 hours.
 For UK technical enquiries contact R&D department at 01925-636950, Mon-Thu from 8:30 am to 5 pm.
 For other K&N products and / or more information about the K&N products please visit our website: www.knfilters.com