



INSTALLATION INSTRUCTIONS

Part Number E-2019

This filter fits: **See current catalog for applications**

FREE K&N DECAL** To register your warranty, please see us online at knfilters.com/register. **FREE K&N DECAL

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedures **MUST** be followed to ensure the proper fit and seal of the K&N *Filtercharger*®.

1. Remove the screws that fasten the air filter cover.
2. Remove old air filter.
3. Wipe out any dust or dirt that may be inside the air filter housing.
4. Install the supplied hose onto the flange inside the air box. (See Fig. 1)
5. Slide both hose clamps loosely over hose with adjusting screws facing up. Ensure that clamp closest to air box wall is pressed back until it is all the way against the wall of air box. (See Fig. 2)
6. Install base of K&N filter into box first, with the tabs on top of filter parallel to the bottom of the air box. (See Fig. 3) Make sure that the filter moves freely in mounted hose. If it is tight the mounted hose may have been pushed upon the bottom and filter will not seal. If this happens remove filter and repeat step 6.
7. Turn filter and slightly lift up so that one of the tabs on top is seated in the notch in air box. (See Fig. 4)
8. Once filter is located properly tighten both hose clamps that hold filter in place.
9. Install air box cover and fasten screws.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND USE THE PROVIDED HARDWARE MAY IMPAIR THE PERFORMANCE OF YOUR FILTER AND DAMAGE YOUR ENGINE.



Fig. 1



Fig. 2



Fig. 3

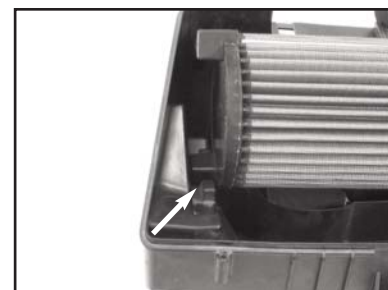


Fig. 4