



QUALITY... PLAIN & SIMPLE®

Throttle & Kickdown Bracket for Edelbrock Pro-Flo Injection Kit

Part # TCB-40EDK

Throttle & Kickdown Bracket for Edelbrock Pro-Flo Injection Kit

Part # TCB-40EDK

Building American Quality... With A Lifetime Warranty!™

10924 Murdock Dr. • Knoxville, TN 37932

TOLL FREE 1-877-469-7440 • (865) 966-2269 • FAX (865) 671-1999 • tech@lokar.com • www.lokar.com

STOP! Please read all installation instructions before beginning installation. Call Lokar for any questions or uncertainties during the installation.

WARNING: Disconnect battery before beginning installation. Make sure vehicle is in Park. Before making adjustments and taking shifter out of gear, be sure that the vehicle's parking brake is set and scotched to avoid movement of the vehicle.

Throttle & Kickdown Bracket Installation

- Step 1:** Remove Pro-Flo throttle body from intake manifold. Install Lokar aluminum spacer with a gasket on both sides. Reinstall throttle body. (See **Photo 1**)
- Step 2:** Install billet aluminum main bracket to throttle body spacer using the supplied two spacers and 1/4-20 x 1 3/4 flat head screws. (See **Photo 2**)
- Step 3:** Install throttle ball into the top furthest forward hole in throttle arm. (See **Photo 3**)
- Step 4:** Install spring return tab. The spring tab must be mounted on the backside of the throttle arm or it will interfere with the secondary arm. Use the hex carb fitting to attach the spring tab. (If a kickdown cable is not being used, use the 1/4-28 x 1/2 button head and 1/4-28 nylock nut supplied) Tighten this tab until there is no movement. Then loosen stud enough so that the tab swings freely. (See **Photo 4**)
- Step 5:** Install throttle and kickdown cable. This bracket is designed to work with a Lokar throttle cable and kickdown cable. Please refer to throttle and kickdown installation instructions. (See **Photo 5**)

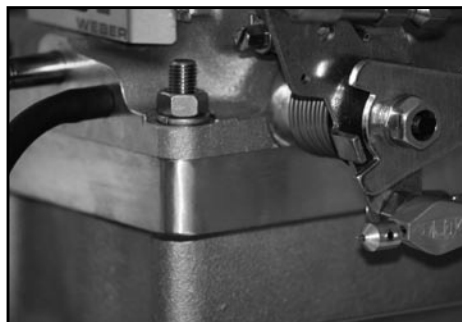


Photo 1



Photo 2



Photo 3



Photo 4

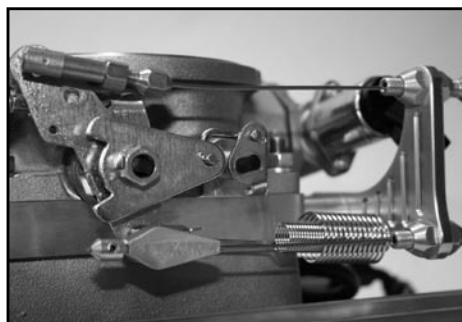


Photo 5

Kit Contents:

- 1) Lokar billet aluminum linkage plate
- 2) Aluminum spacers
- 1) Lokar billet aluminum throttle body spacer (drilled & tapped)
- 2) Lokar springs
- 1) Lokar spring return tab
- 1) Lokar hex carb fitting and nut
- 2) 1/4-20 x 1 3/4 flat head stainless screws
- 1) 1/4-28 throttle stud and nut (special)
- 1) 1/4-28 x 1/2 button head screw
- 1) 1/4-28 nylock half nut
- 4) 5/16 stud 2 1/4" long
- 4) 5/16-24 internal star washer
- 4) 5/16-24 jam nut
- 1) Pro-Flo spacer gasket