


IC2651

2013-2015 HYUNDAI VELOSTER TURBO
INTERCOOLER PIPE KIT

MBRP
INC.
PERFORMANCE EXHAUST

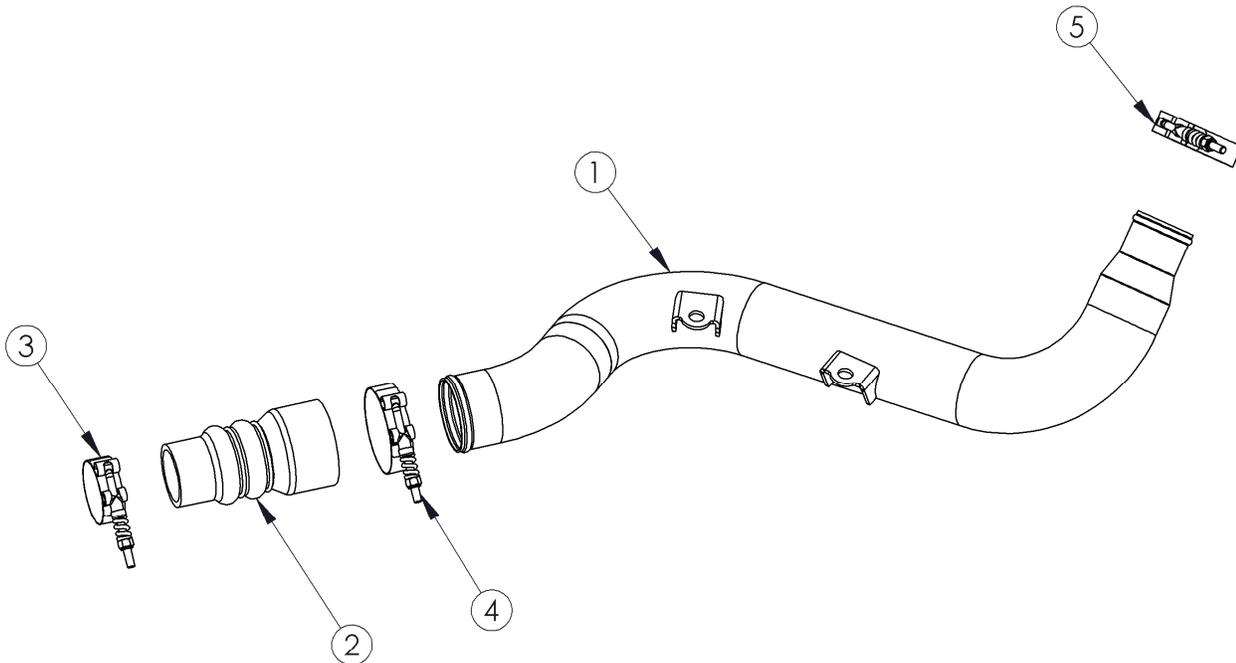

1. INTERCOOLER INLET PIPE
2. 2.5" TO 1.75" HOSE COUPLER
3. 1.75" HOSE CLAMP
4. 2.5" HOSE CLAMP
5. 2" HOSE CLAMP

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this kit are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before starting:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the kit you have purchased is appropriate for your year and model of vehicle.
- that the kit will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this kit on your vehicle please contact your dealer before commencing installation.

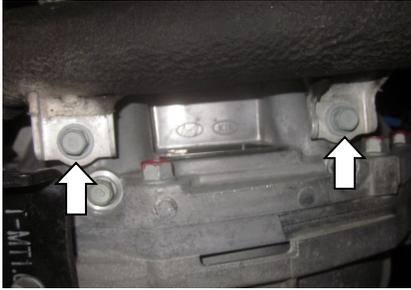


Figure 1



Figure 2



Figure 3



Figure 4



Figure 5

Removal of Stock Pipe:

1. Remove the two hex bolts holding the stock pipe in place. Retain the bolts for reuse when installing the new pipe. **Refer to Figure 1.**
2. Loosen the clamp securing the stock hose to the intercooler inlet. **Refer to Figure 2.**
3. Loosen the clamp securing the stock pipe to the hose from turbo, and remove the stock pipe. **Refer to Figure 3.**

Installation of MBRP Inc. Intercooler Pipe:

NOTE: ENSURE THAT THE INSIDE OF THE INTERCOOLER PIPES ARE CLEAN BEFORE INSTALLATION.

1. Install the **2.5" to 1.75" Hose Coupler** onto the outlet end (2.5") of the **Intercooler Pipe** using the **2.5" Hose Clamp**. Do not fully tighten the clamp at this point.
2. Insert the inlet side of the **Intercooler Pipe** into the turbo hose using the **2" Hose Clamp** to secure it (**Refer to Figure 4**), and then place the **2.5" to 1.75" Hose Coupler** onto the intercooler inlet with the **1.75" Hose Clamp** to secure it.
3. Position the **Intercooler Pipe** to align the mounting bracket holes with the vehicle mounting holes and reinstall the hex flange bolts that were removed previously. **Refer to Figure 5.**
4. Tighten all hose clamps.
5. Verify that there is adequate clearance around all hoses, wiring, covers, etc. If not, relocate or adjust.

Congratulations! You are ready to begin experiencing the improved power and driving excitement of your MBRP Inc. intercooler pipe upgrade. We know you will enjoy your purchase.