

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.


IC2653 © 02/15 PAGE 1 OF 2





Removal of Stock Assembly:

1. Loosen the upper hose clamp on the turbocharger outlet. Refer to Figure 1.

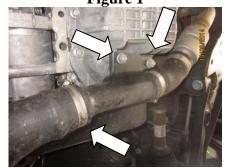

2. Loosen the hose clamp on the factory intercooler hose. Remove the two nuts securing the mounting bracket to the oil pan. Retain the hardware as it will be re-used.

Refer to Figure 2.


3. Remove the stock pipe.




Figure 2

Installation of MBRP Inc., Intercooler Pipe:

- 1. Place the **Hose Coupler** and **Hose Clamps** onto the turbocharger end of the Intercooler Pipe.
- 2. Install the **Hose Coupler** onto the turbocharger outlet. Refer to Figure 3.





Refer to Figure 4.

5. Tighten the **Hose Coupler Hose Clamps** fully. Refer to Figure 5.



Figure 4



Figure 5

Congratulations! You are ready to begin experiencing the improved power and driving experience of your MBRP Inc. intercooler pipe upgrade. We know you will enjoy your purchase.

IC2653 © 02/15 PAGE 2 OF 2