

70-1722

**INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS**



For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)

REV. 06/08/06 INST70-1722

70-1722

**INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS**



For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)

REV. 06/08/06 INST70-1722

70-1722

**INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS**



For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.

Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)

REV. 06/08/06 INST70-1722

70-1722

**INSTRUCTIONS
FOR AMPLIFIED SOUND
SYSTEMS**



For vehicles with factory amplifiers:

In order to turn on the factory amplifier you must locate the 20-way harness that was plugged into the factory radio. In pin 16 in vehicles without navigation or pin 20 in vehicles with navigation (see diagram on reverse side) there is a Light Blue wire that you must attach to the Amp Turn On wire of the aftermarket radio for the amplifier to turn on.


Use Metra's standard wiring instructions for the remainder of the installation.

(See harness diagram on back of page)

REV. 06/08/06 INST70-1722

20 WAY HARNESS

20 WAY HARNESS - FRONT FACE

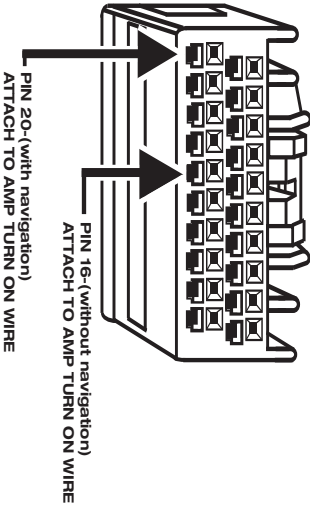

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE


1-800-221-0932

www.metroonline.com

© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION

20 WAY HARNESS

20 WAY HARNESS - FRONT FACE

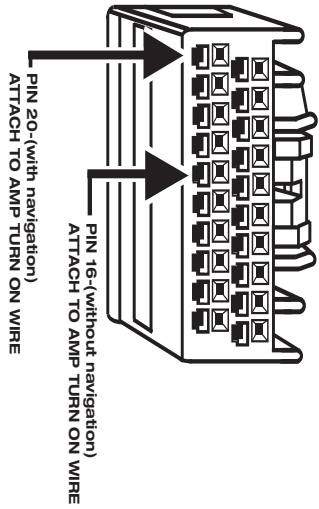

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE


1-800-221-0932

www.metroonline.com

© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION

20 WAY HARNESS

20 WAY HARNESS - FRONT FACE

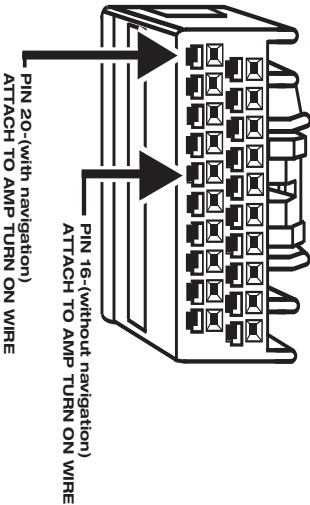

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE


1-800-221-0932

www.metroonline.com

© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION

20 WAY HARNESS

20 WAY HARNESS - FRONT FACE

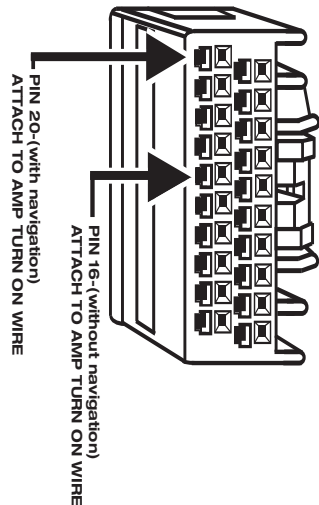

PIN 20-(with navigation)
ATTACH TO AMP TURN ON WIRE

PIN 16-(without navigation)
ATTACH TO AMP TURN ON WIRE

1-800-221-0932

www.metroonline.com

© COPYRIGHT 2004
METRA ELECTRONICS CORPORATION