



1784 SERIES INSTALLATION INSTRUCTIONS

**VOLKSWAGEN 1987-UP CAR SIDE
AND SMART CABLE HARNESSSES**



☎ 1-800-221-0932 🌐 www.metraonline.com
© COPYRIGHT 2001 METRA ELECTRONICS CORPORATION



1784 SERIES INSTALLATION INSTRUCTIONS

**VOLKSWAGEN 1987-UP CAR SIDE
AND SMART CABLE HARNESSSES**



☎ 1-800-221-0932 🌐 www.metraonline.com
© COPYRIGHT 2001 METRA ELECTRONICS CORPORATION



1784 SERIES INSTALLATION INSTRUCTIONS

**VOLKSWAGEN 1987-UP CAR SIDE
AND SMART CABLE HARNESSSES**



☎ 1-800-221-0932 🌐 www.metraonline.com
© COPYRIGHT 2001 METRA ELECTRONICS CORPORATION



1784 SERIES INSTALLATION INSTRUCTIONS

**VOLKSWAGEN 1987-UP CAR SIDE
AND SMART CABLE HARNESSSES**



☎ 1-800-221-0932 🌐 www.metraonline.com
© COPYRIGHT 2001 METRA ELECTRONICS CORPORATION


FOR 1987-97 MODELS:

For Power Antenna functions, plug the Blue wire into pin position A-11 (For Metra's 80-1784, plug the Blue wire into pin positions A-11 and B-2).

For Amp Remote functions, plug the Blue/White wire into pin position A-10 (For Metra's 80-1784, plug the Blue/White wire into pin positions A-10 and B-3).

FOR 1998-UP MODELS:

Do NOT use (or tap into) the Blue or Blue/White wires for these applications.

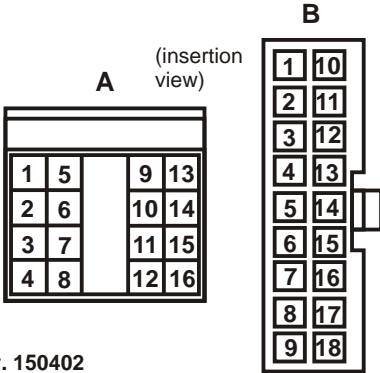

rev. 150402


FOR 1987-97 MODELS:

For Power Antenna functions, plug the Blue wire into pin position A-11 (For Metra's 80-1784, plug the Blue wire into pin positions A-11 and B-2).

For Amp Remote functions, plug the Blue/White wire into pin position A-10 (For Metra's 80-1784, plug the Blue/White wire into pin positions A-10 and B-3).

FOR 1998-UP MODELS:

Do NOT use (or tap into) the Blue or Blue/White wires for these applications.

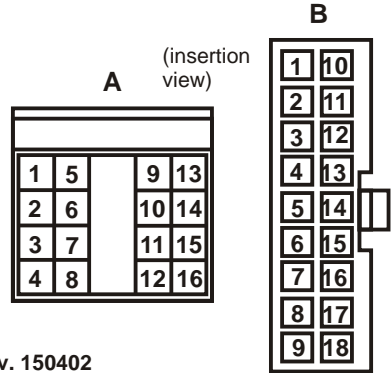

rev. 150402


FOR 1987-97 MODELS:

For Power Antenna functions, plug the Blue wire into pin position A-11 (For Metra's 80-1784, plug the Blue wire into pin positions A-11 and B-2).

For Amp Remote functions, plug the Blue/White wire into pin position A-10 (For Metra's 80-1784, plug the Blue/White wire into pin positions A-10 and B-3).

FOR 1998-UP MODELS:

Do NOT use (or tap into) the Blue or Blue/White wires for these applications.

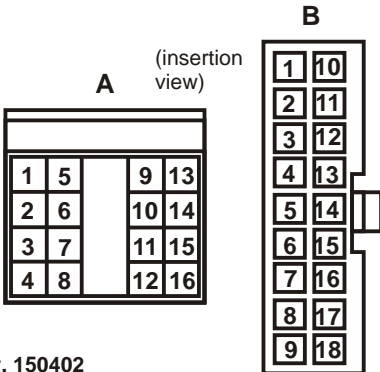

rev. 150402


FOR 1987-97 MODELS:

For Power Antenna functions, plug the Blue wire into pin position A-11 (For Metra's 80-1784, plug the Blue wire into pin positions A-11 and B-2).

For Amp Remote functions, plug the Blue/White wire into pin position A-10 (For Metra's 80-1784, plug the Blue/White wire into pin positions A-10 and B-3).

FOR 1998-UP MODELS:

Do NOT use (or tap into) the Blue or Blue/White wires for these applications.

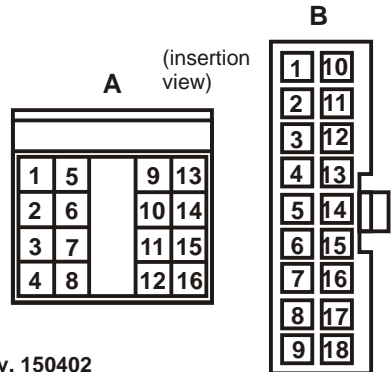

rev. 150402