


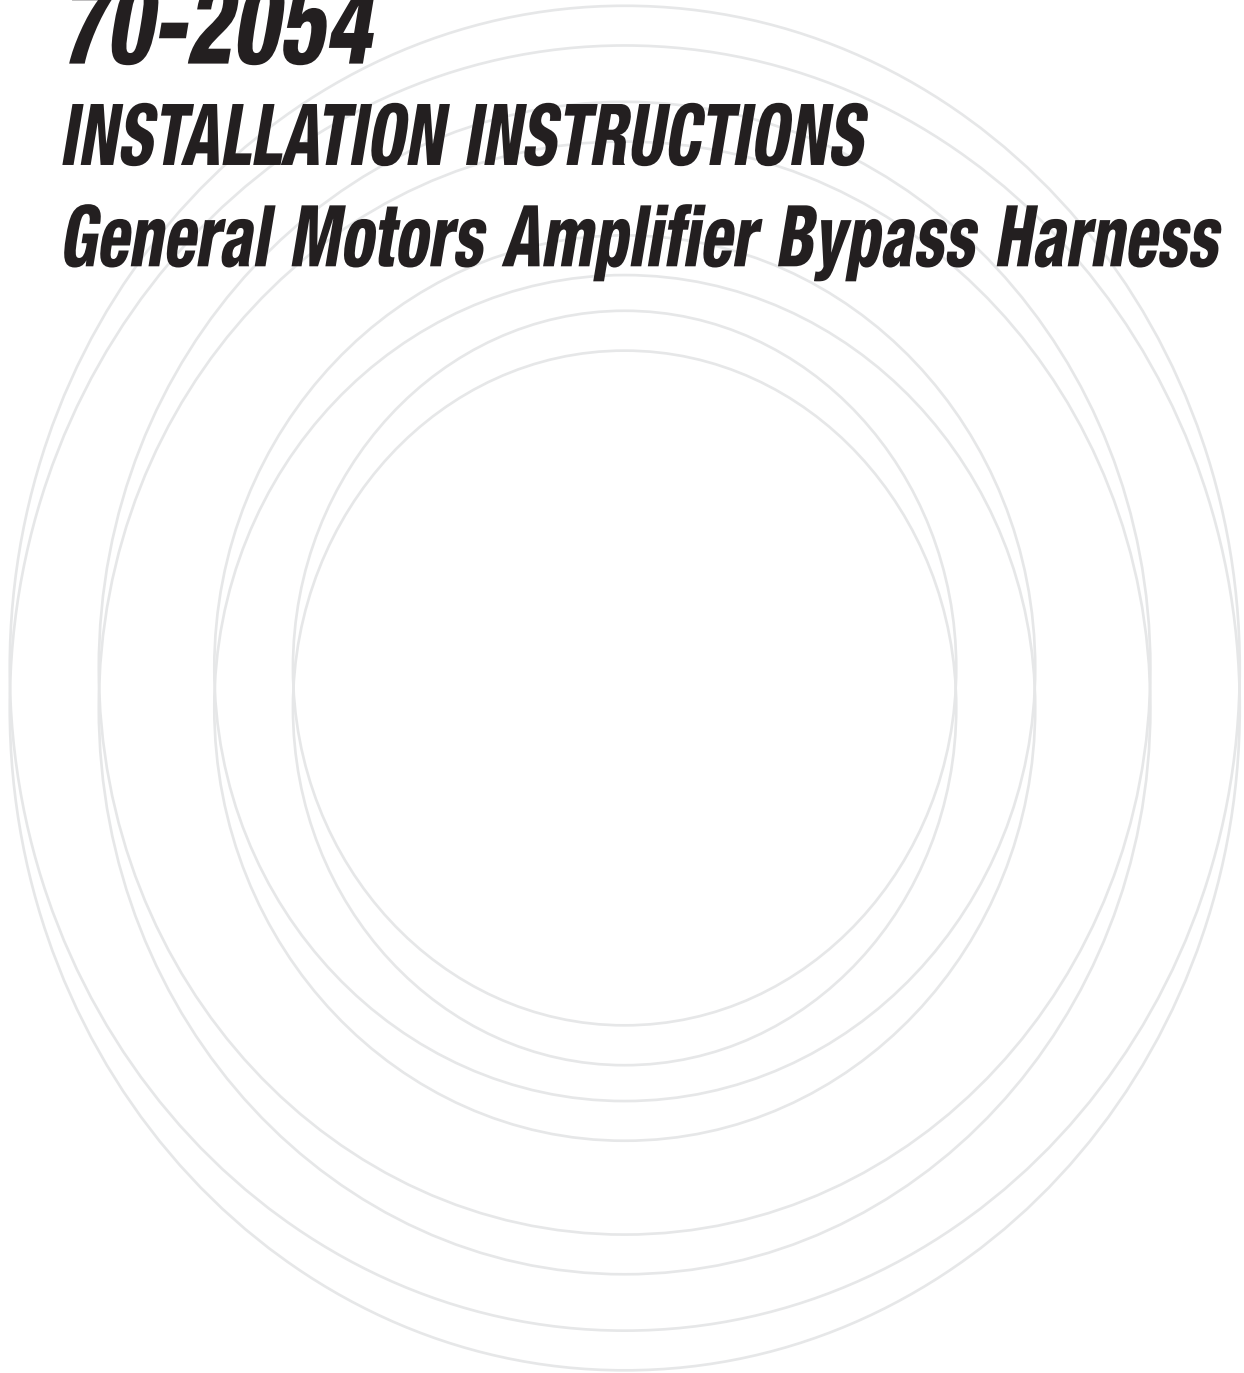

**70-2054**

**INSTALLATION INSTRUCTIONS**

**General Motors Amplifier Bypass Harness**



**1-800-221-0932**



**www.metraonline.com**

© COPYRIGHT 2001-2007 METRA ELECTRONICS CORPORATION



**CADILLAC**

- CTS 2003-07 w/ RPO code U57..... 1
- Deville 2000-05 w/ RPO code UM5..... 1
- Escalade 2000 w/ Luxury System..... 3
- Escalade 2002 w/ RPO code Y91..... 4
- Escalade EXT2002 w/ RPO code Y91..... 4
- Seville 1998-04 w/ RPO code UX8..... 2
- SRX 2004-06 w/ RPO code U57 ..... 1
- XLR 2004-08 w/ Bose System ..... 2

**CHEVROLET**

- Avalanche 2002 w/ RPO code Y91..... 4
- Avalanche 2003-06 w/ RPO code UQ7 w/o Y91.....5
- Blazer 2000-02 w/ Bose System.....9
- S-10 2000-02 w/ Bose System.....9
- Silverado 2003-06 w/ RPO code UQ7 w/o Y91 .....5
- Suburban 2001-02 w/ RPO code Y91.....4
- Suburban 2000-06 w/ RPO code UQ7 w/o Y91.....5
- Tahoe Z71/Limited 2000 w/ Luxury System.....3
- Tahoe 2001-02 w/ RPO Y91.....4
- Tahoe 2003-06 w/ RPO code UQ7 w/o Y91.....5
- Trailblazer 2002-04 w/ RPO code UQA.....8
- Trailblazer EXT 2003-04 w/ RPO code UQA.....8
- SSR 2003-06 w/ RPO code UQA.....8

**NOTE**

RPO codes tell what options & accessories a vehicle has. RPO codes can be found in the glove box, on the trunk lid or hatch, or on the drivers side door jam near the latch. If you find the RPO code & it does not match one listed above for your particular vehicle, you should not use this harness.



## **GMC**

- Envoy 2000-01 w/ Bose System.....	9
- Envoy 2002-04 w/ RPO code UQA.....	8
- Envoy XL 2003-04 w/ RPO code UQA.....	8
- Jimmy 2000-02 w/ Bose System.....	9
- Sierra 2003-06 w/ RPO code UQ7 w/o Y91.....	5
- Sonoma 2000-02 w/ Bose System.....	9
- Yukon Denali 2000 w/ Luxury System.....	3
- Yukon/XL/Denali 2001-02 w/ RPO code Y91.....	4
- Yukon/XL 2003-06 w/ RPO code UQ7 w/o Y91.....	5

## **HUMMER**

- H2 2004-07 w/ RPO code UQ7 w/o Y91.....	5
---	---

## **ISUZU**

- Ascender 2003-04 w/ RPO code UQA.....	8
---	---

## **OLDSMOBILE**

- Aurora 2001 w/ RPO code U80.....	6
- Aurora 2002-03 w/ RPO code U80.....	7
- Bravada 1998-01 w/ Bose System.....	9
- Bravada 2002-04 w/ RPO code UQA.....	8
- Intrigue 2000-01 w/ RPO code U85.....	6
- Intrigue 2002 w/ RPO code U85.....	7

## **PONTIAC**

- Bonneville 2000-01 w/ RPO code U80.....	6
- Grand Prix 1998-01 w/ RPO code U85.....	6
- Grand Prix 2002-03 w/ RPO code U85.....	7

## **NOTE**

RPO codes tell what options & accessories a vehicle has. RPO codes can be found in the glove box, on the trunk lid or hatch, or on the drivers side door jam near the latch. If you find the RPO code & it does not match one listed above for your particular vehicle, you should not use this harness.



## **AMPLIFIER LOCATIONS**

### **CADILLAC**

- CTS 2003-04 W/ RPO CODE U57.....**BEHIND DRIVERS SIDE REAR PANEL IN TRUNK**
- DEVILLE 2000-04 W/ RPO CODE UX8.....**BEHIND REAR SEAT**
- ESCALADE 2000 W/ LUXURY SYSTEM.....**UNDER CENTER CONSOLE**
- ESCALADE 2002 W/ RPO CODE Y91.....**BEHIND DRIVERS SIDE REAR PANEL**
- ESCALADE EXT 2002 W/ RPO CODE Y91.....**UNDER CENTER CONSOLE**
- SEVILLE 1998-04 W/ RPO CODE UX8.....**BEHIND REAR SEAT**
- SRX 2004 W/ RPO CODE U57.....**BEHIND PASSENGER SIDE REAR PANEL**
- XLR 2004 W/ BOSE SYSTEM.....**ON PASSENGER SIDE FLOOR UNDER CARPET**

### **CHEVROLET**

- AVALANCHE 2002 W/ RPO CODE Y91.....**UNDER CENTER CONSOLE**
- AVALANCHE 2003-04 W/ RPO CODE UQ7 W/O Y91.....**UNDER CENTER CONSOLE**
- BLAZER 2000-02 W/ BOSE SYSTEM.....**UNDER CENTER CONSOLE**
- S-10 2000-02 W/ BOSE SYSTEM.....**UNDER CENTER CONSOLE**
- SIVERADO 2003-04 W/ RPO CODE UQ7 W/O Y91.....**UNDER CENTER CONSOLE**
- SUBURBAN 2001-02 W/ RPO CODE Y91.....**BEHIND DRIVERS SIDE REAR PANEL**
- SUBURBAN 2003-04 W/ RPO CODE UQ7 W/O Y91.....**UNDER CENTER CONSOLE**
- TAHOE Z71/LIMITED 2000 W/ LUXURY SYSTEM.....**UNDER CENTER CONSOLE**
- TAHOE 2001-02 W/ RPO CODE Y91.....**BEHIND DRIVERS SIDE REAR PANEL**
- TAHOE 2003-04 W/ RPO CODE UQ7 W/O Y91.....**UNDER CENTER CONSOLE**
- TRAILBLAZER 2002-04 W/ RPO CODE UQA.....**BEHIND PASSENGER SIDE REAR PANEL**
- TRAILBLAZER EXT 2003-04 W/ RPO CODE UQA.....**BEHIND DRIVERS SIDE REAR PANEL**

### **NOTE**

Many factory amplifiers are now incorporating the crossovers for the tweeters and subwoofers within the amplifier. When bypassing the factory amplifier, you need to cross over those speakers with either passive crossovers or use an after-market AMP with built in crossovers.



# **AMPLIFIER LOCATIONS**

## **GMC**

- ENVOY 2000-01 W/ BOSE SYSTEM..... **BEHIND CENTER CONSOLE**
- ENVOY 2002-04 W/ RPO CODE UQA..... **BEHIND PASSENGER SIDE REAR PANEL**
- ENVOY XL 2002-04 W/ RPO CODE UQA..... **BEHIND DRIVERS SIDE REAR PANEL**
- ENVOY XUV 2004 W/ RPO CODE UQA..... **BEHIND DRIVERS SIDE REAR PANEL**
- JIMMY 2000-02 W. BOSE SYSTEM..... **UNDERNEATH CENTER CONSOLE**
- SIERRA 2003-04 W/ RPO CODE UQ7 W/O Y91..... **UNDERNEATH CENTER CONSOLE**
- SONOMA 2000-02 W/ BOSE SYSTEM..... **UNDERNEATH CENTER CONSOLE**
- YUKON DENALI 2000 W/ LUXURY SYSTEM..... **UNDERNEATH CENTER CONSOLE**
- YUKON/XL/DENALI 2001-02 W/ RPO CODE Y91..... **BEHIND DRIVERS SIDE REAR PANEL**
- YUKON/XL 2003-04 W/ RPO CODE UQ7 W/O Y91..... **UNDERNEATH CENTER CONSOLE**

## **HUMMER**

- H2 2004 W/ RPO CODE UQ7 W/O Y91..... **UNDERNEATH CENTER CONSOLE**

## **ISUZU**

- ASCENDER 2003 W/ RPO CODE UQA..... **BEHIND PASSENGER SIDE REAR PANEL**

## **OLDSMOBILE**

- AURORA 2001 W/ RPO CODE U80..... **BEHIND REAR SEAT**
- AURORA 2002-03 W/ RPO CODE U80..... **BEHIND REAR SEAT**
- BRAVADA 1998-01 W/ BOSE SYSTEM..... **UNDERNEATH CENTER CONSOLE**
- BRAVADA 2002-04 W/ RPO CODE UQA..... **BEHIND PASSENGER SIDE REAR PANEL**
- INTRIGUE 2000-01 W/ RPO CODE U85..... **UNDER REAR DECK**
- INTRIGUE 2002 W/ RPO CODE U85..... **UNDER REAR DECK**

## **PONTIAC**

- BONNEVILLE 2000-01 W/ RPO CODE U80..... **BEHIND REAR SEAT**
- GRAND PRIX 1998-01 W/ RPO CODE U85..... **UNDER REAR DECK**
- GRAND PRIX 2002-03 W/ RPO CODE U85..... **UNDER REAR DECK**

## **NOTE**


Many factory amplifiers are now incorporating the crossovers for the tweeters and subwoofers within the amplifier. When bypassing the factory amplifier, you need to cross over those speakers with either passive crossovers or use an after-market AMP with built in crossovers.

## CADILLAC

- CTS 2003-04 w/ RPO code U57
- Deville 2000-04 w/ RPO code UX8
- SRX 2004 w/ RPO code U57

### NOTE

These wire colors do not follow the EIA/Metra color code

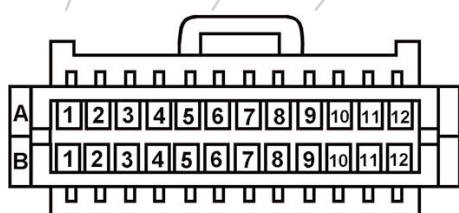

<b>A1</b>		Not Used
<b>A2</b>	White/Red	Left Rear Speaker (-)
<b>A3</b>	White/Blue	Left Rear Speaker (+)
<b>A4</b>	Red	Left Front Speaker (+)
<b>A5</b>	Orange	Left Front Speaker (-)
<b>A6</b>	Gray	Center Speaker (-)
<b>A7</b>	Dark Blue/White	Center Speaker (+)
<b>A8</b>	Dark Blue	Right Front Speaker (-)
<b>A9</b>	Brown/White	Right Front Speaker (+)
<b>A10</b>	Brown	Right Rear Speaker (+)
<b>A11</b>	Blue	Right Rear Speaker (-)
<b>A12</b>		Not Used
<b>B1-B12</b>		Not Used



<b>A</b>		Not Used
<b>B</b>	White	Rear Sub (+)
<b>C-F</b>		Not Used
<b>G</b>	Brown/Yellow	Rear Sub (-)
<b>H</b>		Not Used

## CADILLAC

- Seville 1998-04 w/ RPO code UX8
- XLR 2004 w/ Bose System

### NOTE

These wire colors do not follow the EIA/Metra color code

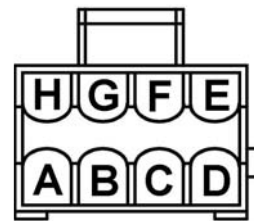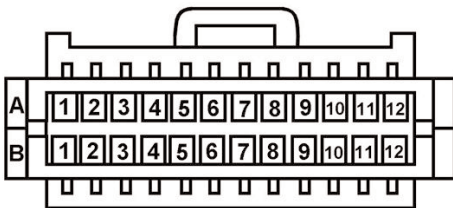

<b>A1</b>		Not Used
<b>A2</b>	White/Red	Left Rear Speaker (+)
<b>A3</b>	White/Blue	Left Rear Speaker (-)
<b>A4</b>	Red	Left Dash Speaker (+)
<b>A5</b>	Orange	Left Dash Speaker (-)
<b>A6</b>	Gray	Center Speaker (-)
<b>A7</b>	Dark Blue/White	Center Speaker (+)
<b>A8</b>	Dark Blue	Right Dash Speaker (-)
<b>A9</b>	Brown/White	Right Dash Speaker (+)
<b>A10</b>	Brown	Right Rear Speaker (-)
<b>A11</b>	Blue	Right Rear Speaker (+)
<b>A12</b>		Not Used
<b>B1-B12</b>		Not Used

<b>A</b>		Not Used
<b>B</b>	White	Rear Sub (+) (Seville Only)
<b>C</b>	Violet	Right Front Speaker (-)
<b>D</b>	Pink	Left Front Speaker (+)
<b>E</b>	Light Green	Left Front Speaker (-)
<b>F</b>	Dark Blue/Pink	Right Front Speaker (+)
<b>G</b>	Brown/Yellow	Rear Sub (-) (Seville Only)
<b>H</b>		Not Used



## CADILLAC

- Escalade 2000 w/ Luxury System

## CHEVROLET



- Tahoe Z71/Limited 2000 w/ Luxury System

## GMC

- Yukon Denali 2000 w/ Luxury System

## NOTE

These wire colors do not follow the EIA/Metra color code

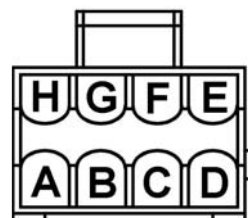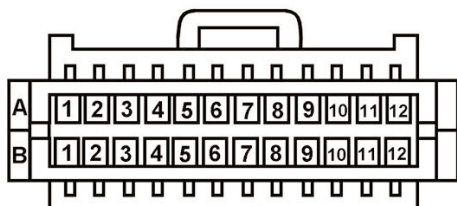

<b>A1-A4</b>	Not Used
<b>A5</b>	Orange Right Rear Headliner Speaker (+)
<b>A6</b>	Gray Right Rear Headliner Speaker (-)
<b>A7</b>	Dark Blue/White Right Front Speaker (-)
<b>A8</b>	Dark Blue Right Front Speaker (+)
<b>A9</b>	Brown/White Right Rear Door (+)
<b>A10</b>	Brown Right Rear Door (-)
<b>A11</b>	Blue Left Front Speaker (-)
<b>A12</b>	Yellow Left Front Speaker (+)

**B1-B12** Not Used

<b>A</b>	Not Used
<b>B</b>	White Left Rear Speaker (-)
<b>C</b>	Violet Sub (+)
<b>D</b>	Pink Left Rear Headliner Speaker (+)
<b>E</b>	Light Green Left Rear Headliner Speaker (-)
<b>F</b>	Dark Blue/Pink Sub (-)
<b>G</b>	Brown/Yellow Left Rear Sub (+)
<b>H</b>	Not Used



## CADILLAC

- Escalade 2002 w/ RPO code Y91
- Escalade EXT 2002 w/ RPO code Y91

## CHEVROLET



- Avalanche 2002 w/ RPO code Y91
- Suburban 2001-02 w/ RPO code Y91
- Tahoe 2001-02 w/ RPO code Y91

## GMC

- Yukon/XL/Denali 2001-02 w/ RPO code Y91

## NOTE

These wire colors do not follow the EIA/Metra color code

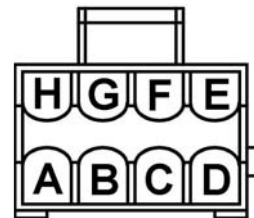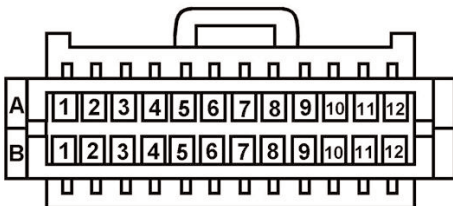

<b>A1-A4</b>	Not Used
<b>A5</b>	Orange Center Speaker (-)**
<b>A6</b>	Gray Center Speaker (+)**
<b>A7</b>	Dark Blue/White Right Front Speaker (-)
<b>A8</b>	Dark Blue Right Front Speaker (+)
<b>A9</b>	Brown/White "D" Pillar Speaker (+)**
<b>A10</b>	Brown "D" Pillar Speaker (-)**
<b>A11</b>	Blue Left Front Speaker (-)
<b>A12</b>	Yellow Left Front Speaker (+)

<b>A</b>	Not Used
<b>B</b>	White Left Rear Speaker (-)
<b>C</b>	Violet Sub (+)
<b>D</b>	Pink Right Rear Speaker (+)
<b>E</b>	Light Green Right Rear Speaker (-)
<b>F</b>	Dark Blue/Pink Sub (-)
<b>G</b>	Brown/Yellow Left Rear Speaker (+)
<b>H</b>	Not Used

**B1-B12** Not Used

### \*\*NOTE

These speakers are not used in the 2002 Escalade EXT and 2002 Avalanche

## CHEVROLET

- Avalanche 2003-04 w/ RPO code UQ7 w/o Y91
- Silverado 2003-04 w/ RPO code UQ7 w/o Y91
- Suburban 2003-04 w/ RPO code UQ7 w/o Y91
- Tahoe 2003-04 w/ RPO code UQ7 w/o Y91

## GMC



- Sierra 2003-04 w/ RPO code UQ7 w/o Y91
- Yukon/XL 2003-04 w/ RPO code UQ7 w/o Y91

## HUMMER

- H2 2004 w/ RPO code UQ7 w/o Y91

## NOTE

These wire colors do not follow the EIA/Metra color code

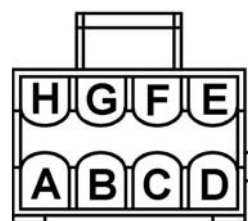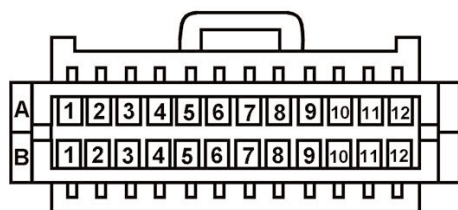

<b>A1-A4</b>	Not Used
<b>A5</b>	Orange Left Rear Speaker (+)
<b>A6</b>	Gray Left Rear Speaker (-)
<b>A7</b>	Dark Blue/White Right Rear Speaker (+)
<b>A8</b>	Dark Blue Right Rear Speaker (-)
<b>A9</b>	Brown/White Left Front Speaker (+)
<b>A10</b>	Brown Left Front Speaker (-)
<b>A11</b>	Blue Right Front Speaker (+)
<b>A12</b>	Yellow Right Front Speaker (-)

**B1-B12** Not Used

<b>A</b>	Not Used
<b>B</b>	White Left Sub (+)
<b>C</b>	Violet Right Sub (+)
<b>D-E</b>	Not Used
<b>F</b>	Dark Blue/Pink Right Sub (-)
<b>G</b>	Brown/Yellow Left Sub (-)
<b>H</b>	Not Used

## OLDSMOBILE


- Aurora 2001 w/ RPO code U80
- Intrigue 2000-01 w/ RPO code U85

## PONTIAC

- Bonneville 2000-01 w/ RPO code U80
- Grand Prix 1998-01 w/ RPO code U85


## NOTE

These wire colors do not follow the EIA/Metra color code

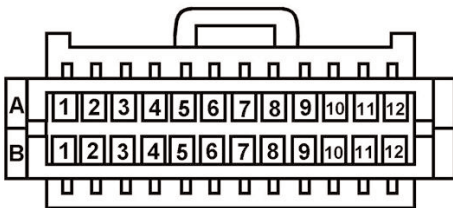

<b>A1-A6</b>	Not Used
<b>A7</b>	Dark Blue/White Right Front Speaker (-)
<b>A8</b>	Dark Blue Right Front Speaker (+)
<b>A9</b>	Brown/White Right Rear Speaker (+)
<b>A10</b>	Brown Right Rear Speaker (-)
<b>A11</b>	Blue Left Front Speaker (-)
<b>A12</b>	Yellow Left Front Speaker (+)

**B1-B12** Not Used

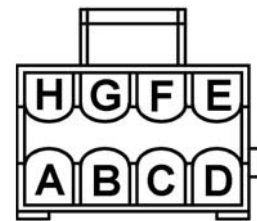

<b>A</b>	Not Used
<b>B</b>	White Left Rear Sub (-)
<b>C</b>	Violet Left Rear Sub (+)
<b>D</b>	Pink Right Rear Sub (+)
<b>E</b>	Light Green Right Rear Sub (-)
<b>F</b>	Dark Blue/Pink Left Rear Sub (-)
<b>G</b>	Brown/Yellow Left Rear Sub (+)
<b>H</b>	Not Used

## OLDSMOBILE



- Aurora 2002-03 w/ RPO code U80
- Intrigue 2002 w/ RPO code U85

## PONTIAC

- Grand Prix 2002-03 w/ RPO code U85

## NOTE

These wire colors do not follow the EIA/Metra color code

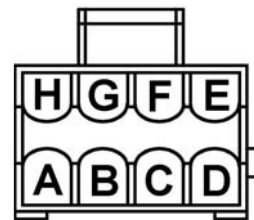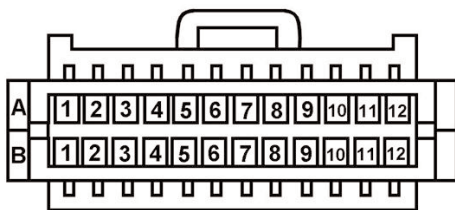

<b>A1-A4</b>	Not Used
<b>A5</b>	Orange Right Rear Speaker (+)
<b>A6</b>	Gray Right Rear Speaker (-)
<b>A7</b>	Dark Blue/White Left Rear Speaker (+)
<b>A8</b>	Dark Blue Left Rear Speaker (-)
<b>A9</b>	Brown/White Right Front Speaker (+)
<b>A10</b>	Brown Right Front Speaker (-)
<b>A11</b>	Blue Left Front Speaker (+)
<b>A12</b>	Yellow Left Front Speaker (-)

**B1-B12** Not Used

<b>A</b>	Not Used
<b>B</b>	White Right Rear Sub (-)
<b>C</b>	Violet Left Rear Sub (-)
<b>D-E</b>	Not Used
<b>F</b>	Dark Blue/Pink Left Rear Sub (+)
<b>G</b>	Brown/Yellow Right Rear Sub (+)
<b>H</b>	Not Used

## CHEVROLET

- Trailblazer 2002-04 w/ RPO code UQA
- Trailblazer EXT 2003-04 w/ RPO code UQA

## GMC

- Envoy 2002-04 w/ RPO code UQA
- Envoy XL 2002-04 w/ RPO code UQA
- Envoy XUV 2004 w/ RPO code UQA

## ISUZU



- Ascender 2003 w/ RPO code UQA

## OLDSMOBILE

- Bravada 2002-04 w/ RPO code UQA

## NOTE

These wire colors do not follow the EIA/Metra color code

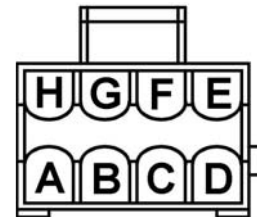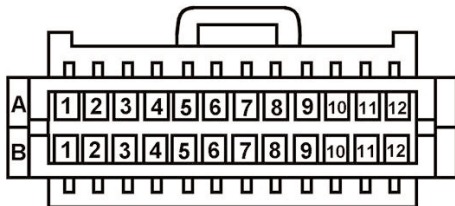

<b>A1</b>	Not Used
<b>A2</b>	White/Red Left Rear Speaker (+)
<b>A3</b>	White/Blue Left Rear Speaker (-)
<b>A4</b>	Red Left Dash Speaker (+)
<b>A5</b>	Orange Left Dash Speaker (-)
<b>A6-A7</b>	Not Used
<b>A8</b>	Dark Blue Right Dash Speaker (-)
<b>A9</b>	Brown/White Right Dash Speaker (+)
<b>A10</b>	Brown Right Rear Speaker (-)
<b>A11</b>	Blue Right Rear Speaker (+)
<b>A12</b>	Not Used
<b>B1-B12</b>	Not Used

<b>A-B</b>	Not Used
<b>C</b>	Violet Right Front Speaker (-)
<b>D</b>	Pink Left Front Speaker (+)
<b>E</b>	Light Green Left Front Speaker (-)
<b>F</b>	Dark Blue/Pink Right Front Speaker (+)
<b>G-H</b>	Not Used

## CHEVROLET

- Blazer 2000-02 w/ Bose System (2002 models do not include double DIN radios)
- S-10 2000-02 w/ Bose System (2002 models do not include double DIN radios)

## GMC


- Envoy 2000-01 w/ Bose System
- Jimmy 2000-02 w/ Bose System (2002 models do not include double DIN radios)
- Sonoma 2000-02 w/ Bose System (2002 models do not include double DIN radios)

## OLDSMOBILE

- Bravada 1998-01 w/ Bose System


## NOTE

These wire colors do not follow the EIA/Metra color code

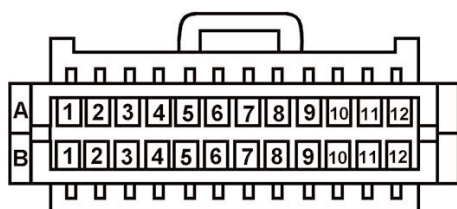

<b>A1-A4</b>	Not Used
<b>A5</b>	Orange Left Rear Speaker (-)
<b>A6</b>	Gray Left Rear Speaker (+)
<b>A7</b>	Dark Blue/White Right Front Tweeter (-)
<b>A8</b>	Dark Blue Right Front Tweeter (+)
<b>A9</b>	Brown/White Right Rear Speaker (+)
<b>A10</b>	Brown Right Rear Speaker (-)
<b>A11</b>	Blue Left Front Tweeter (-)
<b>A12</b>	Yellow Left Front Tweeter (+)


**B1-B12** Not Used

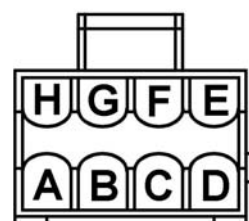

<b>A-B</b>	Not Used
<b>C</b>	Violet Left Front Speaker (+)
<b>D</b>	Pink Right Front Speaker (+)
<b>E</b>	Light Green Right Front Speaker (-)
<b>F</b>	Dark Blue/Pink Left Front Speaker (-)
<b>G-H</b>	Not Used





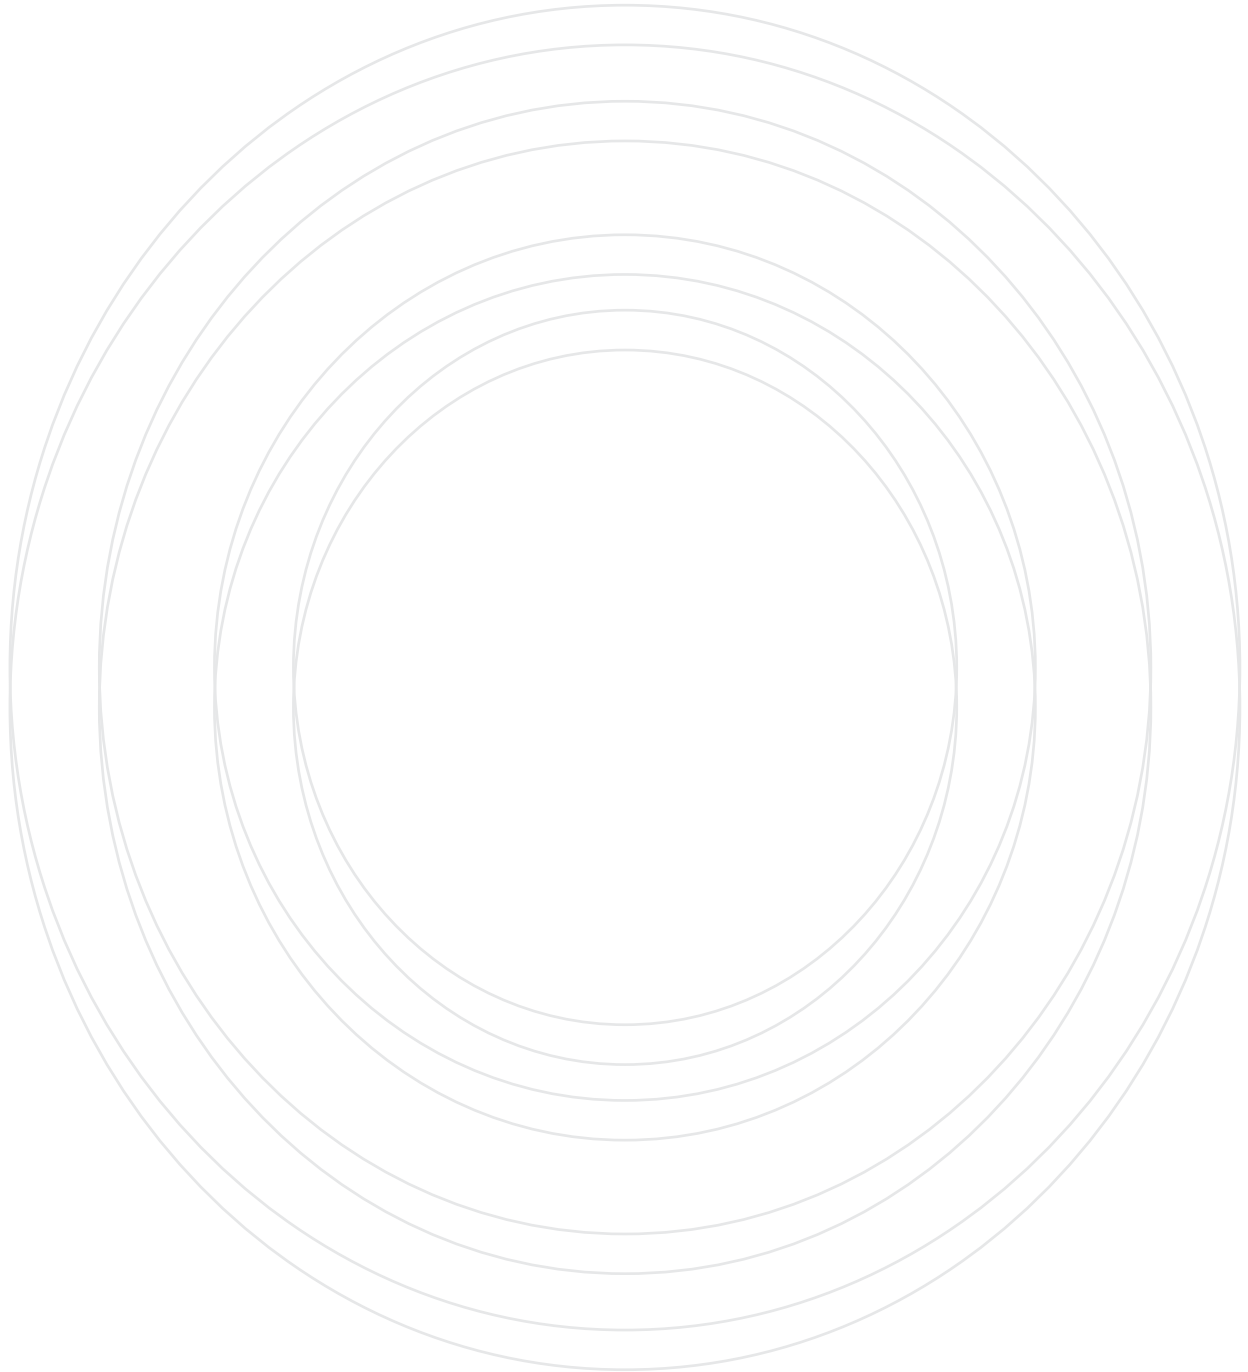

**1-800-221-0932**



**[www.metraonline.com](http://www.metraonline.com)**