



## INSTALLATION INSTRUCTIONS FOR PART 99-5806

**Ford Focus  
2000-2004**



**Mercury Cougar  
1999-2002**



### KIT FEATURES

- ISO DIN head unit provision with pocket
- DIN head unit provision with pocket

# 99-5806

### KIT COMPONENTS

A) Radio Housing | B) ISO Brackets | C) Trim Plate

A



B



C



### TOOLS REQUIRED:

86-5618 Head Unit Removal Keys



**1-800-221-0932**



**www.metraonline.com**

© COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION



**99-5806**

**TABLE OF CONTENTS**

**2000-2004 Ford Focus**

**1999-2002 Mercury Cougar**

**Dash Disassembly ..... 1**

**Kit Assembly ..... 2**

**Head Unit Provision Assembly ..... 3**

**Final Assembly ..... 4**

**Notes..... 5-6**



**KNOWLEDGE IS POWER**

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto [www.installerinstitute.com](http://www.installerinstitute.com) or call 800-354-6782 for more information and take steps toward a better tomorrow.



**99-5806**

**2000-2004 FORD FOCUS**



**1999-2002 MERCURY COUGAR**



**DASH DISASSEMBLY**

- 1 Using Metra's 86-5618, pull the factory head unit from the dash and disconnect the wiring.



**99-5806**

**KIT ASSEMBLY**


### **DIN HEAD UNIT PROVISIONS:**

- 1** Slide the DIN cage into the **Radio Housing** and secure by bending the metal locking tabs down.
- 2** Slide the after-market head unit into the cage and secure. Snap the Trim plate into the Radio Housing.



### **ISO DIN HEAD UNIT PROVISIONS:**


- 1** Mount the ISO Brackets to the head unit with the screws supplied with the unit.
- 2** Slide the head unit into the radio opening until the side clips engage. Snap the Trim plate into the Radio Housing.

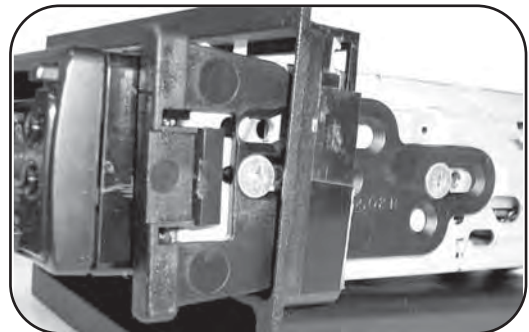

**NOTE:** When reinstalling the screws into the bottom of the 99-5806 use the (2) supplied Phillips screws instead of the factory screws removed in step 5 in Dash Disassembly.



**99-5806**

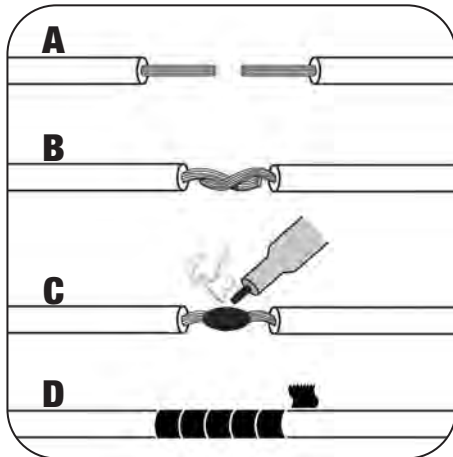

- A) Strip wire ends back 1/2"**
- B) Twist ends together**
- C) Solder**
- D) Tape**

**FINAL ASSEMBLY**

- 1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making the connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit)
  
- 2** Re-connect the negative battery terminal and test the unit for proper operation.
  
- 3** Snap radio / kit assembly into the factory radio opening.





**99-5806**

**NOTES**

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

**INST995806**



**1-800-221-0932**



**[www.metraonline.com](http://www.metraonline.com)**

© COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION REV.08-07-09