

INSTALLATION INSTRUCTIONS FOR PART 99-9304

APPLICATIONS

BMW

1 Series 2008 / 3 Series 2006-08 (Without Factory Navigation)

99-9304

KIT FEATURES

• DIN Head Unit Provision

KIT COMPONENTS

A) Radio Housing



TOOLS REQUIRED:

Small Flat Blade Screwdriver • Phillips Screwdriver







TABLE OF CONTENTS

Dash Disassembly: pg. 1 Kit Assembly: pg. 2 Final Assembly: pg. 3



71-800-221-0932



www.metraonline.com


TABLE OF CONTENTS


Dash Disassembly	 	
Kit Assembly	 	2
Final Accomhly		2



BMW 1 Series 2008 3 Series 2006-08

- Disconnect the negative battery terminal to prevent an accidental short circuit.
- Carefully unclip and remove climate controls. (Figure A)
- Remove (2) Phillips screws exposed at bottom of radio and remove. (Figure B)

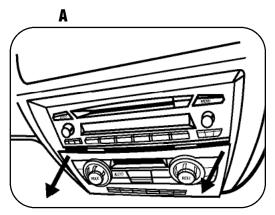

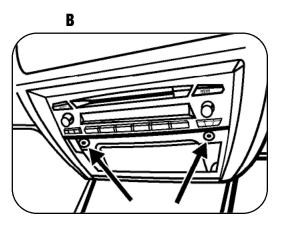





DIN HEAD UNIT PROVISION


- 1 Screw the 99-9304 housing into the dash opening instead of the factory radio. (Figure A)
- 2 Slide the DIN cage into the space in the 99-9304 and secure by bending the metal locking tabs outward.

 (Figure B)
- Slide the aftermarket head unit into the DIN cage until secure.(Figure C)

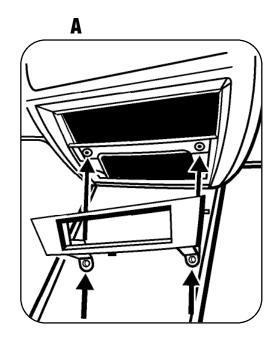

KIT ASSEMBLY

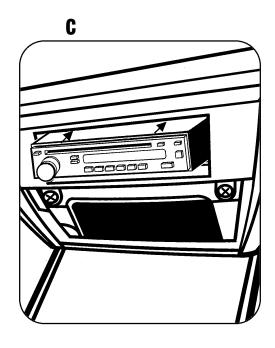

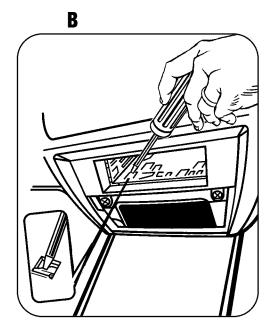

FINAL ASSEMBLY

- 1 At this time Metra does not offer a wiring harness or interface for this vehicle.
- 2 Re-connect the negative battery terminal and test the unit for proper operation.
- 3 Reassemble radio and dash assemblies in reverse order of disassembly.



NOTES



NOTES

INST99-9304