


### 1959 Chevrolet Impala

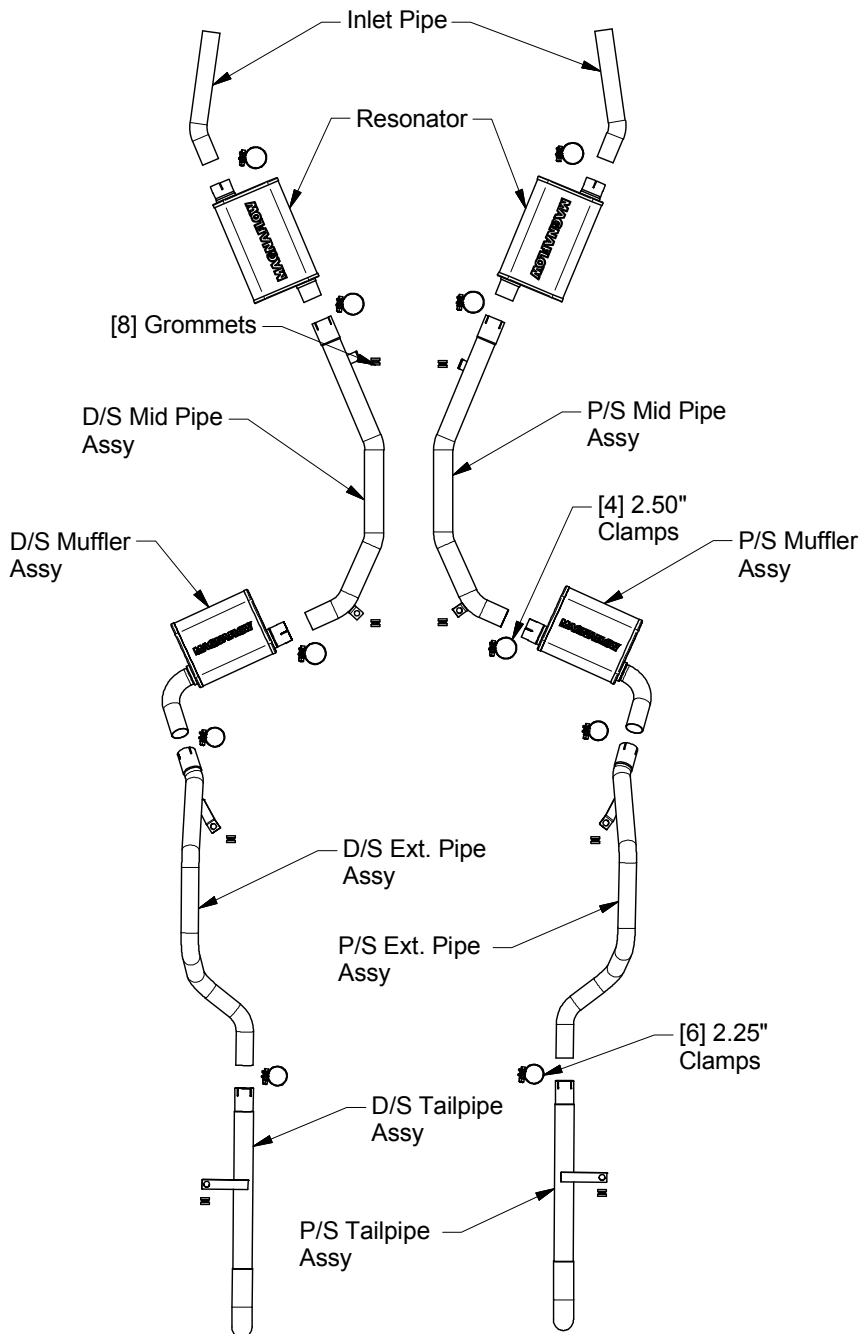

**Warning:** When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

**Step 1:** (Carefully read all instructions before installation) Remove the existing exhaust system from the exhaust manifolds / headers. Some systems may need to be cut for removal.

**Step 2:** Begin installation of the new system by attaching the Inlet Pipes to your chosen outlet (Header/manifold). To install the Resonators and Mid Pipe Assemblies it is necessary to attach the hangers to the vehicle using existing holes in the factory frame rails with the supplied (blue) grommets and fasteners. Moving rearward install the remaining pieces in a similar fashion using the supplied hardware into existing holes in the frame rails again with supplied grommets/fasteners.

**Step 3:** With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

**Step 4:** Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (approximately 40ft-lbs for band clamps). Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

**\*\* Magnaflow Performance Exhaust recommends professional installation on all their products**