


INSTALLATION INSTRUCTIONS FOR ACURA INTEGRAS

1994-2001 ACURA INTEGRA - 4Cyl 1.8L, 2DR / 4DR

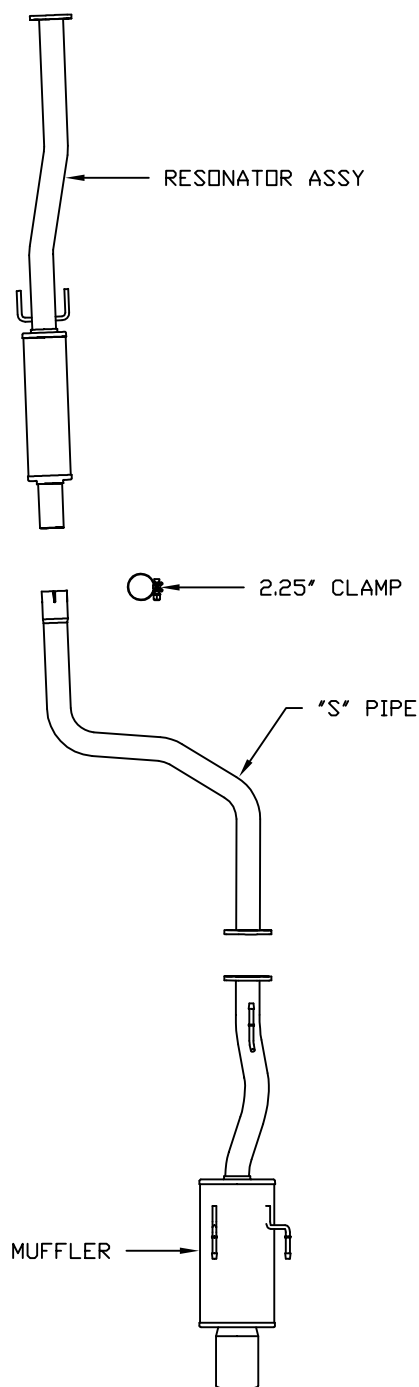

Warning: When working on under or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure safe work area. Serious injury or death could occur if safety measures are not followed.

Step 1: (Carefully read all instructions before installation) Unbolt the OEM muffler from the extension pipe just in front of the rear control arm. Remove the muffler from the OEM rubber insulators. Do not damage the OEM rubber insulators, as they will be re-used to mount the new system. Unbolt the front resonator assembly from the catalytic converter. Do not discard the OEM fasteners, as they will be re-used to mount the new system.

Step 2: Starting at the catalytic converter, install the resonator assembly using the OEM fasteners. Leave all components loose for final adjustment. Working rearward, install the "S" extension pipe and the muffler using the supplied gasket, fasteners, and U-clamp.

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust tip and any body panels to avoid heat related body damage or fire.)

Step 4: Once a final position is chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamp must be VERY tight to properly align the pipes and prevent leaks (Approximately 65ft-lbs.) Inspect all fasteners after 25-50 miles of operation and re-tighten if necessary.

*MAGNAFLOW Performance Exhaust recommends professional installation on all their products

Technical support: 1-800-959-9226 ext. 4500

MAGNAFLOW Performance Exhaust - 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688