

2.50" CLAMP -


2.50" CLAMP -

 $\bigcirc$ 

TAILPIPE

## INSTALLATION INSTRUCTIONS FOR 15838

## 2004- CHEVY SILVERADO SS - V8 6.0L, EC/SB

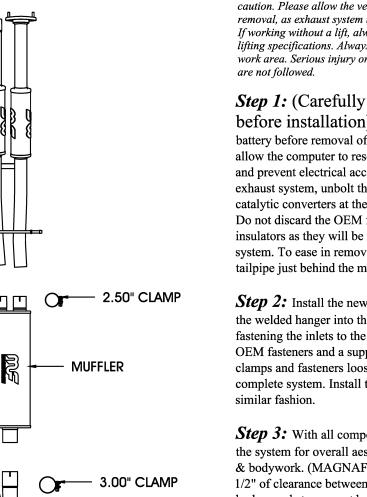

**Warning**: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.


## Step 1: (Carefully read all instructions

before installation) Disconnect the vehicle's battery before removal of the OEM exhaust. This will allow the computer to reset itself with the new system, and prevent electrical accidents. To remove the OEM exhaust system, unbolt the muffler inlets from the catalytic converters at the clamp and flange as shown. Do not discard the OEM fasteners or damge the rubber insulators as they will be reused to mount the new system. To ease in removal of the system, cut the tailpipe just behind the muffler.

**Step 2:** Install the new resonator assembly by fitting the welded hanger into the rubber insulator and by fastening the inlets to the catalytic converter using the OEM fasteners and a supplied 2.50" clamp. Leave all clamps and fasteners loose for final adjustment of the complete system. Install the muffler and tailpipe in a similar fashion.

**Step 3:** With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

**Step 4:** Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 40ft-lbs.) Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

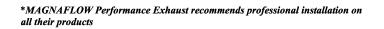

Technical support: 1-800-959-9226 ext. 4500