

MSD IGNITION INSTALLATION INSTRUCTIONS

DIS-2 Harness to Dodge/Mitsubishi Coil Packs PN 8883

Important: Review the DIS-2 instructions before attempting this installation.

Parts Included:

1 – Harness

The MSD PN 8883 Harness will allow you to install a DIS-2 ignition control to a Dodge/Mitsubishi coil pack for a splice-free installation (Figure 1).

INSTALLATION

1. Disconnect the factory harness connector from the coil pack.
2. Connect the factory connector to the MSD harness.
3. Connect the opposite side of the MSD harness to the coil pack.
4. Crimp the bare end of the wires from the DIS-2 Harness into the butt connectors on the Harness.
Do not over-crimp the wires!
5. Heat sensitive connectors are used so be sure to apply enough heat to properly shrink the connector over the wire.

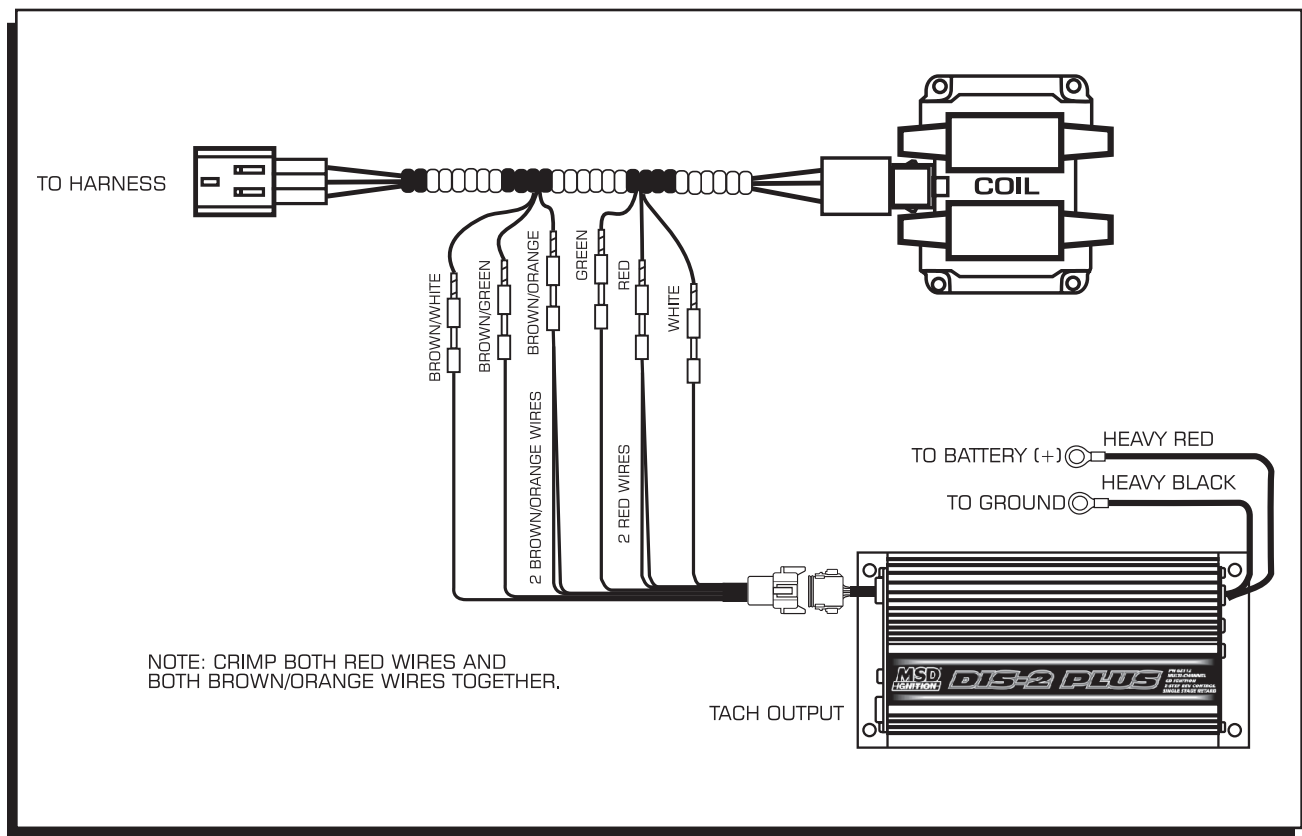


Figure 1 Installing an MSD DIS-2 with Harness PN 8883.

