


# HOW TO INSTALL CARPETED DOOR PANELS



## WARNING

Failure to read and follow instruction sheet voids any claims or returns to manufacturer or dealer.


### TOOLS

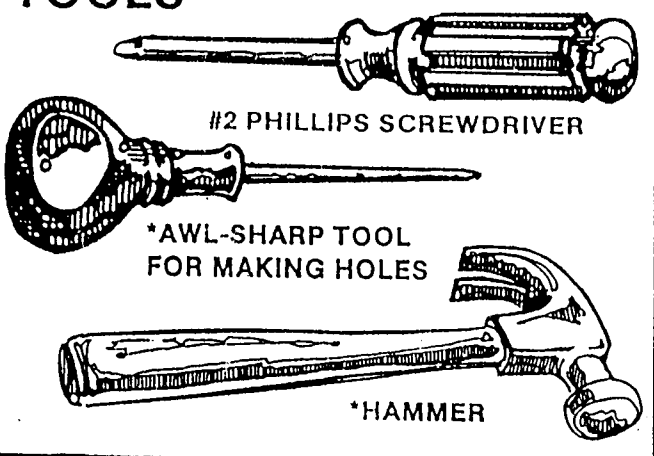

#2 PHILLIPS SCREWDRIVER

\*AWL-SHARP TOOL FOR MAKING HOLES


\*HAMMER

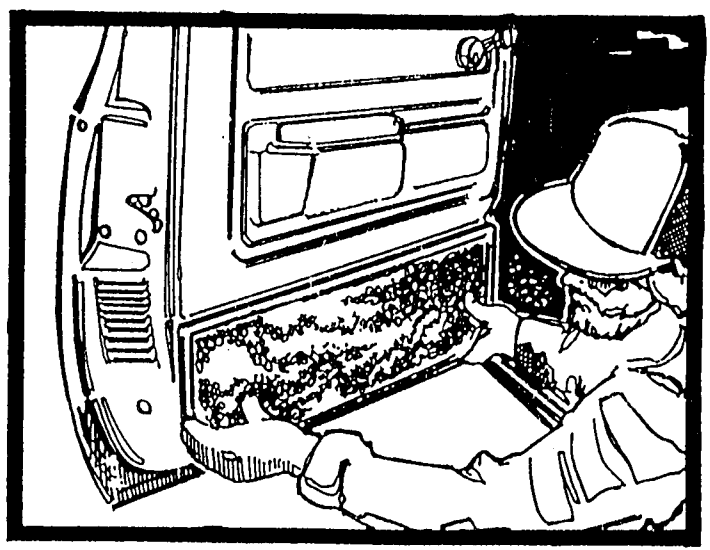

STEP 1  
LOCATE CARPETED LOWER DOOR PANEL



STEP 2  
USE PRE-MADE HOLES AS GUIDE, WITH AWL MAKE HOLES FOR SCREWS

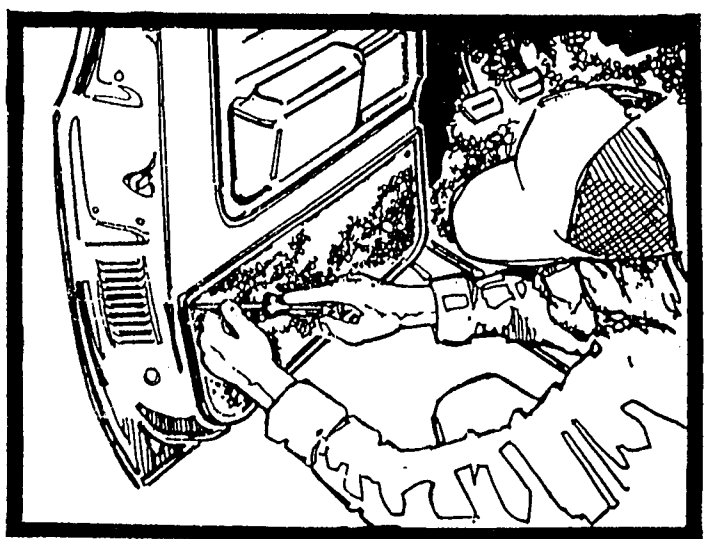

STEP 3  
WITH SCREWS SUPPLIED USE #2 PHILLIPS SCREWDRIVER. INSTALL SCREWS. REPEAT STEPS 1, 2, AND 3 ON OTHER DOOR.